

PROGRAMMING MANUAL

PROGRAMMABLE HIGH PRECISION DC POWER SUPPLY PPX SERIES



■ About Brands and Trademarks

“TEXIO” is the product brand name of our industrial electronic devices.

All company names and product names mentioned in this manual are the trademark or the registered trademark of each company or group in each country and region.

■ About the Instruction Manual

Permission from the copyright holder is needed to reprint the contents of this manual, in whole or in part. Be aware that the product specifications and the contents of this manual are subject to change for the purpose of improvement.

The latest version of the instruction manual is posted on our website (<https://www.texio.co.jp/download/>).

In order to be environmentally friendly and reduce waste, we are gradually discontinuing the use of paper or CD manuals that come with our products.

Even if there is a description in the instruction manual that the product is included, it may not be included.

Table of Contents

SAFETY INSTRUCTIONS 4

GETTING STARTED 7

 PPX Series Overview..... 8

 Appearance..... 11

 Theory of Operation..... 19

REMOTE CONTROL..... 29

 Command Syntax 70

 Command List 73

 Status Register Overview..... 135

 Error List..... 145

PPX Series Default Settings..... 152

SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow during operation and storage. Read the following before any operation to insure your safety and to keep the instrument in the best possible condition.

Safety Symbols

These safety symbols may appear in this manual or on the instrument.



WARNING

Warning: Identifies conditions or practices that could result in injury or loss of life.



CAUTION

Caution: Identifies conditions or practices that could result in damage to the PPX or to other properties.



DANGER High Voltage



Attention Refer to the Manual



Protective Conductor Terminal



Earth (ground) Terminal



Do not dispose electronic equipment as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased.

Safety Guidelines

General Guideline



CAUTION

- Do not place any heavy object on the PPX.
- Avoid severe impact or rough handling that leads to damaging the PPX.
- Do not discharge static electricity to the PPX.
- Use only mating connectors, not bare wires, for the terminals.
- Do not disassemble the PPX unless you are qualified.

Power Supply



CAUTION

- AC Input Voltage:
100Vac/120Vac/220Vac/240Vac $\pm 10\%$,
50Hz/60Hz, single phase
- Frequency: 47Hz to 63Hz
- Before connecting the power plug to an AC line outlet, make sure the voltage selector switches of the bottom panel in the correct position.
- Disconnect power cord and test leads before replacing fuse.
- The fuse specification is as following:

| FUSE | LINE |
|----------------|----------------|
| 250V T3.15A | 100V~ 120V~ |
| 250V T1.6A | 220V~ 240V~ |

- To avoid electrical shock connect the protective grounding conductor of the AC power cord to an earth ground.

Cleaning the PPX

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemicals containing harsh material such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: 20%~ 80% (no condensation)
- Altitude: < 2000m
- Temperature: 0°C to 40°C

(Pollution Degree) EN61010-1:2010 specifies the pollution degrees and their requirements as follows. The PPX falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Temperature: -20°C to 70°C
- Relative Humidity: 20 to 85%(no condensation)

Disposal



Do not dispose this instrument as unsorted municipal waste. Please use a separate collection facility or contact the supplier from which this instrument was purchased. Please make sure discarded electrical waste is properly recycled to reduce environmental impact.

GETTING STARTED

This chapter describes the power supply in a nutshell, including its main features and front / rear panel introduction. After going through the overview, please read the theory of operation to become familiar with the operating modes, protection modes and other safety considerations.



PPX Series Overview

Series lineup

The PPX series consists of 12 models, covering a number of different current, voltage and power capacities:

Equipped with various interfaces as standard,

G type also supports GP-IB control.

| Model name | Operation Voltage | Operation Current | Rated Power | GP-IB |
|------------|-------------------|-------------------|-------------|-------|
| PPX10-5 | 0-10V | 0-5A | 50W | — |
| PPX20-2 | 0-20V | 0-2A | 40W | — |
| PPX20-5 | 0-20V | 0-5A | 100W | — |
| PPX36-1 | 0-36V | 0-1A | 36W | — |
| PPX36-3 | 0-36V | 0-3A | 108W | — |
| PPX100-1 | 0-100V | 0-1A | 100W | — |
| PPX10-5G | 0-10V | 0-5A | 50W | ○ |
| PPX20-2G | 0-20V | 0-2A | 40W | ○ |
| PPX20-5G | 0-20V | 0-5A | 100W | ○ |
| PPX36-1G | 0-36V | 0-1A | 36W | ○ |
| PPX36-3G | 0-36V | 0-3A | 108W | ○ |
| PPX100-1G | 0-100V | 0-1A | 100W | ○ |

Main Features

| | |
|-----------|---|
| Features | <ul style="list-style-type: none">• 2.4" TFT-LCD Panel.• Preset memory function.• Output ON/OFF delay function.• CV, CC priority start function. (prevents overshoot with output ON)• Adjustable voltage and current slew rates.• Bleeder circuit ON/OFF setting. (to prevent over-discharging of batteries)• OVP, OCP, AC Alarm and OTP protection.• Supports test sequence.• Web server monitoring and control. (The function is activated when connecting to LAN Interface)• Analog monitor output.• Remote sensing to compensate for voltage drop in load leads.• Support K type thermocouple temperature measurement.• With 4 measuring currents and Manual / Auto shift function. |
| Interface | <ul style="list-style-type: none">• Built-in USB, RS-232C/485 and LAN interface.• External analog control function.• GP-IB interface.(Only G Type) |

Accessories


Before using the PPX power supply unit, check the package contents to make sure all the standard accessories are included.



| Standard Accessories | Part number | Description | Qty. |
|----------------------|-------------|--|------|
| | GTL-104A | Test leads for PPX10-5/PPX20-5/PPX36-3 (Binding Posts Terminal), 1m, 10A | 1 |
| | GTL-105A | Test leads for PPX20-2/PPX36-1, 1m, 3A | 1 |
| | | Short Bar (Binding Posts Terminal) | 1 |
| | GTL-203A | Test leads for PPX100-1, 1m, 3A | 1 |
| | GTL-201A | Ground lead for Jack Terminal | 1 |
| | | Power Cord | 1 |








| Optional Accessories | Part number | Description |
|----------------------|-------------|--|
| | GRA-441-J | Rack for PPX (JIS) |
| | GRA-441-E | Rack for PPX (EIA) |
| | GTL-205A | Temperature probe adaptor with thermocouple K type |
| | GTL-246 | USB Cable (USB 2.0 Type A- Type B Cable, 4P) |
| | GTL-258 | GP-IB Cable, 2000mm |
| | GTL-259 | RS-232C cable with DB9 connector to RJ45, repeater unit, terminal unit |
| | GTL-260 | RS-485 cable with DB9 connector to RJ45, repeater unit, terminal unit |
| | GTL-261 | RS-485 master cable , repeater unit, terminal unit |
| | GTL-262 | RS-485 slave cable |

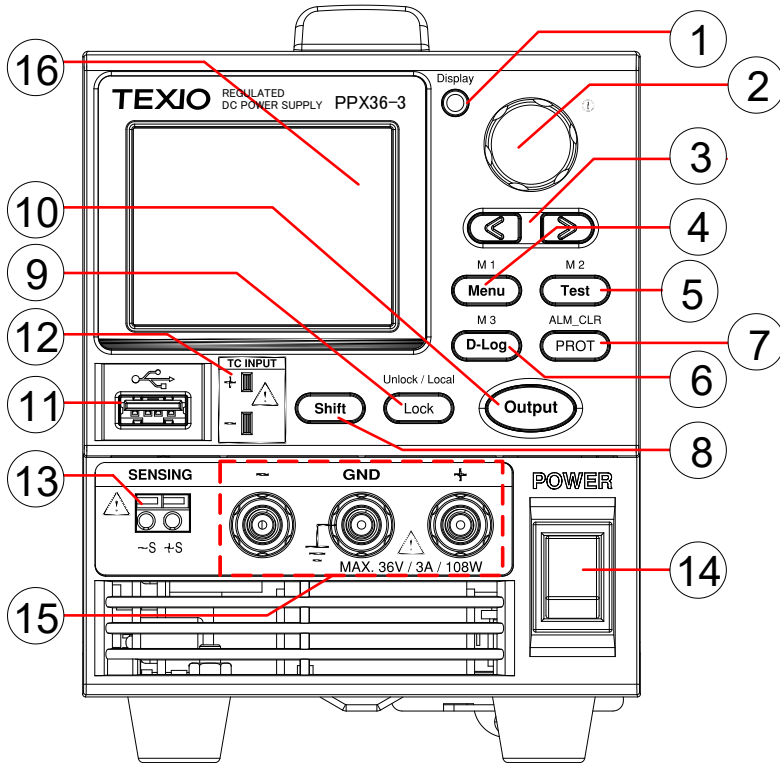Appearance


Front Panel



- | | |
|-------------------|--|
| 1. Display Button |  <p>Display</p> <p>Used to switch among 4 different display modes.</p> |
| 2. Knob Key |  <p>Used to navigate menu, and to configure or confirm voltage/current/time values, among others. Also, the indicator on the upper-right corner shows current state and power mode.</p> |


3. Left/Right Arrow Keys  Used to select a parameter number in the Function settings. Also the left arrow key can be used as backspace.
4. Menu Button  M1
M1 Button (+Shift) Used to recall the M1 setup.
5. Test Button  M2
M2 Button (+Shift) Used to recall the M2 setup.
6. D-Log Button  M3
M3 Button (+Shift) Used to recall the M3 setup.
7. PROT Button  ALM_CLR
ALM_CLR Button (+Shift) Used to release protection functions that have been activated. The tripped protection alarms include the following: OVP Alarm, OCP Alarm, OTP Alarm, AC Alarm, Sense Alarm, WDOG Alarm, Ah CAP Alarm, Wh CAP Alarm, TEMP Short Alarm, TEMP Monitor Alarm.
8. Shift Button  Used to enable the functions that are written in blue characters above certain buttons.
9. Lock Button  Unlock / Local
Unlock/Local Button (+Shift) Used to unlock the front panel buttons or it switches to local mode.

10. Output Button




Used to turn the output on or off.

11. USB A Port




USB A port for data transfer, loading test scripts and firmware update.

12. TC Input



Terminal to connect the K type thermocouple cable for temperature measurement.


13. Sensing Terminal



Terminal to connect the sensing cables, which compensate voltage drop occurred in load leads.


-S +S

14. Power Switch




Used to turn the power on/off.

15. Output terminal




DC output terminal for PPX is Jack Terminal.

PPX100-1 the max. output is 100V/1A/100W




DC output terminal for PPX is Binding Posts Terminal.

PPX10-5 the max. output is 10V/5A/50W

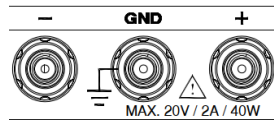


DC output terminal for PPX is Binding Posts Terminal.

PPX20-2 the max. output is 20V/2A/40W




DC output terminal for PPX is Binding Posts Terminal.

PPX20-5 the max. output is 20V/5A/100W

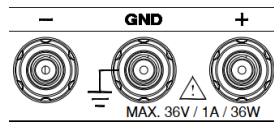

DC output terminal for PPX is Binding Posts Terminal.

PPX36-1 the max. output is 36V/1A/36W




DC output terminal for PPX is Binding Posts Terminal.

PPX36-3 the max. output is 36V/3A/108W

- 16 Display Area The display area shows set values, output values and parameter settings.


Display Area

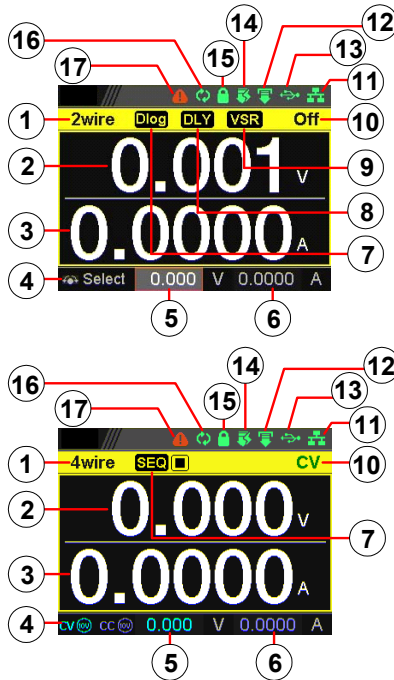

- | | |
|--------------------------|--|
| 1. 2Wire/4Wire | 2-wire or 4-wire indicator. |
| 2. Voltage Meter | Displays the voltage. |
| 3. Current Meter | Displays the current. |
| 4. V/A Set Guidance | The scrolling symbol indicates to select between V and A set via scrolling knob key. |
| External CC & CV Control | When the external CC or CV control is activated, the indicator(s) will be shown. |
| 5. V Set | Manually sets voltage. |
| 6. I(A) Set | Manually sets current. |
| 7. Dlog Icon | When Data Logger is enabled, the icon will be shown accordingly. Note that when SEQ appears, the icon will be faded out. |
| SEQ | When Sequence function is turned On, the icon will be shown accordingly. |


-
- | | |
|-------------------------------------|---|
| 8. DLY Icon | When Output On/Off Dly is enabled, the icon will be shown accordingly. Note that when SEQ appears, the icon will be faded out. |
| 9. VSR/ISR Icon | When CV/CC Slew Rate Priority (CVLS/CCLS) is activated, the icon will be shown. Note that when SEQ appears, the icon will be faded out. |
| 10. CC/CV/UR indicator | It shows when constant voltage or constant current mode is ongoing. However, when output is unregulated, which means neither in CV mode nor CC mode, it shows UR instead. If it is not under power output, it simply shows Off. |
| 11. LAN Indicator | When PPX series connects to LAN network, the icon will be shown. |
| 12. Remote Control Indicator | When remote control (USB/LAN/GP-IB, UART) is underway, the icon will be shown. |
| 13. USB Indicator | When USB disk is inserted into the front panel of PPX series, the icon will be shown. |
| 14. External Output Indicator | When external output enable is turned On, the icon will be shown. |
| 15. Lock Indicator | When the lock mode is activated, the icon will be shown. |
| 16. Communication Monitor Indicator | When communication monitor is enabled, the icon will be shown. |
| 17. Error Indicator | When error occurs from command of remote control, the icon will be shown. |

Rear Panel

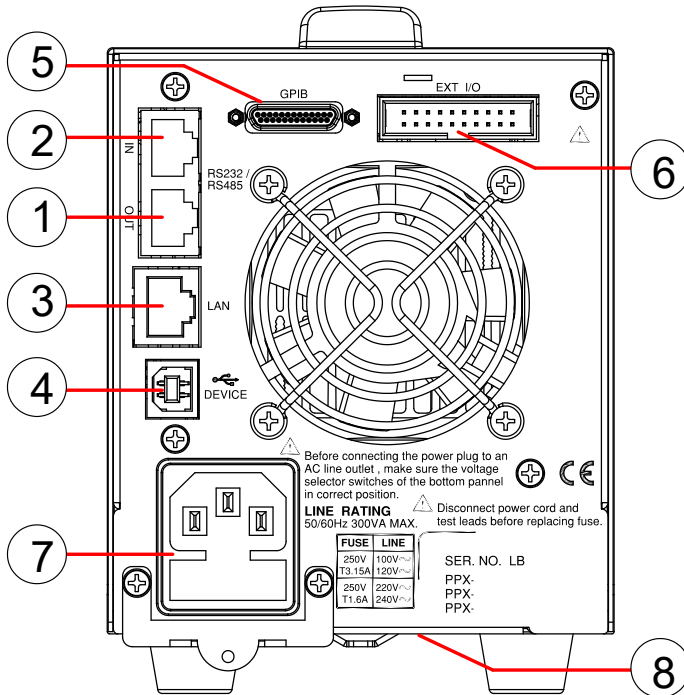

- | | |
|---------------|---|
| 1. Remote-OUT | RJ-45 connector that is used to daisy chain power supplies with the Remote-IN port to form a communication bus. |
| 2. Remote-IN | Two different types of cables can be used for RS-232C or RS485-based remote control. GTL-259: RS-232C cable with DB9 connector kit. GTL-260: RS-485 cable with DB9 connector kit. |
| 3. LAN | Ethernet port for controlling the PPX remotely |
| 4. USB | USB port for controlling the PPX remotely. |
| 5. GP-IB | GP-IB port for controlling the PPX remotely. (Only G Type) |
| 6. EXT I/O | External analog remote control connector. |

7. Line Voltage AC inlet.
Input
8. AC Select
Switch

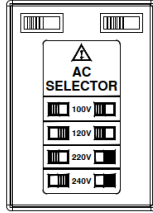

The AC selector is located at the bottom side of the unit. Switch Voltage to 100V, 120V, 220V or 240V.

Theory of Operation

The theory of operation chapter describes the basic principles of operation, protection modes and important considerations that must be taken into account before use.

Operating Description

Background

The PPX power supplies are regulated DC power supplies with a stable voltage and current output. These operate within a switch automatically between constant voltage and constant current according to changes in the load.



Suitable supply cord set for use with the equipment:

- Mains plug: shall be national approval
- Mains connector: C13 type
- Cable:
 1. Length of power supply cord: less than 3m
 2. Cross-section of conductors: at least 0.75mm²
 3. Cord type: shall meet the requirements of IEC 60227 or IEC 60245 (e.g.: H05VV-F, H05RN-F)



Caution

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

CC and CV Mode


CC and CV mode Description

When the power supply is operating in constant current mode (CC) a constant current will be supplied to the load. When in constant current mode the voltage output can vary, whilst the current remains constant. When the load resistance increases to the point where the set current limit (I_{SET}) can no longer be sustained the power supply switches to CV mode. The point where the power supply switches modes is the crossover point.

When the power supply is operating in CV mode, a constant voltage will be supplied to the load, whilst the current will vary as the load varies. At the point that the load resistance is too low to maintain a constant voltage, the power supply will switch to CC mode and maintain the set current limit.

The conditions that determine whether the power supply operates in CC or CV (V_{SET}), the load resistance (R_L) and the critical resistance (R_C). The critical resistance is determined by V_{SET}/I_{SET} . The power supply will operate in CV mode when the load resistance is greater than the critical resistance. This means that the voltage output will be equal to the V_{SET} voltage but the current will be less than I_{SET} . If the load resistance is reduced to the point that the current output reaches the I_{SET} level, the power supply switches to CC mode.


Conversely the power supply will operate in CC mode when the load resistance is less than the critical resistance. In CC mode the current output is equal to I_{SET} and the voltage output is less than V_{SET} .

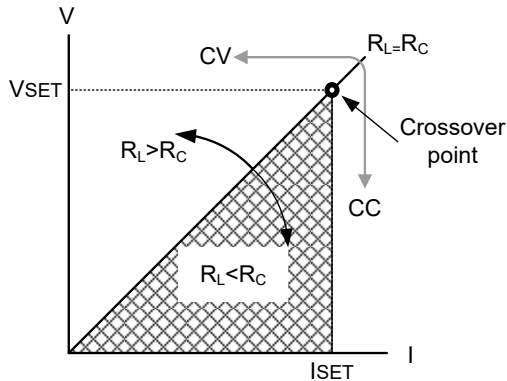

Slew Rate

Theory


The PPX has selectable slew rates for CC and CV mode. This gives the PPX power supply the ability to limit the current/voltage draw of the power supply. Slew rate settings are divided into High Speed Priority and Slew Rate Priority. High speed priority mode will use the fastest slew rate for the instrument. Slew Rate Priority mode allows for user adjustable slew rates for CC or CV mode. The rising and falling slew rate can be set independently.

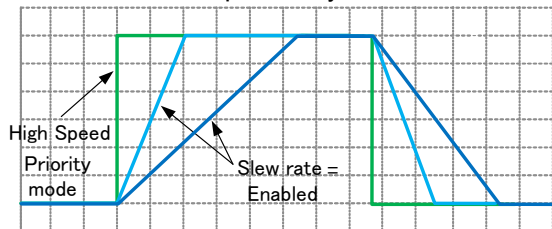

Bleeder Control

Background

The PPX DC power supplies employ a Bleed circuit in parallel with the output terminals.

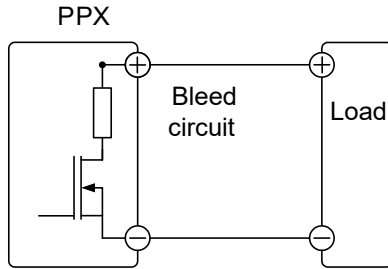

Bleed circuits are designed to dissipate the power from the power supply filter capacitors when power is turned off and the load is disconnected. Without a Bleed circuit, power may remain charged on the filter capacitors for some time and be potentially hazardous.

In addition, Bleed circuits also allow for smoother voltage regulation of the power supply as the Bleed circuit acts as a minimum voltage load.

The bleed circuit can be turned on or off using the configuration settings.



Note

By default the Bleed circuit is on. For battery charging applications, be sure to turn the Bleed circuit off as the Bleed circuit can discharge the connected battery when the unit is off.

Alarms

The PPX power supplies have a number of protection features. When one of the protection alarms is set, the ALM icon on the display will be lit.

| | |
|--------------|---|
| OVP | Over voltage protection (OVP) prevents a high voltage from damaging the load. This alarm can be set by the user. |
| OCF | Over current protection prevents high current from damaging the load. This alarm can be set by the user. |
| UVL | Under voltage limit. This function sets a minimum voltage setting level for the output. It can be set by the user. |
| OTP | Over temperature protection protect the instrument from overheating |
| AC ALARM | When AC input voltage or frequency is abnormal or beyond the AC power range under operation, the alarm will be generated. |
| SENSE ALARM | This alarm function is activated when real output voltage is larger than sense output voltage. |
| Alarm output | Alarms are output via the analog control connector. The alarm output is an isolated open-collector photo coupler output. |

Considerations

The following situations should be taken into consideration when using the power supply.


| | |
|----------------|--|
| Inrush current | When the power supply switch is first turned on, an inrush current is generated. Ensure there is enough power available for the power supply when first turned on, especially if a number of units are turned on at the same time. |
|----------------|--|



Caution

Cycling the power on and off quickly can cause the inrush current limiting circuit to fail as well as reduce the working life of the input fuse and power switch.


| | |
|---------------------------|---|
| Pulsed or Peaked loads | When the load has current peaks or is pulsed, it is possible for the maximum current to exceed the mean current value. The PPX power supply ammeter only indicates mean current values, which means for pulsed current loads, the actual current can exceed the indicated value. For pulsed loads, the current limit must be increased, or a power supply with a greater capacity must be chosen. As shown below, a pulsed load may exceed the current limit and the indicated current on the power supply ammeter. |
|---------------------------|---|

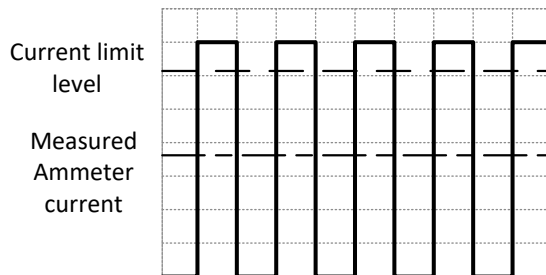

Reverse Current: Regenerative load

When the power supply is connected to a regenerative load such as a transformer or inverter, reverse current will feed back to the power supply. The PPX power supply cannot absorb reverse current. For loads that create reverse current, connect a resistor in parallel (dummy load) to the power supply to bypass the reverse current. To calculate the resistance for the dummy resistor, R_D , first determine the maximum reverse current, I_R , and determine what the output voltage, E_O , will be.

$$R_D(\Omega) \leq E_O(V) \div I_R(A)$$

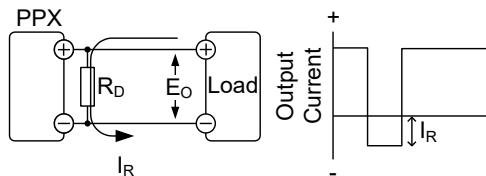


Note

The current output will decrease by the amount of current absorbed by the resistor.

Ensure the resistor used can withstand the power capacity of the power supply/load.

Reverse Current: Accumulative energy.

When the power supply is connected to a load such as a battery, reverse current may flow back to the power supply. To prevent damage to the power supply, use a reverse-current-protection diode in series between the power supply and load.

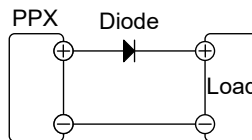

**CAUTION**

Ensure the reverse withstand voltage of the diode is able to withstand 2 times the rated output voltage of the power supply and the forward current capacity can withstand 3 to 10 times the rated output current of the power supply.

Ensure the diode is able to withstand the heat generated in the following scenarios.


When the diode is used to limit reverse voltage, remote sensing cannot be used.

Grounding

The output terminals of the PPX power supplies are isolated with respect to the protective grounding terminal. The insulation capacity of the load, the load cables and other connected devices must be taken into consideration when connected to the protective ground or when floating.

Floating

As the output terminals are floating, the load and all load cables must have an insulation capacity that is greater than the isolation voltage of the power supply.

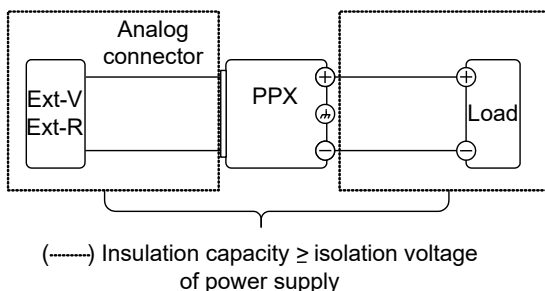


WARNING

If the insulation capacity of the load and load cables are not greater than the isolation voltage of the power supply, electric shock may occur.

Grounded output terminal

If the positive or negative terminal is connected to the protective ground terminal, the insulation capacity needed for the load and load cables is greatly reduced. The insulation capacity only needs to be greater than the maximum output voltage of the power supply with respect to ground.

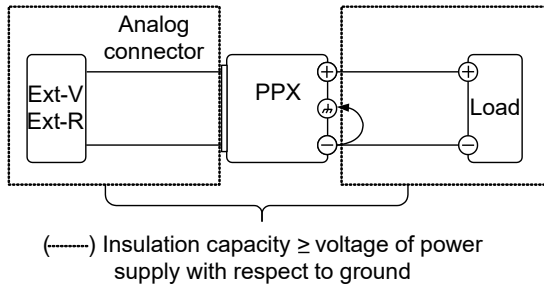

CAUTION

If using external voltage control, do not ground the external voltage terminal as this will create a short circuit.

REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control Interface Configuration

USB Remote Interface

Configuration

| | | |
|-------------------|--------------------|-----------------------------------|
| USB Configuration | PC side connector | Type A, host |
| | PPX side connector | Rear panel Type B, slave |
| | Speed | 1.1 (full speed) |
| | USB Class | CDC (communications device class) |

Steps

1. Connect the USB cable to the rear panel USB B port.
2. Set the USB setting as Auto or Full.
3. The indicator will be shown when a remote connection has been established.




Remote Control indicator

USB CDC Function Check

| | |
|------------|---|
| Background | To test the USB CDC functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com , via a search for the VISA Run-time Engine page, or "downloads" at the following URL, http://www.ni.com/visa/ |
|------------|---|


| | |
|--------------|--|
| Requirements | Operating System: Windows 7 or higher. |
|--------------|--|

| | |
|---------------------|--|
| Functionality check | 1. In case of Window 7 64 bits, once the USB Cable was connected to PC correctly for a while (around 1 min). It may show below message at the lower right area of display. |
|---------------------|--|

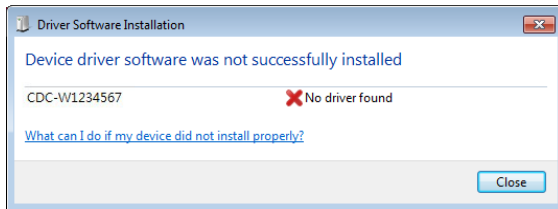


Open the "Run" dialog box by pressing and holding the Windows key and then press the R key ("Run").


Type devmgmt.msc and click "OK".

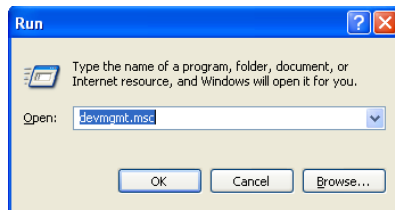


The Device Manager will show up CDC-WXXXXXX on "Other Devices".

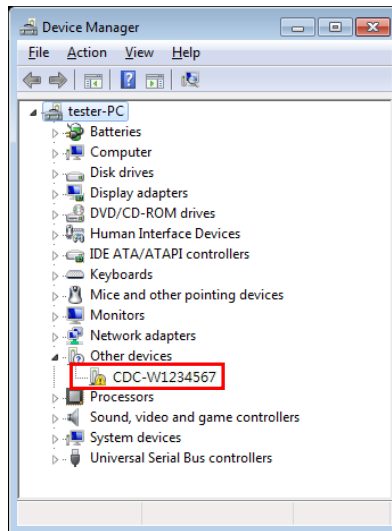


Select the CDC-WXXXXXX and click the right button of mouse to "Update Driver Software".

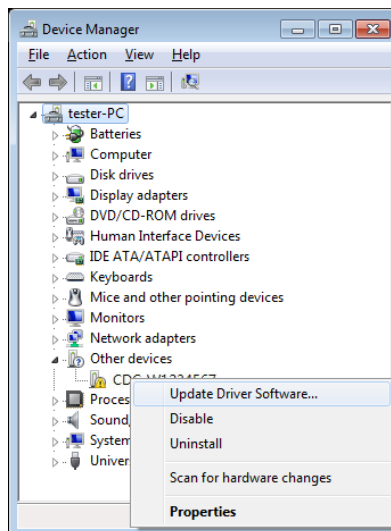

Select "Locate and install driver software manually."

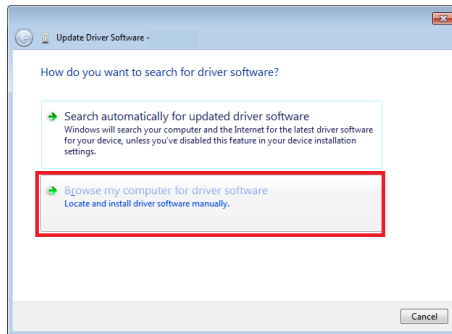

Indicate the driver folder to the system and then press "Next".

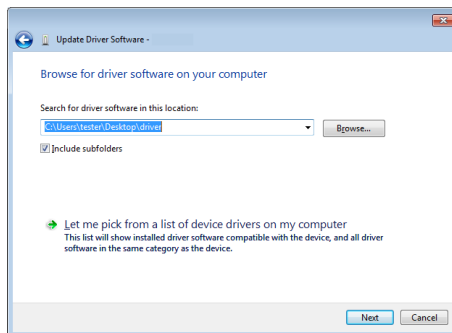


And this folder should consist of below 2 files.
texio_cdc_*.inf , texio_cdc_*.cat




Note

The USB driver of PPX can be downloaded from download area of PPX on the TEXIO website


Windows 7 will install the driver for a while.

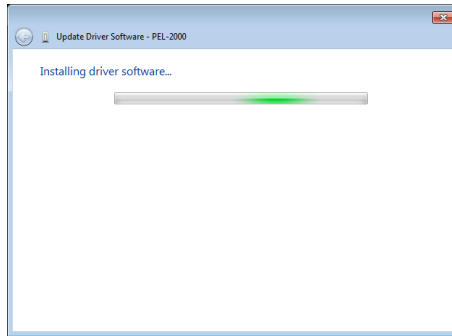

If everything works fine, you may get below message. And the COM53 is the USB CDC ACM port of PPX.

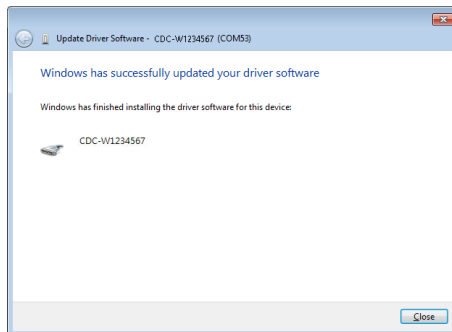

Double check the "Device Manager". The port should like below.

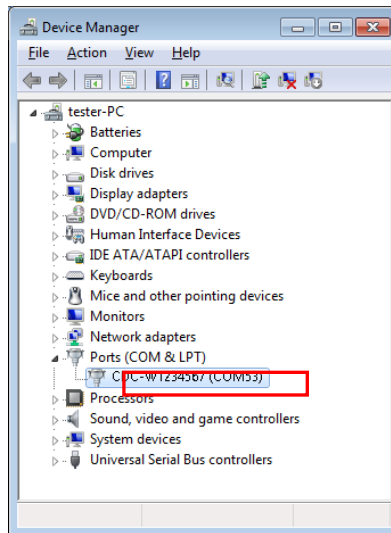

Steps 1~10 are for the USB CDC Driver installation.

Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:
Start>All Programs>National Instruments>Measurement & Automation



From the Configuration panel access;
*My System>Devices and Interfaces>Network
 Devices*

Click Open VISA Test Panel.




Click the Configuration icon,

Click on I/O Settings.

Make sure the Enable Termination Character
 check box is checked, and the terminal character
 is \n (Value: xA).

Click Apply Changes.

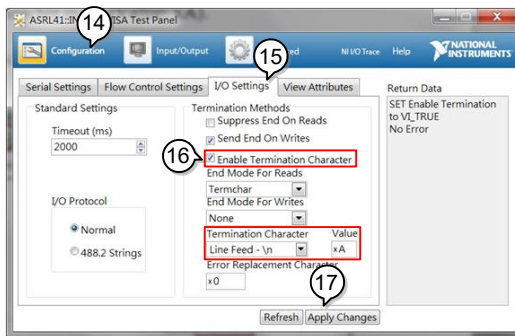


Click the Input/Output icon.

Enter *IDN? in the Select or Enter Command
 dialog box if it is not already.

Click the Query button.

The *IDN? query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

TEXIO,PPX36-3,TW123456,V0.A4

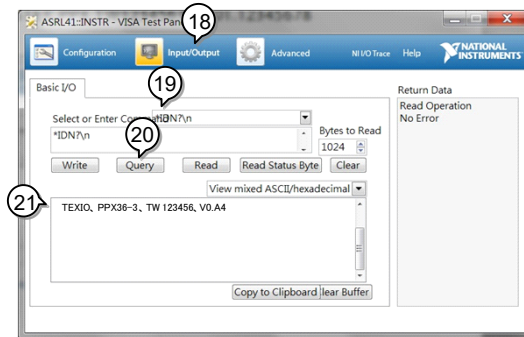

GP-IB Remote Interface

Configuration

GP-IB can be used with PPX series type G. Only one GP-IB address can be used at a time.


Configure GP-IB 1. Ensure the PPX is off before proceeding.

Connect the GP-IB cable (TEXIO part number: GTL-258) from a GP-IB controller to the GP-IB port on the PPX.

Turn the PPX on.

Set the GP-IB Address setting per application.

The indicator will be shown when a remote connection has been established.

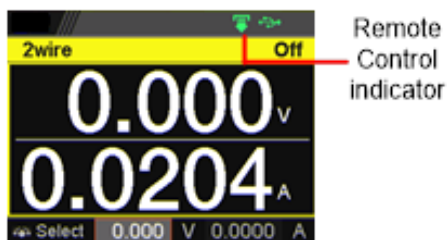

GP-IB constraints

- Maximum 15 devices altogether, 20m cable length, 2m between each device
- Unique address assigned to each device
- At least 2/3 of the devices turned On
- No loop or parallel connection

GP-IB Function Check

| | |
|------------|--|
| Background | To test the GP-IB functionality, National Instruments Measurement and Automation Explorer can be used. Please download this program by searching for the NI-488.2 driver on the NI website at www.ni.com . |
|------------|--|

| | |
|--------------|--|
| Requirements | Operating System: Windows 7 or higher. |
|--------------|--|

| | |
|---------------------|--|
| Functionality check | <ol style="list-style-type: none"> 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press: |
|---------------------|--|


Start>All Programs>National Instruments>Measurement & Automation




2. From the Configuration panel access;

My System>Devices and Interfaces>GPIB


3. Press *Scan for Instruments*.

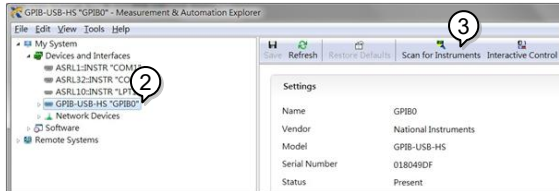


4. Select the device (GP-IB address of PPX) that now appears in the *System>Devices and Interfaces > GPB0-USB-HS "GPB0"* node.
5. Click on the *VISA Properties* tab on the bottom.
6. Click *Open Visa Test Panel*.

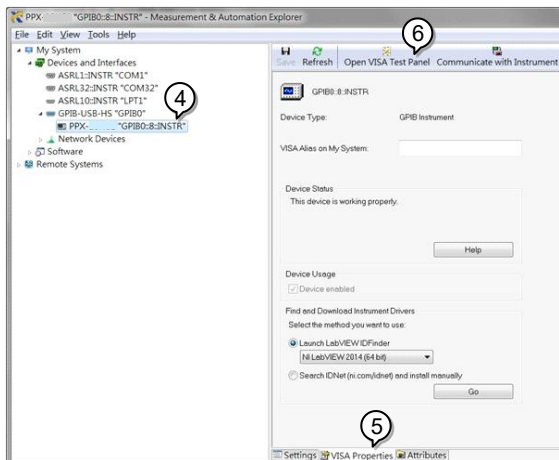

7. Click on *Configuration*.
8. Click on the *GP-IB Settings* tab and confirm that the GP-IB settings are correct.

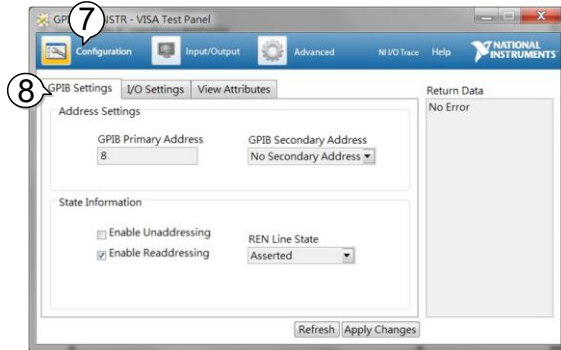


9. Click on the *I/O Settings* tab.
10. Make sure the *Enable Termination Character* check box is checked, and the terminal character is `\n` (Value: xA).
11. Click *Apply Changes*.

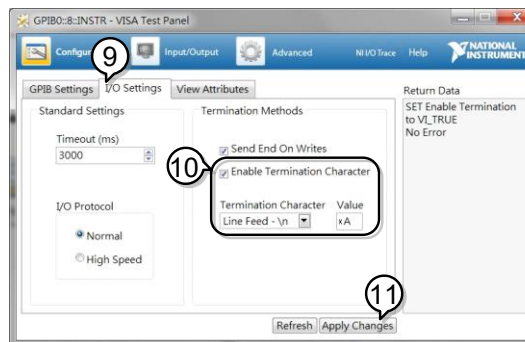

12. Click on *Input/Output*.
13. Click on the *Basic I/O* tab.

14. Enter *IDN? in the *Select or Enter Command* drop down box.
15. Click *Query*.
16. The *IDN? query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

TEXIO,PPX36-3,XXXXXXX,VX.XX

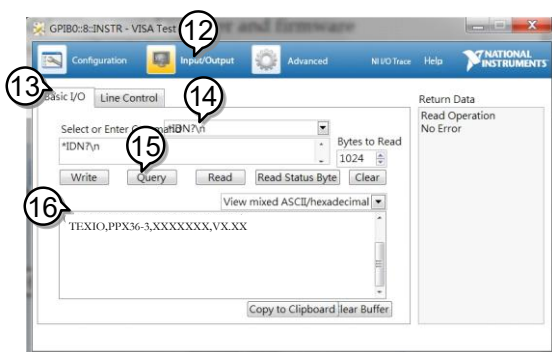

UART Remote Interface


Configure UART

Overview

The PPX uses the IN & OUT ports for UART communication coupled with RS-232C (TEXIO part number: GTL-259) or RS-485 adapters (TEXIO part number: GTL-260).


The pin outs for the adapters are shown below.

| RS-232C cable with DB9 & RJ-45 shielded connectors from GTL-259 connection kit | DB-9 Connector | | Remote IN Port | | Remarks |
|--|----------------|--------|----------------|--------|--------------|
| | Pin No. | Name | Pin No. | Name | |
| | Housing | Shield | Housing | Shield | |
| | 2 | RX | 7 | TX | Twisted pair |
| | 3 | TX | 8 | RX | |
| | 5 | SG | 1 | SG | |

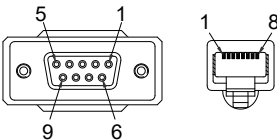


RS-485 cable with DB9 & RJ-45 shielded connectors from GTL-260 connection kit

| DB-9 Connector | | Remote IN Port | | Remarks |
|----------------|--------|----------------|--------|--------------|
| Pin No. | Name | Pin No. | Name | |
| Housing | Shield | Housing | Shield | |
| 9 | TXD - | 6 | RXD - | Twisted pair |
| 8 | TXD + | 3 | RXD + | |
| 1 | SG | 1 | SG | |
| 5 | RXD - | 5 | TXD - | Twisted pair |
| 4 | RXD + | 4 | TXD + | |

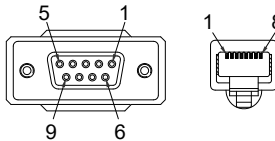

Steps

1. Connect the RS-232C serial cable or RS-485 serial cable to the Remote IN port on the real panel. Connect the other end of the cable to the PC.

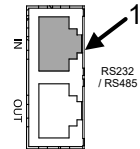


Select RS-485 or R-S232C for Mode setting. Also set UART relevant settings including Baud Rate, Data Bits, Parity, Stop Bits and Address.



Note

When RS-232C Mode is selected, the Address setting is not available for assignment. when a command is sent, an error code is returned in the case of an error, and a response message is returned in the case of a query.

The indicator will be shown when a remote connection has been established.

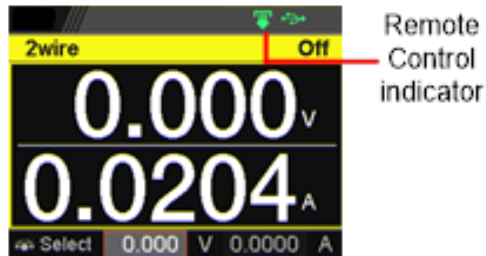

UART Function Check

| | |
|---------------------|---|
| Functionality check | Invoke a terminal application such as Realterm. To check the COM port No., see the Device Manager in the PC |
|---------------------|---|

Run this query command via the terminal application after the instrument has been configured for UART remote control.

*idn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.

TEXIO,PPX36-3,XXXXXXXX,VX.XX

Manufacturer: TEXIO

Model number : PPX36-3

Serial number : XXXXXXXX

Firmware version : VX.XX



Note

For further details, please see the programming manual, available on the TEXIO web site.

Multiple Connection

The PPX power supplies can be daisy-chained up to 31 units using the 8-pin connector (input / output port) on the rear panel. The first device in the chain connects remotely to the PLC using USB / LAN / GP-IB or GTL-260 (RS-485 cable with DB9 connector). Each subsequent device is daisy-chained to the next device using the RS-485 local bus. When using RS-232C, slave control cannot be performed by connecting with RS-485.

PC control is connected in multi-drop connection, and PLC control is connected in multi-unit connection.

These are not compatible.




Each device is assigned a unique address and can be controlled individually from the host PC / PLC.

Multi-Drop Connection

Steps


1. All units must be powered down before starting the Multi-Drop mode configuration.
2. Connect the first unit's LAN, USB or GPIB port to a PC.
3. Plug in intermediate connector to the OUT port on the first unit then using the master serial link cable (gray plug) to connect intermediate connector to the IN port of the second unit.

4. Connect all the remaining units between the OUT port and the IN port with the slave serial link cable (black plug) supplied in the GTL-262 until all the desired units have been daisy-chained together.
5. Terminate the OUT port of the last unit with the end terminal connector included in the GTL-261 connection kit.

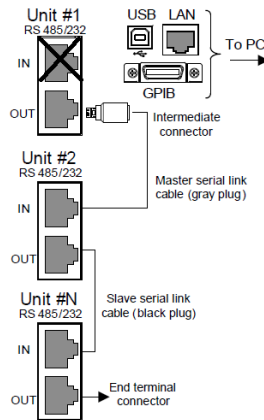


6. Power up all slave units.


Steps of Setting Press the Menu key followed by scrolling knob key
the address of all to move to Interface field.
slave units

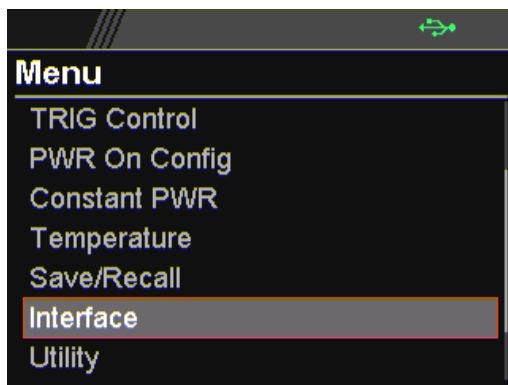


Click knob key to enter the Interface page followed by scroll knob key to move to UART field.

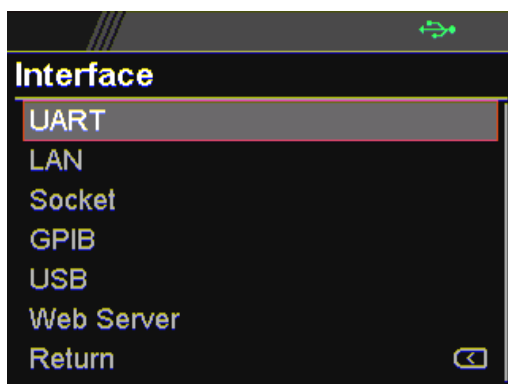

Click knob key to enter the UART page. Scroll knob key to move to Mode field followed by clicking and scrolling knob key to select RS485. Click knob key to confirm selection.

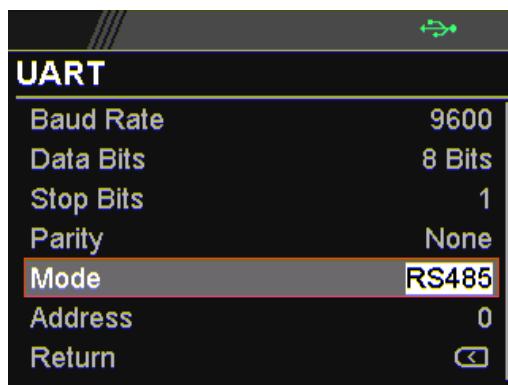


Scroll knob key to move to Address field followed by clicking and scrolling knob key to select target address, which sets the address of the slave unit. It must be a unique address identifier. Click knob key to confirm selection.

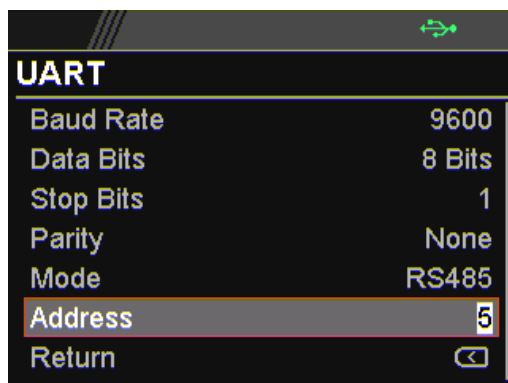


Steps of setting the Multi-Drop setting parameter to Slave for all slave units.

Press the Menu key followed by scrolling knob key to move to APP field.

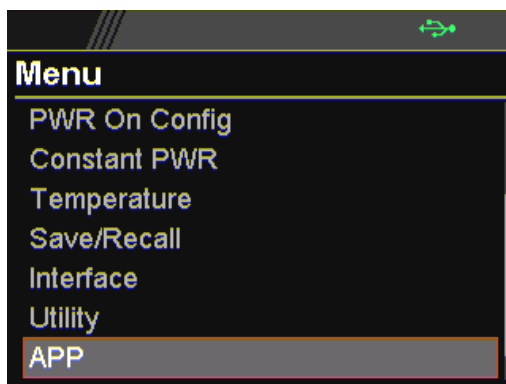


Click knob key to enter the APP page followed by scroll knob key to move to Multi-Drop field.

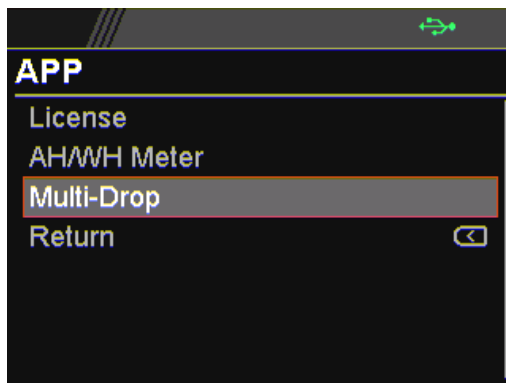

Steps of setting the Multi-Drop setting to slave

Click knob key to enter the Multi-Drop page followed by scroll knob key to move to Mode field. Click knob key followed by scrolling knob key to select Slave. Click knob key again to confirm setting.

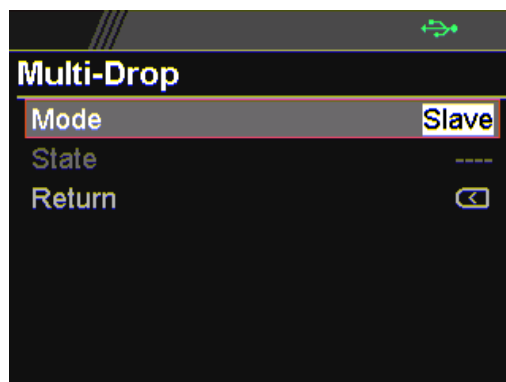

Steps of Setting the address of all master units

Power up the master unit. Set the addresses of the master units using the parameters, for which user can refer to from the step 7 to the step 10. Note that it must be a unique address identifier.


Steps of checking the slaves' addresses by using the Disp-Info parameter on the master unit

Press the Menu key followed by scrolling knob key to move to APP field.

Click knob key to enter APP page followed by scrolling knob key to move to Multi-Drop field.

Click knob key to enter Multi-Drop page followed by scrolling knob key to move to Mode.

Click knob key to enter Mode field followed by scrolling knob key to select Disp-Info.

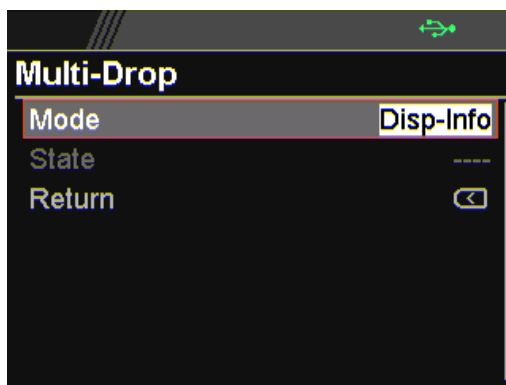

The configured address of each slave units are displayed and it shows if identical addresses have been assigned individually to each slave units. Click knob key to confirm and all slave units will change to UART page.


Steps of setting
the Multi-Drop
setting
parameter to
Master

Press the Menu key followed by scrolling knob key
to move to APP field.

Click knob key to enter APP page followed by
scrolling knob key to move to Multi-Drop field.

Click knob key to enter Multi-Drop page followed
by scrolling knob key to move to Mode.

Click knob key to enter Mode field followed by
scrolling knob key to select Master.

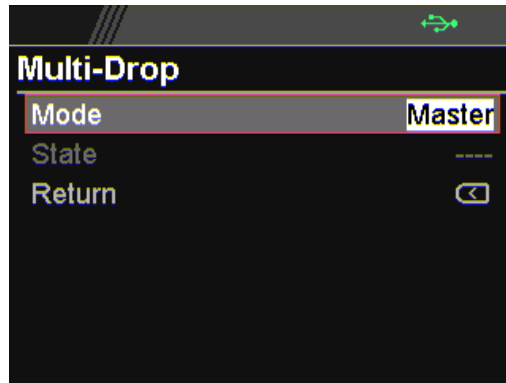

Steps of displaying the status of each slave unit by using the State menu

Press the Menu key followed by scrolling knob key to move to APP field.


Click knob key to enter APP page followed by scrolling knob key to move to Multi-Drop field.

Click knob key to enter Multi-Drop page followed by scrolling knob key to move to State.

Click knob key to enter State field followed by scrolling knob key to select address.


Displayed parameter: AA-S

AA: 0~30 (Address), S: 0~1 (Off-line/On-line status).

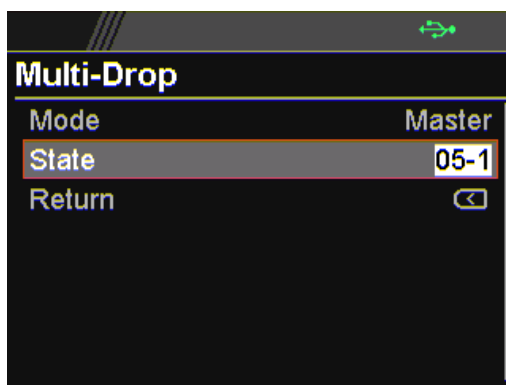

Multiple units can now be operated using SCPI commands. See the programming manual or see the function check below for usage details.

| | | | | |
|---|--|--------|-----------------------|--------|
| Slave serial link cable with RJ-45 shielded connectors from GTL-262 connection kit | RS-485 slave serial link pin assignment | | | |
| | 8 Pin Connector (IN) | | 8 Pin Connector (OUT) | |
| | Pin No. | Name | Pin No. | Name |
| | Housing | Shield | Housing | Shield |
| | 1 | SG | 1 | SG |
| | 6 | TXD - | 6 | TXD - |
| | 3 | TXD + | 3 | TXD + |
| | 5 | RXD - | 5 | RXD - |
| Master serial link cable with RJ-45 shielded connectors from GTL-261 connection kit | RS-485 master serial link pin assignment | | | |
| | 8 Pin Connector (IN) | | 8 Pin Connector (OUT) | |
| | Pin No. | Name | Pin No. | Name |
| | Housing | Shield | Housing | Shield |
| | 1 | SG | 1 | SG |
| | 6 | TXD - | 5 | RXD - |
| | 3 | TXD + | 4 | RXD + |
| | 5 | RXD - | 6 | TXD - |
| | 4 | RXD + | 3 | TXD + |

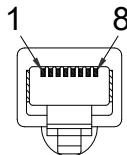

repeater unit



terminal unit


Multi-Unit Connection

PLC Operation 1. Connect the first unit's IN port to a PLC using RS-485 cable with DB9 & RJ-45.

2. Turn on the Terminator on the PLC side.


3. Attach the terminal attached to GTL-260 to the OUT terminal of the last slave unit.

4. Connect the OUT port on the first unit to the IN port of the second unit using the slave serial link cable (black plug) supplied in the GTL-262 connection kit.

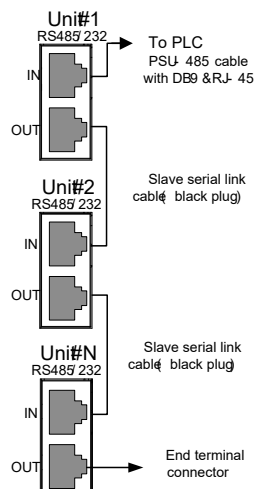


5. Power up all units.

6. Set the addresses and mode of all units using UART menu. It must be a unique address identifier and mode select is RS-485.

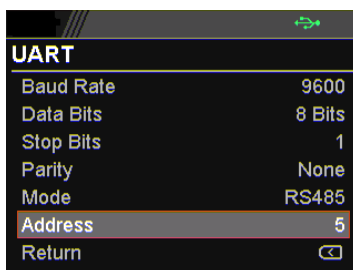

7. Multiple units can be operated using SCPI commands now. See the programming manual or see the function check below for usage details.

| | | | | | |
|---|----------------|--------|----------------|---------|--------------|
| RS232 cable with DB9 & RJ-45 shielded connectors GTL-259 | DB-9 Connector | | Remote-IN Port | | Remarks |
| | Pin No. | Name | Pin No. | Name | |
| | Housing | Shield | Housing | Shield | |
| | 2 | RX | 7 | TX | Twisted pair |
| | 3 | TX | 8 | RX | |
| | 5 | SG | 1 | SG | |
| RS485 cable with DB9 & RJ-45 shielded connectors GTL-260 | DB-9 Connector | | Remote-IN Port | | Remarks |
| | Pin No. | Name | Pin No. | Pin No. | Pin No. |
| | Housing | Shield | Housing | Shield | Housing |
| | 9 | TXD- | 6 | RXD- | 9 |
| | 8 | TXD+ | 3 | RXD+ | 8 |
| | 1 | SG | 1 | SG | 1 |
| | 5 | RXD- | 5 | TXD- | 5 |
| | 4 | RXD+ | 4 | TXD+ | 4 |

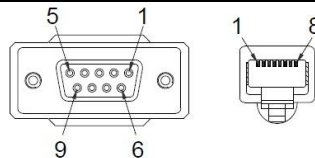


Steps


Connect the RS232 serial cable (GTL-259) to the Remote-IN port on the real panel.

Connect the other end of the cable to the PC.

When using only one unit with RS485, connect the end terminal connector to Remote-OUT.

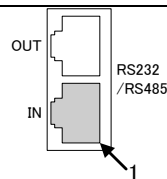

Multiple units Function Check

| | |
|--|---|
| Functionality check | <p>Invoke a terminal application such as Realterm. To check the COM port No, see the Device Manager in the PC.</p> <p>For this function check, we will assume that the one unit is assigned to address 0, while other is assigned address 5.</p> |
| | <hr/> <p>ADR 0 OK *IDN? TEXIO,PPX36-3,XXXXXXXX,VX.XX VOLT 5 OK VOLT? +5.000 ADR is followed by address, which can be 0 to 31 and is used to access the power supply. Selects the unit with address 0 and returns its identity string. Also, sets its volt as 5 and returns its volt in 5.</p> |
| | <hr/> <p>ADR 5 OK *IDN? TEXIO,PPX36-3,XXXXXXXX,VX.XX VOLT 10 OK VOLT? +10.000 ADR is followed by address, which can be 0 to 31 and is used to access the power supply. Selects the unit with address 5 and returns its identity string. Also, sets its volt as 10 and returns its volt in 10.</p> |
|  Note | <hr/> <p>When the controller sends a command, it must not make the next communication until it returns an OK, query response, and error string. For further details, please see the programming manual.</p> <hr/> |

Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.

The PPX series supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.


| | | |
|------------------------|---|--|
| Ethernet configuration | For details on how to configure the Ethernet settings, please refer to the User Manual. | |
|------------------------|---|--|

| | | |
|------------|----------------------------|-------------------------|
| Parameters | MAC Address (display only) | Hostname (display only) |
| | DHCP On/Off | IP Address |
| | Subnet Mask | Gateway IP |
| | DNS Address | Web Server On/Off |
| | | |

Web Server Configuration


| | |
|---------------|--|
| Configuration | This configuration example will configure the PPX as a web server and use DHCP to automatically assign an IP address to the PPX. |
|---------------|--|

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



Turn On DHCP and Web Server settings.

The indicator will be shown when a remote connection has been established.

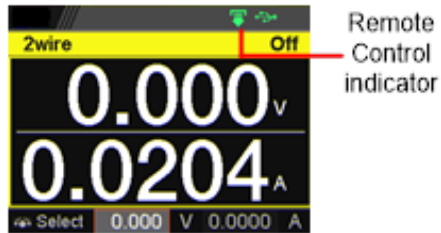

It may be necessary to cycle the power or refresh the web browser to connect to a network.


Web Server Remote Control Function Check

Functionality
check

Enter the IP address of the power supply in a web browser after the instrument has been configured as a web server.

The web server allows you to monitor the function settings of the PPX.

The web browser interface appears as follows.



Test and Measurement Solutions

[Visit Our Site](#)

[Support](#) | [Contact Us](#)

Welcome Page

Network Configuration

Measurement

Normal Function

External Control

Temperature Control

Analog Control

Figure of Dimensions

Sequence


Datalog

**PPX Series
Web Control Pages**

Thanks For Your Using.

Use the left menu
to select the features you need.

More How-to
Please refer to user manual.



System Information

| | |
|---------------------|-------------------|
| Manufacturer : | TEXIO |
| Serial Number : | XXX-200912 |
| Description : | TEXIO.PPX36-3 |
| Firmware Version : | V1.01.118 |
| Hostname : | T-X-200912 |
| mDNS Hostname : | T-X-200912.local |
| IP Address : | |
| Subnet Mask : | |
| Gateway : | |
| DNS : | |
| MAC Address : | 08-11-23-32-12-79 |
| DHCP State : | OFF |
| VISA TCP/IP Connect | TCP/IP: |
| String : | 8: SOCKET |

The web browser interface allows you to access the following:

- Network configuration settings

The screenshot shows the 'Network Configuration' page of the TEXIO web interface. The page has a header with the TEXIO logo and navigation links: 'Visit Our Site', 'Support', and 'Contact Us'. The main content area is titled 'Network Configuration' and includes a 'Welcome Page' link. The configuration fields are as follows:

| | |
|--------------|---|
| IP Address: | <input type="text"/> |
| Subnet Mask: | <input type="text"/> |
| Gateway: | <input type="text"/> |
| DNS: | <input type="text"/> |
| DHCP State: | <input type="radio"/> ON <input checked="" type="radio"/> OFF |
| Password: | <input type="text"/> |

Below the configuration fields is a 'Submit' button.

- Measurement setting

The screenshot shows the 'Measurement' page of the TEXIO web interface. The page has a header with the TEXIO logo and navigation links: 'Visit Our Site', 'Support', and 'Contact Us'. The main content area is titled 'Measurement' and includes a 'Welcome Page' link. The measurement data is displayed as follows:

| | | | |
|-------------|---------|---------|-----------|
| Voltage | 0.002 V | Current | 0.0000 mA |
| Temperature | 27.3 °C | | |

Below the measurement data are several control sections:


- Normal Function:** Voltage (1.000 V, SET), Current (2.2000 A, SET)
- External Control:** OVP (1.05 V, SET), OCP (2.304 A, SET)
- Temperature Control:** UVL (1.000 V, SET)
- Analog Control:** Temperature (1.000 V, SET)
- Figure of Dimensions:** Control (ON), Unit (°C)
- Sequence:** Unit (°C)
- Datalog:** ALM_CLR, OUTPUT ON

- Normal Function setting

The screenshot shows the 'Normal Function' page of the TEXIO web interface. The page has a header with the TEXIO logo and navigation links: 'Visit Our Site', 'Support', and 'Contact Us'. The main content area is titled 'Normal Function' and includes a 'Welcome Page' link. The configuration fields are as follows:

| | | | |
|------------------------|--------------------------|-------------------|---|
| Delay Time | 0.00 s | Filter | 0.050 s |
| Output ON | <input type="checkbox"/> | Output OFF | <input type="checkbox"/> |
| V-I mode & slew rate | V-I mode | Measure Average | Low Middle High |
| CV/high speed priority | <input type="checkbox"/> | Lock Mode | <input type="checkbox"/> Output Off <input checked="" type="checkbox"/> Output On/Off |
| Rising Voltage | 0.3600 V/ms | Bleeder Control | <input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF |
| Falling Voltage | 0.3600 V/ms | Protection Buzzer | <input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF |
| Rising Current | 0.03000 A/ms | Keyboard Buzzer | <input checked="" type="checkbox"/> ON <input type="checkbox"/> OFF |
| Falling Current | 0.03000 A/ms | | |

- External Control setting


[Visit Our Site](#)
[Support](#)
[Contact Us](#)

Welcome Page

External Control

CV Control

Panel control (local)

Network Configuration

CC Control

Panel control (local)

Measurement

Power-ON Output

OFF at startup

Normal Function

External Out Type

High ON

External Control

External Out Enable


OFF

Figure of Dimensions

Submit

Sequence

- Temperature Control setting


[Visit Our Site](#)
[Support](#)
[Contact Us](#)

Welcome Page

Temperature

Control:

ON

Network Configuration

Unit:

°C

Measurement

Output Safe:

ON

Monitor:

30.0

°C

SET

Normal Function

Adjust:

0.0

°C

SET

External Control


- Analog Control

It is instruction manual.

- Figure of Dimension

It is an external dimension.

- Sequence setting


[Visit Our Site](#)
[Support](#)
[Contact Us](#)

Welcome Page

Sequence

Control

001

Load

Unload

Network Configuration

Run

Stop

Measurement

Download

001

Download

Normal Function

Upload

External Control

Upload

0 %

- Datalog setting


[Visit Our Site](#)
[Support](#)
[Contact Us](#)

Welcome Page

Datalog

| Number | Value | Current | Temperature | Operation Status | Questionable Status |
|--------|----------|----------|-------------|------------------|---------------------|
| 1 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 2 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 3 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 4 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 5 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 6 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 7 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 8 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 9 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 10 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 11 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 12 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 13 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 14 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |
| 15 | +0.00174 | +0.00000 | 27.3 | +16 | +0 |

Network Configuration

Measurement

Normal Function

External Control

Temperature Control

Analog Control

Figure of Dimensions

Sequence

Datalog

Sample Period:
Maximum Number:

CSV Separator:
Mode:


Decimal Separator:

Sockets Server Configuration

Configuration This configuration example will configure the PPX socket server.


The following configuration settings will manually assign the PPX an IP address and enable the socket server. The socket server port number is fixed at 2268.

1. Connect an Ethernet cable from the network to the rear panel Ethernet port.



Turn Off DHCP setting followed by setting the relevant settings including IP Address, Subnet Mask, Gateway IP and DNS Address.

The indicator will be shown when a remote connection has been established.

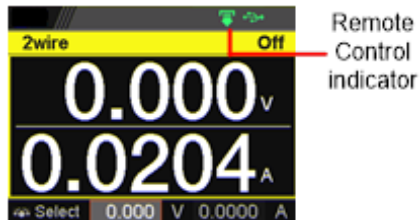

Socket Server Function Check

Background To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

Requirements Operating System: Windows 7 or higher.

Functionality check 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


Start>All Programs>National Instruments>Measurement & Automation




From the Configuration panel access;

My System>Devices and Interfaces>Network Devices

Press Add New Network Device>Visa TCP/IP Resource...

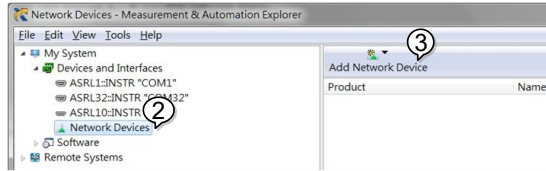

Select *Manual Entry of Raw Socket* from the popup window.

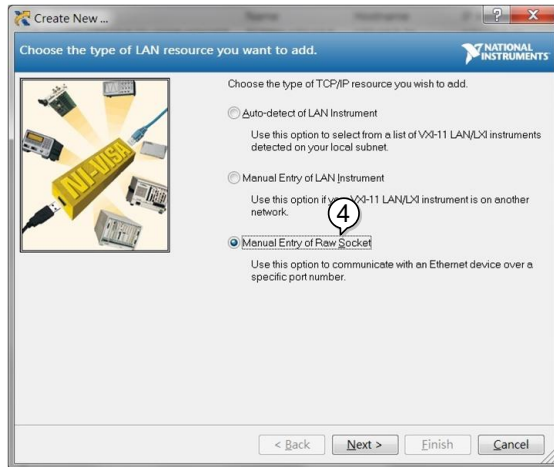


Enter the IP address and the port number of the PPX. The port number is fixed at 2268.

Click the Validate button.

A popup will appear if a connection is successfully established.

Click Next.

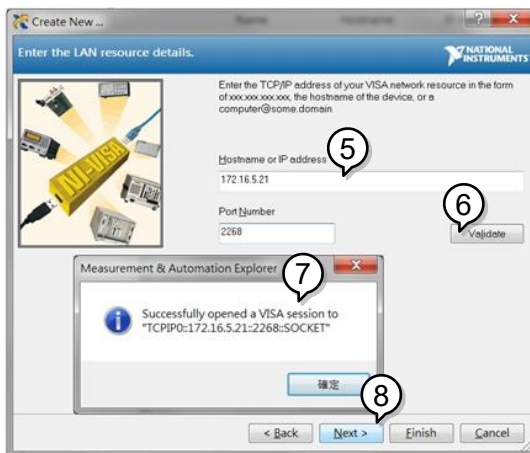


Next configure the Alias (name) of the PPX connection. In this example the Alias is: PPX_DC1

Click finish.



The IP address of the PPX will now appear under Network Devices in the configuration panel. Select this icon now.

Click *Open VISA Test Panel*.

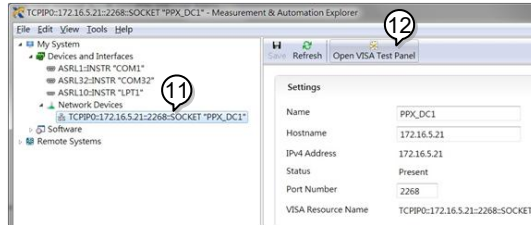


Click the *Configuration* icon,

Click on *I/O Settings*.

Make sure the *Enable Termination Character* check box is checked, and the terminal character is `\n` (Value: `xA`).

Click *Apply Changes*.

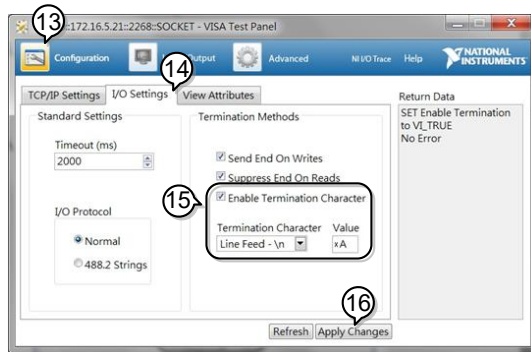


Click the *Input/Output* icon.

Enter `*IDN?` in the *Select or Enter Command* dialog box if it is not already.

Click the *Query* button.


The `*IDN?` query will return the Manufacturer, model name, serial number and firmware version in the dialog box.

TEXIO,PPX36-3,XXXXXXXX,VX.XX

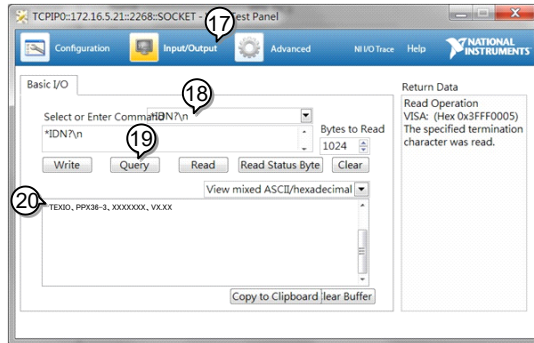

Command Syntax

| | | |
|---------------------|---|--|
| Compatible Standard | IEEE488.2 SCPI, 1999 | Partial compatibility Partial compatibility |
| Command Structure | <p>SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).</p> <p>For example, the diagram below shows an SCPI sub-structure and a command example.</p> | |

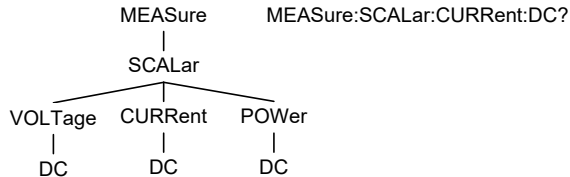

| | | |
|---------------|---|--|
| Command types | <p>There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.</p> | |
| | Command types | |
| | Simple | A single command with/without a parameter |
| | Example | *IDN? |
| | Query | A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned. |
| | Example | meas:curr:dc? |
| | Compound | <p>Two or more commands on the same command line. Compound commands are separated with either a semi-colon (;) or a semi-colon and a colon (;:).</p> <p>A semi-colon is used to join two related commands, with the caveat that the last</p> |

| | | |
|-----------------|--|--|
| | | command must begin at the last node of the first command. A semi-colon and colon are used to combine two commands from different nodes. |
| | Example | meas:volt:dc?::meas:curr:dc? |
| Command Forms | <p>Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.</p> <p>The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.</p> <p>Below are examples of correctly written commands.</p> | |
| | Long form | STATus:OPERation:NTRansition? STATUS:OPERATION:NTRANSITION? status:operation:ntransition? |
| | Short form | STAT:OPER:NTR? stat:oper:ntr? |
| Square Brackets | <p>Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below.</p> <p>Both "DISPlay:MENUp[:NAME]?" and "DISPlay:MENUp?" are both valid forms.</p> | |
| Command Format | | 1. Command header 2. Space 3. Parameter 1 4. Comma (no space before/after comma) 5. Parameter 2 |

| Parameters | Type | Description | Example |
|--------------------|--------------|--|-----------------|
| | <Boolean> | Boolean logic | 0, 1 |
| | <NR1> | integers | 0, 1, 2, 3 |
| | <NR2> | decimal numbers | 0.1, 3.14, 8.5 |
| | <NR3> | floating point | 4.5e-1, 8.25e+1 |
| | <NRf> | any of NR1, 2, 3 | 1, 1.5, 4.5e-1 |
| | <block data> | Definitive length arbitrary block data. A single decimal digit followed by data. The decimal digit specifies how many 8-bit data bytes follow. | |
| Message Terminator | LF | Line feed code | |

Command List

| | | |
|-------------------|--|----|
| Abort Command | :ABORT..... | 76 |
| Apply Commands | :APPLY..... | 76 |
| Address Commands | :ADR..... | 77 |
| Initiate Commands | :INITiate:CONTinuous[:TRANSient]..... | 77 |
| | :INITiate[:IMMediate]:NAME..... | 78 |
| | :INITiate[:IMMediate][:TRANSient]..... | 78 |
| Memory Commands | :MEMory:TRIGgered..... | 78 |
| Measure Commands | :MEASure[:SCALar]:ALL[:DC]..... | 83 |
| | :MEASure[:SCALar]:CURRent[:DC]..... | 83 |
| | :MEASure[:SCALar]:VOLTage[:DC]..... | 83 |
| | :MEASure[:SCALar]:POWer[:DC]..... | 84 |
| | :MEASure[:SCALar]:CURRent:RANGe..... | 84 |
| | :MEASure[:SCALar]:VOLTage:RANGe..... | 84 |
| | :MEASure:TEMPerature..... | 85 |
| Output Commands | :OUTPut:DELay:ON..... | 85 |
| | :OUTPut:DELay:OFF..... | 85 |
| | :OUTPut:MODE..... | 85 |
| | :OUTPut[:STATe][:IMMediate]..... | 86 |
| | :OUTPut[:STATe]:TRIGgered..... | 87 |
| | :OUTPut:PROTection:CLEAr..... | 87 |
| | :OUTPut:PROTection:TRIPped..... | 87 |
| | :OUTPut:PROTection:WDOG[:STATe]..... | 88 |
| | :OUTPut:PROTection:WDOG:DELay..... | 88 |
| Sense Commands | :SENSe:AVERage:COUNt..... | 89 |
| | :SENSe:DLOG:SFOL..... | 89 |
| | :SENSe:DLOG:STATe..... | 89 |
| | :SENSe:DLOG:PERiod..... | 90 |
| | :SENSe:AHOUr:RESet..... | 90 |
| | :SENSe:WHOUr:RESet..... | 90 |
| Status Commands | :STATus:OPERation[:EVENT]..... | 91 |
| | :STATus:OPERation:CONDition..... | 91 |
| | :STATus:OPERation:ENABle..... | 91 |
| | :STATus:OPERation:PTRansition..... | 91 |

| | |
|--|----|
| :STATus:OPERation:NTRansition | 92 |
| :STATus:QUESTionable[:EVENT] | 92 |
| :STATus:QUESTionable:CONDition | 92 |
| :STATus:QUESTionable:ENABle | 93 |
| :STATus:QUESTionable:PTRansition | 93 |
| :STATus:QUESTionable:NTRansition | 93 |
| :STATus:PRESet | 94 |

Source Commands

| | |
|--|-----|
| [[:SOURce]:CURRent[:LEVel][:IMMediate][:AMPLitude] | 94 |
| [[:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude] | 95 |
| [[:SOURce]:CURRent:LIMit:AUTO | 95 |
| [[:SOURce]:CURRent:PROTection:DELay | 96 |
| [[:SOURce]:CURRent:PROTection[:LEVel] | 96 |
| [[:SOURce]:CURRent:PROTection:TRIPped | 97 |
| [[:SOURce]:CURRent:SLEWrate:RISing | 97 |
| [[:SOURce]:CURRent:SLEWrate:FALLing | 98 |
| [[:SOURce]:MODE? | 98 |
| [[:SOURce]:VOLTag[:LEVel][:IMMediate][:AMPLitude] | 98 |
| [[:SOURce]:VOLTag[:LEVel]:TRIGgered[:AMPLitude] | 99 |
| [[:SOURce]:VOLTag:LIMit:AUTO | 100 |
| [[:SOURce]:VOLTag:LIMit:LOW | 100 |
| [[:SOURce]:VOLTag:PROTection[:LEVel] | 101 |
| [[:SOURce]:VOLTag:PROTection:TRIPped | 101 |
| [[:SOURce]:VOLTag:SLEWrate:RISing | 102 |
| [[:SOURce]:VOLTag:SLEWrate:FALLing | 102 |
| [[:SOURce]:VOLTag:SENSe | 103 |
| [[:SOURce]:POWER[:LEVel][:IMMediate][:AMPLitude] | 103 |
| [[:SOURce]:POWER:CONTRol | 105 |


System Commands

| | |
|---|-----|
| :SYSTem:BEEPer[:IMMediate] | 105 |
| :SYSTem:CONFigure:BEEPer[:STATe] | 106 |
| :SYSTem:CONFigure:BLEeder[:STATe] | 106 |
| :SYSTem:CONFigure:CURRent:CONTRol | 107 |
| :SYSTem:CONFigure:VOLTag:CONTRol | 108 |
| :SYSTem:CONFigure:OUTPut:PON[:STATe] | 108 |
| :SYSTem:CONFigure:OUTPut:EXTernal:MODE | 109 |
| :SYSTem:CONFigure:OUTPut:EXTernal[:STATe] | 109 |
| :SYSTem:CONFigure:TRIGger:INPut:SOURce | 110 |
| :SYSTem:CONFigure:TRIGger:INPut:LEVel | 111 |
| :SYSTem:CONFigure:TRIGger:OUTPut:SOURce | 111 |
| :SYSTem:CONFigure:TRIGger:OUTPut:WIDTh | 112 |
| :SYSTem:CONFigure:TRIGger:OUTPut:LEVel | 112 |
| :SYSTem:CONFigure:TEMPerature:CONTRol | 112 |
| :SYSTem:CONFigure:TEMPerature:UNIT | 113 |
| :SYSTem:CONFigure:TEMPerature:OUTPut:SAFE | 113 |
| :SYSTem:CONFigure:TEMPerature:MONitor | 114 |
| :SYSTem:CONFigure:TEMPerature:ADJust | 114 |

| | | |
|------------------|--|-----|
| | :SYSTem:COMMunicate:ENABLE | 115 |
| | :SYSTem:COMMunicate:GP-IB[:SELF]:ADDReSS | 116 |
| | :SYSTem:COMMunicate:LAN:IPADdress | 116 |
| | :SYSTem:COMMunicate:LAN:GATEway | 116 |
| | :SYSTem:COMMunicate:LAN:SMASk | 117 |
| | :SYSTem:COMMunicate:LAN:MAC | 117 |
| | :SYSTem:COMMunicate:LAN:DHCP | 117 |
| | :SYSTem:COMMunicate:LAN:DNS | 118 |
| | :SYSTem:COMMunicate:RLState | 118 |
| | :SYSTem:COMMunicate:TCPIp:CONTRol | 118 |
| | :SYSTem:COMMunicate:SERial[:RECeive] :TRANsmit:B | |
| | AUD | 119 |
| | :SYSTem:COMMunicate:SERial[:RECeive] :TRANsmit:B | |
| | ITS | 119 |
| | :SYSTem:COMMunicate:SERial[:RECeive] :TRANsmit:P | |
| | ARity | 120 |
| | :SYSTem:COMMunicate:SERial[:RECeive] :TRANsmit:S | |
| | BITs | 120 |
| | :SYSTem:COMMunicate:USB:FRONT:STATe | 121 |
| | :SYSTem:COMMunicate:USB:REAR:STATe | 121 |
| | :SYSTem:ERRor | 121 |
| | :SYSTem:KLOCK | 121 |
| | :SYSTem:KEYLock:MODE | 122 |
| | :SYSTem:ERRor:ENABLE | 122 |
| | :SYSTem:PRESet | 122 |
| | :SYSTem:VERsion | 122 |
| | :SYSTem:KEYBoard:BEEPer | 123 |
| | :SYSTem:CAPacity:AHOur | 123 |
| | :SYSTem:CAPacity:WHOur | 123 |
| | :SYSTem:CAPacity:MODE | 124 |
| | :SYSTem:CAPacity:STATe | 125 |
| Fetch Commands | | |
| | :FETCh:AHOur? | 125 |
| | :FETCh:WHOur? | 125 |
| | :FETCh:DLOG? | 126 |
| Trigger Commands | | |
| | :TRIGger:OUTPut:SOURce | 128 |
| | :TRIGger:OUTPut[:IMMediate] | 128 |
| | :TRIGger[:TRANsient]:SOURce | 128 |
| | :TRIGger[:TRANsient][:IMMediate] | 129 |
| | Trigger Command Examples | 129 |
| Common Commands | | |
| | *WAI | 133 |

Abort Command

:ABORt




| | |
|-------------|---|
| Description | The :ABORt command will cancel any triggered actions. |
|-------------|---|

| | |
|--------|--------|
| Syntax | :ABORt |
|--------|--------|

Apply Commands

:APPLy



| | |
|-------------|--|
| Description | The apply command sets the voltage and current at the same time. |
|-------------|--|

| | |
|--------|---|
| Syntax | :APPLy {<NRf>(V) MINimum MAXimum[,<NRf>(A) MINimum MAXimum]} |
|--------|---|

| | |
|--------------|---------|
| Query Syntax | :APPLy? |
|--------------|---------|

| | | |
|-----------------------------------|----------|-----------------------|
| Parameter/ Return parameter | <NRf>(V) | Voltage setting. |
| | MINimum | Minimum voltage level |
| | MAXimum | Maximum voltage level |
| | <NRf>(A) | Current setting. |
| | MINimum | Minimum voltage level |
| | MAXimum | Maximum voltage level |

| | |
|---------|--|
| Example | APPL MIN, MIN Sets the current and voltage to the minimum settings. |
|---------|--|

Address Commands

:ADR

Set

Query

| | | |
|-----------------------------------|---|------|
| Description | Sets or queries the RS-485 interface address. | |
| Syntax | :ADR <NR1> | |
| Query Syntax | :ADR? | |
| Parameter/ Return parameter | <NR1> | 0~30 |
| Example | ADR 5 Sets the RS485 address 5. | |

Initiate Commands

| | |
|-----------------------------------|----|
| :INITiate:CONTInuous[:TRANsient] | 77 |
| :INITiate[:IMMediate]:NAME | 78 |
| :INITiate[:IMMediate][:TRANsient] | 78 |


:INITiate:CONTInuous[:TRANsient]

Set

Query


| | | |
|---------------------|---|-----|
| Description | This command continuously initiates software triggers for the transient or output triggers. | |
| Syntax | :INITiate:CONTInuous[:TRANsient] | |
| Query Syntax | {<bool> OFF ON} | |
| | :INITiate:CONTInuous[:TRANsient]? | |
| Parameter | OFF 0 | OFF |
| | ON 1 | ON |
| Return parameter | 0 | OFF |
| | 1 | ON |
| Example | INIT:TRAN 1 Turns on the continuous trigger. | |

:INITiate[:IMMediate]:NAME



| | |
|-------------|--|
| Description | The INITiate command starts the TRANSient or OUTPut trigger. |
| Syntax | :INITiate[:IMMediate]:NAME {TRANSient OUTPut} |
| Parameter | TRANSient Starts the TRANSient trigger. OUTPut Starts the OUTPut trigger. |
| Example | INITiate:NAME TRANient Starts the TRANSient trigger. |



:INITiate[:IMMediate][:TRANSient]



| | |
|-------------|---|
| Description | This command controls the enabling of output triggers. When a trigger is enabled, a trigger causes the specified action to occur. If the trigger system is not enabled, all triggers are ignored. |
| Syntax | :INITiate[:IMMediate][:TRANSient] |
| Example | INIT |

Memory Commands

:MEMory:TRIGgered
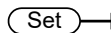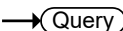
| | |
|------------------|---|
| Description | Sets or queries which memory is loaded when a trigger input is received and the trigger input is configured to load a memory setting. This is the equivalent to the TRIG Control menu (Trigin Memory) settings. |
| Related Commands | :SYSTem:CONFigure:TRIGger:INPut:MEMor y {<NR1> MINimum MAXimum} :SYSTem:CONFigure:TRIGger:INPut:MEMor y? [MINimum MAXimum] |

| | | |
|------------------|--|-----------------------------|
| Syntax | :MEMory:TRIGgered{<NR1> MINimum MAXimum} | |
| Query Syntax | :MEMory:TRIGgered? [MINimum MAXimum] | |
| Parameter | <NR1> MINimum MAXimum | 0(M1)~9(M10). |
| Return parameter | <NR1> | Returns the memory setting. |

Instrument Commands


:INSTrument:SCAN



Description Links the units which could be scanned from system when using Multi-Drop mode.

Syntax :INSTrument:SCAN

:INSTrument:SELEct




Description Specifies the address of the unit to which communication will be established when using the Multi-Drop mode.

Syntax :INSTrument :SELEct {<NR1>}

Query Syntax :INSTrument :SELEct?

Parameter <NR1> 2. The address of the unit to be selected (0~30).


Return parameter <NR1> 3. The currently selected address.

Example :INST:SEL?
>30

The currently selected address is 30.

:INSTrument:STATe

| | | |
|------------------|--|--|
| Description | Displays the status (on-line/off-line) of each slave unit and the address of master unit, when using the Multi-Drop mode. | |
| Query Syntax | :INSTrument:STATe? | |
| Return parameter | <NR1>,<NR1> | <p>4. 0~2147483647, 0~30 (2147483647=2³¹-1)</p> <p>5. First value:</p> <p>6. Each bit of the binary value corresponds to a unit from 0 to 30 (LSB to MSB). The bit will be set to 1 when the corresponding unit is on-line.</p> <p>7. Second value:</p> <p>8. This value represents the master address.</p> |
| Example | <pre>:INST:STAT? 33,0 33=0b100001</pre> <p>The units at address 0 and address 5 are on-line.</p> <p>0</p> <p>Master device's address is 0.</p> | |

:INSTrument:DISPlay

| | | |
|-------------|---|--|
| Description | Displays information (configured address) for all slave units when using the Multi-Drop mode. The Master multi-drop mode will be set to "Disp-Info" | |
| Syntax | :INSTrument:DISPlay | |
| Example | :INST:DISP | |

System Commands

:SYSTem:COMMunicate:MULTidrop
:CONTrol

→ Query

| | | |
|------------------|---------------------------------------|--------------|
| Description | Queries the Multi-Drop Control state. | |
| Query Syntax | SYST:COMM:MULT:CONT? | |
| Return parameter | 0 | <NR1>Disable |
| | 1 | <NR1>Master |
| | 2 | <NR1>Slave |

:SYSTem:CAPacity:AHOur

Set →

→ Query


| | | |
|------------------|---|-----------------------------------|
| Description | Sets or queries the Ampere-hour capacity. This is the equivalent to the Ah/Wh Meter menu (AHour) settings. Note: Install the license first. | |
| Syntax | :SYSTem:CAPacity:AHOur {<NR2> MINimum MAXimum} | |
| Query Syntax | :SYSTem:CAPacity:AHOur? [MINimum MAXimum] | |
| Parameter | <NR2> | 0.001~999999999.999 |
| | MINimum | 0.001 |
| | MAXimum | 999999999.999 |
| Return Parameter | <NR2> | Returns the Ampere-hour capacity. |

:SYSTem:CAPacity:WHOur

→ Query

| | |
|-------------|---|
| Description | Sets or queries the Watt-hour capacity. This is the equivalent to the Ah/Wh Meter menu (WHour) settings. Note: Install the license first. |
|-------------|---|

| | | |
|------------------|---|---------------------------------|
| Syntax | :SYSTem:CAPacity:WHour {<NR2> MINimum MAXimum} | |
| Query Syntax | :SYSTem:CAPacity:WHour? [MINimum MAXimum] | |
| Parameter | <NR2> | 0.001~999999999.999 |
| | MINimum | 0.001 |
| | MAXimum | 999999999.999 |
| Return Parameter | <NR2> | Returns the Watt-hour capacity. |

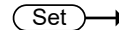

:SYSTem:CAPacity:MODE



| | | |
|------------------|---|--|
| Description | Sets or queries the capacity mode. This is the equivalent to the AH/WH Meter menu (Mode) settings. Note: Install the license first. | |
| Syntax | :SYSTem:CAPacity:MODE {<NR1> DISable AHour WHour} | |
| Query Syntax | :SYSTem:CAPacity:MODE? | |
| Parameter | Disable 0 | Sets capacity mode in Disable. |
| | AHour 1 | Sets capacity mode in AHour, The sets will turn off output when Ampere-hour capacity is reached. |
| | WHour 2 | Sets capacity mode in WHour, The sets will turn off output when Watt -hour capacity is reached. |
| Return Parameter | <NR2> | Returns the capacity mode. |

:SYSTem:CAPacity:STATe



| | | |
|--------------|---|--|
| Description | Queries the capacity state. Monitor the capacity when the output is turned on. Turn off the output when the monitored AHour/Whour capacity is reached. Note: The capacity mode is selected AHour/Whour first. | |
| Query Syntax | :SYSTem:CAPacity:STATe? | |

| | | |
|------------------|-------|-------------------------------------|
| Parameter | 0 | AHour/Whour capacity isn't reached. |
| | 1 | AHour/Whour capacity is reached. |
| Return Parameter | <NR1> | Returns the capacity state. |

Measure Commands

:MEASure[:SCALar]:ALL[:DC] → **Query**

| | | |
|------------------|--|--|
| Description | Takes a measurement and returns the average output current and voltage | |
| Syntax | :MEASure[:SCALar]:ALL[:DC]? | |
| Return parameter | " +0.0000,+0.00000,+0.0000" | <voltage>,<current> ,<power>Returns the voltage (V),current (A),power(W) respectively. |

:MEASure[:SCALar]:CURRent[:DC] → **Query**

| | | |
|------------------|--|------------------------------|
| Description | Takes a measurement and returns the average output current | |
| Syntax | :MEASure[:SCALar]:CURRent[:DC]? | |
| Return parameter | " +0.0000" | Returns the current in amps. |

:MEASure[:SCALar]:VOLTage[:DC] → **Query**

| | | |
|-------------|---|-------------------------------|
| Description | Takes a measurement and returns the average output voltage. | |
| Syntax | :MEASure[:SCALar]:VOLTage[:DC]? | |
| Return | "+0.0000" | Returns the voltage in volts. |

:MEASure[:SCALar]:POWER[:DC]

| | | |
|-------------|---|--------------------------------------|
| Description | Takes a measurement and returns the average output power. | |
| Syntax | :MEASure[:SCALar]:POWER[:DC]? | |
| Return | "+0.0000" | Returns the power measured in watts. |

:MEASure[:SCALar]:CURRent:RANGe

| | | |
|------------------|--|--|
| Description | Sets or queries the current measurement range. | |
| Syntax | :MEASure[:SCALar]:CURRent:RANGe {<NR1> AUTO IH IL ILL} | |
| Query Syntax | :MEASure[:SCALar]:CURRent:RANGe? | |
| Parameter | AUTO 0 | Current measurement auto range. |
| | IH 1 | Current measurement IH range. |
| | IL 2 | Current measurement IL range. |
| | ILL 3 | Current measurement ILL range. |
| Return parameter | <NR1> | Returns the current measurement range. |

:MEASure[:SCALar]:VOLTage:RANGe

| | | |
|------------------|---|--|
| Description | Sets or queries the voltage measurement range. | |
| Syntax | :MEASure[:SCALar]:VOLTage:RANGe {<NR1> AUTO VH VL } | |
| Query Syntax | :MEASure[:SCALar]:VOLTage:RANGe? | |
| Parameter | AUTO 0 | Voltage measurement auto range. |
| | VH 1 | Voltage measurement VH range. |
| | VL 2 | Voltage measurement VL range. |
| Return parameter | <NR1> | Returns the voltage measurement range. |

:MEASure:TEMPerature→ **Query**

| | |
|-------------|---|
| Description | Takes a measurement and returns the temperature. |
| Syntax | :MEASure:TEMPerature? |
| Return | "+0.0000" Returns the temperature in celsius or fahrenheit. |
| Return | -32768 Returns the temperature in INVALID. |

Output Commands**:OUTPut:DElay:ON****Set** →→ **Query**

| | |
|------------------|--|
| Description | Sets the Delay Time in seconds for turning the output on. The delay is set to 0.00 by default. |
| Syntax | :OUTPut:DElay:ON {<NR2> MINimum MAXimum} |
| Query Syntax | :OUTPut:DElay:ON? |
| Parameter | <NR2> 0.00~359999.99 seconds, where 0=no delay. |
| Return parameter | "0.00" Returns the delay on time in seconds until the output is turned on. |

Set →**:OUTPut:DElay:OFF**→ **Query**

| | |
|------------------|---|
| Description | Sets the Delay Time in seconds for turning the output off. The delay is set to 0.00 by default. |
| Syntax | :OUTPut:DElay:OFF {<NR2> MINimum MAXimum} |
| Return Syntax | :OUTPut:DElay:OFF? |
| Parameter | <NR2> 0.00~359999.99 seconds, where 0=no delay. |
| Return parameter | "0.00" Returns the delay off time in seconds until the output is turned off. |

Set →**:OUTPut:MODE**→ **Query**

| | | |
|------------------|--|--------------------------|
| Description | Sets the PPX output mode. This is the equivalent to the Output menu (V-I Slew Rate Select) settings. | |
| Syntax | :OUTPut:MODE | |
| Return Syntax | {<NR1> CVHS CCHS CVLS CCLS} | |
| | :OUTPut:MODE? | |
| Parameter | CVHS 0 | CV high speed priority |
| | CCHS 1 | CC high speed priority |
| | CVLS 2 | CV slew rate priority |
| | CCLS 3 | CC slew rate priority |
| Return parameter | <NR1> | Returns the output mode. |

:OUTPut[:STATe][:IMMediate]

Set →

→ Query

| | | |
|------------------|---|--|
| Description | Turns the output on or off. | |
| Syntax | :OUTPut[:STATe][:IMMediate] { <bool> OFF ON } | |
| Query Syntax | :OUTPut[:STATe][:IMMediate]? | |
| Parameter | OFF 0 | Turns the output off. |
| | ON 1 | Turns the output on. |
| Return parameter | <bool> | Returns output status of the instrument. |

:OUTPut[:STATe]:TRIGgered

| | | |
|------------------|--|---|
| Description | Turns the output on or off when a software trigger (trigger input) is generated. | |
| Syntax | :OUTPut[:STATe]:TRIGgered { <bool> OFF ON } | |
| Query Syntax | :OUTPut[:STATe]:TRIGgered? | |
| Parameter | OFF 0 | Turns the output off when a software trigger is generated (*TRG). |
| | ON 1 | Turns the output on when a software trigger is generated (*TRG). |
| Return parameter | <bool> | Returns output trigger status of the instrument. |


:OUTPut:PROTection:CLEar

| | | |
|-------------|---|--|
| Description | Clears over-voltage, over-current and over-temperature (OVP, OCP, OTP) protection circuits. It also clears the temperature short and sense protection circuit. The other alarm(WDOG, CAP, TEMP Monitor)also clears. | |
| Syntax | :OUTPut:PROTection:CLEar | |

:OUTPut:PROTection:TRIPped


| | | |
|-------------|---|--|
| Description | Queries the unit to see if a protection circuit has been tripped. | |
| Syntax | :OUTPut:PROTection:TRIPped? | |
| Return | <boolean> | 0 = No protection error 1 = A protection error had occurred |

:OUTPut:PROTection:WDOG[:STATe]



| | | |
|------------------|--|---|
| Description | Enables or disables the communication monitor setting. | |
| Syntax | :OUTPut:PROTection:WDOG[:STATe] { <bool> OFF ON } | |
| Query Syntax | :OUTPut:PROTection:WDOG[:STATe]? | |
| Parameter | OFF 0 ON 1 | Disable communication monitor. Enable communication monitor. |
| Return parameter | <boolean> | Returns the setting in <bool> format. |

:OUTPut:PROTection:WDOG:DELAy



| | | |
|------------------|--|----------------------------|
| Description | Sets the timer in seconds for monitor the communication. | |
| Syntax | :OUTPut:PROTection:WDOG:DELAy {<NR1> MINimum MAXimum} | |
| Query Syntax | :OUTPut:PROTection:WDOG:DELAy? | |
| Parameter | <NR1> | 1~3600 seconds. |
| Return parameter | <NR1> | Returns the timer setting. |

Sense Commands

:SENSe:AVERage:COUNT

Set →

→ Query

| | | |
|------------------|---|------------------------------|
| Description | Sets or queries the level of smoothing for the average setting. | |
| Syntax | :SENSe:AVERage:COUNT {<NR1> LOW MIDDLE HIGH} | |
| Return Syntax | :SENSe:AVERage:COUNT? | |
| Parameter | OFF 0 | Default setting |
| | LOW 1 | Low setting |
| | MIDDLE 2 | Middle setting |
| | HIGH 3 | High setting |
| Return Parameter | <NR1> | Returns the average setting. |

:SENSe:DLOG:SFOL

Set →

→ Query

| | | |
|------------------|--|---------------------------------------|
| Description | Sets or queries data logger subfolder counter. | |
| Syntax | :SENSe:DLOG:SFOL {<string>} | |
| Return Syntax | :SENSe:DLOG:SFOL? | |
| Parameter | <string> | ASCII characters: 30H to 39H. |
| Return Parameter | <string> | Returns ASCII characters: 30H to 39H. |

:SENSe:DLOG:STATe

Set →

→ Query

| | | |
|---------------|--|--|
| Description | Enables or disables the data logger setting. | |
| Syntax | :SENSe:DLOG:STATe {<NR1>} | |
| Return Syntax | :SENSe:DLOG:STATe? | |

| | | |
|------------------|-------|---|
| Parameter | 0 | Disable data logger. |
| | 1 | Enable data logger. The data is stored in the USB storage when USB storage plug in. |
| | 2 | Enable data logger, The log data is saving in the PPX. |
| Return Parameter | <NR1> | Returns the data logger setting. |

Set →

:SENSe:DLOG:PERiod

→ Query

| | | |
|------------------|--|------------------------------------|
| Description | Sets the sample period in seconds for data logger. | |
| Syntax | :SENSe:DLOG:PERiod {<NR2> MINimum MAXimum} | |
| Return Syntax | :SENSe:DLOG:PERiod? | |
| Parameter | <NR2> | 0.1~999.9 seconds. |
| Return Parameter | <NR2> | Returns the sample period setting. |

:SENSe:AHOur:RESet

Set →

Description Sets the Ampere-hour capacity to zero.
Note: Install the license first.

Syntax :SENSe:AHOur:RESet

:SENSe:WHOur:RESet

Set →

Description Sets the Watt-hour capacity to zero.
Note: Install the license first.

Syntax :SENSe:WHOur:RESet

Status Commands

For an overview of all the status registers, their associated register contents and the system diagram, please see the status overview on page 135

:STATus:OPERation[:EVENT]

→ Query

Description Queries the Operation Status Event register and clears the contents of the register.

Syntax :STATus:OPERation[:EVENT]?

Return <NR1> Returns the bit sum of the Operation Status Event register.

:STATus:OPERation:CONDition

→ Query

Description Queries the Operation Status register. This query will not clear the register.

Syntax :STATus:OPERation:CONDition?

Return <NR1> Returns the bit sum of the Operation Condition register.

:STATus:OPERation:ENABLE

Set →

→ Query

Description Sets or queries the bit sum of the Operation Status Enable register.

Syntax :STATus:OPERation:ENABLE <NR1>

Query Syntax :STATus:OPERation:ENABLE?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

Set →


:STATus:OPERation:PTRansition

→ Query

Description Sets or queries the bit sum of the positive transition filter of the Operation Status register.

| | |
|------------------|-------------------------------------|
| Syntax | :STATus:OPERation:PTRansition <NR1> |
| Query Syntax | :STATus:OPERation:PTRansition? |
| Parameter | <NR1> 0~32767 |
| Return parameter | <NR1> 0~32767 |

:STATus:OPERation:NTRansition



Description Sets or queries the bit sum of the negative transition filter of the Operation Status register.

| | |
|------------------|-------------------------------------|
| Syntax | :STATus:OPERation:NTRansition <NR1> |
| Query Syntax | :STATus:OPERation:NTRansition? |
| Parameter | <NR1> 0~32767 |
| Return parameter | <NR1> 0~32767 |

:STATus:QUESTionable[:EVENT]



Description Queries the bit sum of the Questionable Status Event register. This query will also clear the contents of the register.


| | |
|------------------|-------------------------------|
| Query Syntax | :STATus:QUESTionable[:EVENT]? |
| Return parameter | <NR1> 0~32767 |

:STATus:QUESTionable:CONDition



Description Queries the status (bit sum) of the Questionable Status register. This query will not clear the register.

| | |
|------------------|---------------------------------|
| Query Syntax | :STATus:QUESTionable:CONDition? |
| Return parameter | <NR1> 0~32767 |

:STATus:QUESTionable:ENABle


Description Sets or queries the bit sum of the Questionable Status Enable register.

Syntax :STATus:QUESTionable:ENABle <NR1>

Query Syntax :STATus:QUESTionable:ENABle?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

:STATus:QUESTionable:PTRansition


Description Sets or queries the bit sum of the positive transition filter of the Questionable Status register.

Syntax :STATus:QUESTionable:PTRansition <NR1>

Return Syntax :STATus:QUESTionable:PTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

:STATus:QUESTionable:NTRansition

Description Sets or queries the negative transition filter of the Questionable Status register.

Syntax :STATus:QUESTionable:NTRansition <NR1>

Query Syntax :STATus:QUESTionable:NTRansition?

Parameter <NR1> 0~32767

Return parameter <NR1> 0~32767

:STATus:PRESet

Description This command resets the ENABLE register, the PTRansition filter and NTRansition filter on the Operation Status and Questionable Status Registers. The registers/filters will be reset to a default value.

| Default Register/Filter Values | Setting |
|---|---------|
| QUEStionable Status Enable | 0x0000 |
| QUEStionable Status Positive Transition | 0x7FFF |
| QUEStionable Status Negative Transition | 0x0000 |
| Operation Status Enable | 0x0000 |
| Operation Status Positive Transition | 0x7FFF |
| Operation Status Negative Transition | 0x0000 |

Syntax :STATus:PRESet

Source Commands

**[[:SOURce]:CURRent[:LEVel][:IMMediate
][:AMPLitude]**  

Description Sets or queries the current level in amps.
For externally set current levels (from the analog control connector) the set current level is returned.

Syntax [[:SOURce]:CURRent[:LEVel][:IMMediate][:AMPLitude] {<NR2>(A)|MINimum|MAXimum}

Query Syntax [[:SOURce]:CURRent[:LEVel][:IMMediate][:AMPLitude]?

| | | |
|-----------------------------------|-------|---|
| Parameter/Return parameter | <NR2> | 0~105% of the rated current output level. |
| | MIN | Minimum current level. |
| | MAX | Maximum current level. |

| | |
|---------|------------------------------------|
| Example | SOUR:CURR:LEV:IMM:AMPL? +1.0000 |
| | Returns the current level in amps. |

```
[:SOURce]:CURRent[:LEVel]:TRIGgered
[:AMPLitude]
```

| | | |
|------------------|---|--|
| Description | Sets or queries the current level in amps when a software trigger has been generated. | |
| Syntax | [:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude] {<NR2> (A) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:CURRent[:LEVel]:TRIGgered[:AMPLitude]? | |
| Parameter | <NR2> | 0%~105% of the rated current output in amps. |
| | MIN | Minimum current level. |
| | MAX | Maximum current level. |
| Return Parameter | <NR2> | Returns the current level. |

| | |
|---------|--|
| Example | SOUR:CURR:LEV:TRIG:AMPL? 1.0000 Returns the maximum possible current level in amps. |
|---------|--|

[:SOURce]:CURRent:LIMit:AUTO → Query

| | | |
|------------------|---|---|
| Description | Enables or disables the limit on the current setting. | |
| Syntax | [:SOURce]:CURRent:LIMit:AUTO {<bool> OFF ON} | |
| Query Syntax | [:SOURce]:CURRent:LIMit:AUTO? | |
| Parameter | OFF 0 ON 1 | Disable the setting current limit Enable the setting current limit |
| Return parameter | <bool> | Returns the setting in <bool> format. |

| | |
|---------|---|
| Example | SOUR:CURR:LIM:AUTO 0 Disables the current limit. |
|---------|---|




[[:SOURce]:CURRent:PROTection:DElay

| | | |
|------------------|---|-----------------------------------|
| Description | Sets the Delay Time for OCP in seconds. The delay is set to 0.05 by default. | |
| Syntax | [:SOURce]:CURRent:PROTection:DElay {<NR2> MINimum MAXimum} | |
| Query Syntax | [:SOURce]:CURRent:PROTection:DElay? | |
| Parameter | <NR2> | 0.05~2.5 seconds |
| | MAX | The maximum allowed delay time |
| | MIN | The minimum allowed delay time |
| Return parameter | <NR2> | Returns the delay time in seconds |
| Example | SOUR:CURR:PROT:DEL MAX Sets the current protection delay to the maximum. | |




[[:SOURce]:CURRent:PROTection[:LEVel]

| | | |
|------------------|---|---------------------------------------|
| Description | Sets or queries the OCP (over-current protection) level in amps. | |
| Syntax | [:SOURce]:CURRent:PROTection[:LEVel] {<NR2>(A) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:CURRent:PROTection[:LEVel]? | |
| Parameter | <NR2> | Current protection level. |
| | | Minimum: Irated * 0.05 |
| | | Maximum: Irated * 1.1 |
| | MIN | Minimum current level. |
| | MAX | Maximum current level. |
| Return parameter | <NR2> | Returns the current protection level. |
| Example | SOUR:CURR:PROT:LEV? +5.000 Returns the current level in amps. | |

[[:SOURce]:CURRent:PROTection:TRIPped →

| | | |
|------------------|--|----------------------------|
| Description | Returns the state of the current protection circuits. | |
| Query Syntax | [:SOURce]:CURRent:PROTection:TRIPped? | |
| Return parameter | <bool> | Returns protection status. |
| Example | SOUR:CURR:PROT:TRIP? >0 The protection circuit has not been tripped. | |

[[:SOURce]:CURRent:SLEWrate:RISing → →

| | | |
|------------------|--|---|
| Description | Sets or queries the rising current slew rate. This is only applicable for CC slew rate priority (CCLS) mode. | |
| Syntax | [:SOURce]:CURRent:SLEWrate:RISing {<NR2>(A) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:CURRent:SLEWrate:RISing? | |
| Parameter | <NR2> | Per step is between 0.00001A/msec and depend on the unit type: 0.01 /0.02 /0.03 /0.05 A/msec. |
| | MIN | Minimum rising current slew rate is 0.00001A/msec. |
| | MAX | Maximum: Depend on the unit type: 0.01 /0.02 /0.03 /0.05 A/msec. |
| Return parameter | <NR2> | Returns the step current in amps. |
| Example | SOUR:CURR:SLEW:RIS? 0.02000 Sets the rising current slew rate to 0.02000 A/ms. | |




[[:SOURce]:CURRent:SLEWrate:FALLing

| | | |
|------------------|---|---|
| Description | Sets or queries the falling current slew rate. This is only applicable for CC slew rate priority (CCLS) mode. | |
| Syntax | [:SOURce]:CURRent:SLEWrate:FALLing {<NR2>(A) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:CURRent:SLEWrate:FALLing? | |
| Parameter | <NR2> | Per step is between 0.00001A/msec and depend on the unit type: 0.01 /0.02 /0.03 /0.05 A/msec. |
| | MIN | Minimum falling current slew rate is 0.00001A/msec. |
| | MAX | Maximum: Depend on the unit type: 0.01 /0.02 /0.03 /0.05 A/msec. |
| Return Parameter | <NR2> | Returns the step current in amps. |
| Example | SOUR:CURR:SLEW:FALL MAX Sets the falling current slew rate to the maximum. | |

[[:SOURce]:MODE? 

| | | |
|------------------|--|---|
| Description | Returns the status of the output mode (CC, CV, Off) of the power supply. The interface will return "CV" if the supply is in Constant Voltage Mode, "CC" if the supply is in Constant Current Mode or "OFF" if the supply output is off. | |
| Query Syntax | [:SOURce]:MODE? | |
| Return parameter | <string> | Returns the output state as a string, "CC", "CV", "OFF" |
| Example | :SOUR:MODE? >CC The power supply is currently in CC mode. | |


[[:SOURce]:VOLTage[:LEVel][:IMMediate  

| | | |
|------------------|--|--|
| Description | Sets or queries the voltage level in volts. | |
| Syntax | [:SOURce]:VOLTage[:LEVel][:IMMediate][:AMPLitude] {<NR2>(V) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:VOLTage[:LEVel][:IMMediate][:AMPLitude]? | |
| Parameter | <NRf> | 0~105% of the rated output voltage in volts. |
| | MIN | Minimum voltage level |
| | MAX | Maximum voltage level |
| Return parameter | <NR2> | Returns the voltage level in volts |
| Example | SOUR:VOLT:LEV:IMM:AMPL 10 Sets the voltage level to 10 volts. | |

[:SOURce]:VOLTage[:LEVel]:TRIGgered  →
[:AMPLitude] → 


| | | |
|------------------|--|---|
| Description | Sets or queries the voltage level in volts when a trigger in/software trigger has been generated. | |
| Syntax | [:SOURce]:VOLTage[:LEVel]:TRIGgered[:AMPLitude] {<NR2>(V) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:VOLTage[:LEVel]:TRIGgered[:AMPLitude]? | |
| Parameter | <NR2> MIN MAX | 0%~105% of the rated voltage output in volts. Minimum current level. Maximum current level. |
| Return parameter | <NR2> | Returns the voltage level. |
| Example | SOUR:VOLT:LEV:TRIG:AMPL 10 Sets the voltage level to 10 volts when a software trigger is generated. | |

[:SOURce]:VOLTage:LIMit:AUTO



| | | |
|------------------|--|---|
| Description | Sets whether to limit the voltage setting so that it does not exceed the OVP setting or become lower than the UVL setting. If you enable the limit when the OVP setting is lower than the voltage setting, the OVP setting will be set to 105 % of the voltage setting. If you enable the limit when the UVL setting is higher than the voltage setting, the UVL setting will be set equal to the voltage setting. | |
| Syntax | [:SOURce]:VOLTage:LIMit:AUTO {<bool> OFF ON} | |
| Query Syntax | [:SOURce]:VOLTage:LIMit:AUTO? | |
| Parameter | OFF 0 ON 1 | Disable the limit setting Enable the limit setting |
| Return parameter | <bool> | Returns the setting in <bool> format. |
| Example | SOUR:VOLT:LIM:AUTO 0 Disables the limit setting. | |

[:SOURce]:VOLTage:LIMit:LOW



| | | |
|------------------|--|---------------------------------|
| Description | Sets or queries the under voltage (UVL) trip point. | |
| Syntax | [:SOURce]:VOLTage:LIMit:LOW <NR2>(V) MINimum MAXimum | |
| Query Syntax | [:SOURce]:VOLTage:LIMit:LOW? | |
| Parameter/Return | <NR2> | 0 ~ the present setting voltage |
| | MIN | Minimum allowed voltage level |
| | MAX | Maximum allowed voltage level |
| Example | SOUR:VOLT:LIM:LOW MAX Sets the UV> level to its maximum. It can't setting when voltage limit turn off. | |

[:SOURce]:VOLTage:PROTection[:LEVe
l] 

| | | |
|------------------|--|---|
| Description | Sets or queries the overvoltage protection level. | |
| Syntax | [:SOURce]:VOLTage:PROTection[:LEVel] {<NR2>(V) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:VOLTage:PROTection[:LEVel]? | |
| Parameter/Return | <NR2> | Minimum: Vrated * 0.05 Maximum: Vrated * 1.1 |
| | MIN | Minimum OVP level |
| | MAX | Maximum OVP level |
| Example | SOUR:VOLT:PROT:LEV MAX Sets the OVP level to its maximum. | |

[:SOURce]:VOLTage:PROTection:TRIPp
ed 

| | | |
|--------------|---|--|
| Description | Sets or queries the overvoltage protection level. | |
| Query Syntax | [:SOURce]:VOLTage:PROTection:TRIPped? | |

| | | |
|------------------|---|------------------------|
| Return parameter | <bool> | |
| | 0 | Protection not tripped |
| | 1 | Protection tripped |
| <hr/> | | |
| Example | SOUR:VOLT:PROT:TRIP? >0 Indicates that the OVP protection has not been tripped. | |




[[:SOURce]:VOLTage:SLEWrate:RISing

| | | |
|------------------|--|---|
| Description | Sets or queries the rising voltage slew rate. This is only applicable for CV slew rate priority (CVLS) mode. | |
| Syntax | [:SOURce]:VOLTage:SLEWrate:RISing | |
| Query Syntax | {<NR2>(V) MINimum MAXimum} | |
| | [:SOURce]:VOLTage:SLEWrate:RISing? | |
| Parameter | <NR2> | Per step is between 0.0001V/msec and depend on the unit type: 0.1 /0.2 /0.36 /1 V/msec. |
| | MIN | Minimum rising voltage slew rate is 0.0001V/msec. |
| | MAX | Maximum: Depend on the unit type: 0.1 /0.2 /0.36 /1 V/msec. |
| | | |
| Return parameter | <NR2> | Returns the slew rate in V/msec. |
| <hr/> | | |
| Example | SOUR:VOLT:SLEW:RIS MAX Sets the rising voltage slew rate to its maximum. | |





[[:SOURce]:VOLTage:SLEWrate:FALLing

| | | |
|--------------|---|---|
| Description | Sets or queries the falling voltage slew rate. This is only applicable for CV slew rate priority (CVLS) mode. | |
| Syntax | [:SOURce]:VOLTage:SLEWrate:FALLing | |
| | {<NR2>(V) MINimum MAXimum} | |
| Query Syntax | [:SOURce]:VOLTage:SLEWrate:FALLing? | |
| Parameter | <NR2> | Per step is between 0.0001V/msec and depend on the unit type: 0.1 /0.2 /0.36 /1 V/msec. |


| | | |
|------------------|---|--|
| | MIN | Minimum falling voltage slew rate is 0.0001V/msec. |
| | MAX | Maximum: Depend on the unit type: 0.1 /0.2 /0.36 /1 V/msec. |
| Return parameter | <NR2> | Returns the voltage slew rate in V/msec |
| Example | SOUR:VOLT:SLEW:FALL MIN Sets the falling voltage slew rate to its minimum. | |

[[:SOURce]:VOLTage:SENSe



| | | |
|------------------|---|--|
| Description | Sets or queries the remote sense. | |
| Syntax | [[:SOURce]:VOLTage:SENSe {<NR1> INTernal EXTernal} | |
| Query Syntax | [[:SOURce]:VOLTage:SENSe? | |
| Parameter | <NR2> INTernal 0 EXTernal 1 | Sets remote sense 2 wire Sets remote sense 4 wire |
| Return parameter | <NR1> | |
| Example | SOUR:VOLT: SENS EXT Sets remote sense 4 wire. | |

[[:SOURce]:POWER[:LEVel][:IMMediate]][:AMPLitude]



| | | |
|--------------|--|--|
| Description | Sets or queries the constant power level in watts. | |
| Syntax | [[:SOURce]:POWER[:LEVel][:IMMediate]][:AMPLitude] {<NR2> MINimum MAXimum } | |
| Query Syntax | [[:SOURce]:POWER[:LEVel][:IMMediate]][:AMPLitude]? | |
| Parameter | <NR2> MIN MAX | Minimum constant power level. Maximum constant power level. |

Return
parameter

<NR2>

Example

:SOUR:POW:LEV:IMM:AMPL MAX

Sets the constant power to maximum.

[:SOURce]:POWer:CONTRol

Set →

→ Query

| | | |
|------------------|---|---------------------------------------|
| Description | Enables or disables the constant power setting. | |
| Syntax | [:SOURce]:POWer:CONTRol {<bool> OFF ON} | |
| Query Syntax | [:SOURce]:POWer:CONTRol? | |
| Parameter | OFF 0 | Disable the constant power control. |
| | ON 1 | Enable the constant power control. |
| Return parameter | <bool> | Returns the setting in <bool> format. |
| Example | :SOUR:POW:CONT 0 Sets the constant power to disable. | |

System Function Command

:SYSTem:BEEPer[:IMMediate]

Set →

→ Query

| | | |
|------------------|---|--|
| Description | This command causes an audible tone to be generated by the instrument. The duration time is specified in seconds. | |
| Syntax | :SYSTem:BEEPer[:IMMediate] {<NR1> MINimum MAXimum} | |
| Query Syntax | :SYSTem:BEEPer[:IMMediate]? [MINimum MAXimum] | |
| Parameter | <NR1> | 0 ~ 3600 seconds. |
| | MINimum | Sets the beeper time to the minimum (0 seconds) |
| | MAXimum | Sets the beeper time to the maximum (3600 seconds) |
| Return parameter | <NR1> | Returns the remaining beeper duration time in seconds or returns the maximum or minimum beeper time in seconds (for the [MINimum MAXimum] query parameters). |

Example 1 :SYST:BEEP 10
 after a 2 second wait
 :SYST:BEEP?
 >8

The first command turns the beeper on for 10 seconds. After 2 seconds the SYST:BEEP? query returns the remaining beeper time (8 seconds).

Example 2 :SYST:BEEP? MAX
 >3600

Returns the maximum settable beeper time in seconds.

:SYSTem:CONFigure:BEEPer[:STATe]  

| | | |
|-------------|--|--|
| Description | Sets or queries the protect buzzer state on/off. | |
|-------------|--|--|

| | | |
|--------|---|--|
| Syntax | :SYSTem:CONFigure:BEEPer[:STATe] {<bool> OFF ON} | |
|--------|---|--|

| | | |
|--------------|-----------------------------------|--|
| Query Syntax | :SYSTem:CONFigure:BEEPer[:STATe]? | |
|--------------|-----------------------------------|--|

| | | |
|-----------|---------|-----------------------|
| Parameter | OFF 0 | Turns the buzzer off. |
| | ON 1 | Turns the buzzer on. |

| | | |
|------------------|--------|----------------------------|
| Return parameter | <bool> | Returns the buzzer status. |
|------------------|--------|----------------------------|

:SYSTem:CONFigure:BLEeder[:STATe]  

| | | |
|-------------|--|--|
| Description | Sets or queries the status of the Bleed circuit. | |
|-------------|--|--|

| | | |
|--------|---|--|
| Syntax | :SYSTem:CONFigure:BLEeder[:STATe] {<NR1> OFF ON} | |
|--------|---|--|

| | | |
|--------------|------------------------------------|--|
| Query Syntax | :SYSTem:CONFigure:BLEeder[:STATe]? | |
|--------------|------------------------------------|--|

| | | |
|-----------|---------|------------------------------|
| Parameter | OFF 0 | Turns the Bleed circuit off. |
| | ON 1 | Turns the Bleed circuit on. |

| | | |
|------------------|-------|-------------------------------|
| Return parameter | <NR1> | Returns Bleed circuit status. |
|------------------|-------|-------------------------------|

```

:SYSTem:CONFigure:CURRent:CONTRo  (Set) →
|                                     → (Query)

```

| | |
|-------------|---|
| Description | Sets or queries the CC control mode (local control (panel), external voltage control, external resistance control). Note: It can not be set when output on. |
|-------------|---|

| | |
|--------|---|
| Syntax | :SYSTem:CONFigure:CURRent:CONTRol { <NR1> NONE VOLTage RRISing } |
|--------|---|

| | |
|--------------|------------------------------------|
| Query Syntax | :SYSTem:CONFigure:CURRent:CONTRol? |
|--------------|------------------------------------|

| Parameter | <NR1> | Description |
|-----------|-------------|---|
| | 0 NONE | Local (Panel) control |
| | 1 VOLTage | External voltage control |
| | 2 RRISing | External resistance control; 10kΩ: maximum current setting. |

| | | |
|------------------|-------|--|
| Return Parameter | <NR1> | Returns the current control configuration. |
|------------------|-------|--|

:SYSTem:CONFigure:VOLTage:CONTRol 
| 


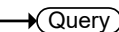
| | |
|-------------|---|
| Description | Sets or queries the CV control mode (local control (panel), external voltage control, external resistance control). Note: It can not be set when output on. |
|-------------|---|

| | |
|--------|---|
| Syntax | :SYSTem:CONFigure:VOLTage:CONTRol { <NR1> NONE VOLTage RRISing } :SYSTem:CONFigure:VOLTage:CONTRol? |
|--------|---|

| | |
|--------------|--|
| Query Syntax | |
|--------------|--|

| Parameter | <NR1> | Description |
|-----------|-------------|---|
| | 0 NONE | Local (Panel) control |
| | 1 VOLTage | External voltage control |
| | 2 RRISing | External resistance control; 10kΩ: maximum voltage setting. |

| | | |
|------------------|-------|--|
| Return Parameter | <NR1> | Returns the current control configuration. |
|------------------|-------|--|

:SYSTem:CONFigure:OUTPut:PON[:ST 
ATe] 

| | |
|-------------|---|
| Description | Sets the output state at power-on. This is the equivalent to the PWR On Config menu(Power On Status) settings. These settings only apply after the unit has been reset. |
|-------------|---|

| | | |
|------------------|---------------------------------------|--|
| Syntax | :SYSTem:CONFIgure:OUTPut:PON[:STATe] | |
| Return Syntax | {<NR1>}{SAFE OFF}{FORCE ON} AUTO} | |
| | :SYSTem:CONFIgure:OUTPut:PON[:STATe]? | |
| Parameter | SAFE OFF 0 | The PPX turns on in the same state the unit was in prior to the previous shut down. The output is set to off (default). |
| | FORCE ON 1 | The PPX turns on in the same state the unit was in prior to the previous shut down. The output is set to on. |
| | AUTO 2 | The PPX turns on in the same state the unit was in prior to the previous shut down, but with the same output on/off setting. |
| Return parameter | 0 | The power on output setting is "SAFE" or "OFF". |
| | 1 | The power on output setting is "FORCE" or "ON". |
| | 2 | The power on output setting is "AUTO". |

Set →

:SYSTem:CONFIgure:OUTPut:EXTernal:MODE

→ Query

| | | |
|------------------|--|--|
| Description | Sets the logic used to turn the output on or off when using an external contact. This is the equivalent to the EXT Control menu(Output Type)settings. | |
| Syntax | :SYSTem:CONFIgure:OUTPut:EXTernal:MODE | |
| Return Syntax | {<NR1> LOW HIGH} | |
| | :SYSTem:CONFIgure:OUTPut:EXTernal:MODE? | |
| Parameter | LOW 0 | Active low |
| | HIGH 1 | Active high |
| Return Parameter | <NR1> | Returns external mode of the instrument. |

:SYSTem:CONFIgure:OUTPut:EXTernal[:STATe]

Set →

→ Query

| | |
|-------------|--|
| Description | Sets the output on or off when using an external contact. This is the equivalent to the EXT Control menu(Output Enable)settings. |
|-------------|--|

| | |
|--------|--|
| Syntax | :SYSTem:CONFigure:OUTPut:EXTernal[:STATe]{<bool> OFF ON} |
|--------|--|

| | |
|--------------|--|
| Query Syntax | :SYSTem:CONFigure:OUTPut:EXTernal[:STATe]? |
|--------------|--|

| | | |
|-----------|---------|----------------------------------|
| Parameter | OFF 0 | External output control disable. |
| | ON 1 | External output control enable. |

| | | |
|------------------|-------|---|
| Return Parameter | <NR1> | Returns the output external control status. |
|------------------|-------|---|

:SYSTem:CONFigure:TRIGger:INPut:SO 
URce 

| | |
|-------------|--|
| Description | Sets or queries what action will be performed on receiving a trigger.This is the equivalent to the TRIG Control menu(Trigin Action)settings. |
|-------------|--|

| | |
|--------|--|
| Syntax | :SYSTem:CONFigure:TRIGger:INPut:SOURce{<NR1> NONE OUTPut SETTing MEMory} |
|--------|--|

| | |
|--------------|---|
| Query Syntax | :SYSTem:CONFigure:TRIGger:INPut:SOURce? |
|--------------|---|

| | | |
|-----------|-------------|--|
| Parameter | NONE 0 | No input trigger. |
| | OUTPut 1 | Toggles the output on receiving a trigger. |
| | SETTing 2 | Sets the voltage/current on receiving a trigger. |
| | MEMory 3 | Loads a memory setting on receiving a trigger. |

| | | |
|------------------|-------|---------------------------|
| Return Parameter | <NR1> | Returns the input source. |
|------------------|-------|---------------------------|

:SYSTem:CONFigure:TRIGger:INPut:LEVel  

| | | |
|------------------|--|----------------------------------|
| Description | Sets or queries the logic used to input trigger level. This is the equivalent to the TRIG Control menu (Trigin Level)settings. | |
| Syntax | :SYSTem:CONFigure:TRIGger:INPut:LEVel {<NR1> LOW HIGH} | |
| Query Syntax | :SYSTem:CONFigure:TRIGger:INPut:LEVel? | |
| Parameter | LOW 0 | Active high. |
| | High 1 | Active low. |
| Return Parameter | <NR1> | Returns the trigger input level. |

:SYSTem:CONFigure:TRIGger:OUTPut:SOURce  

| | | |
|------------------|--|--|
| Description | Sets or queries the output trigger source. This is the equivalent to the TRIG Control menu (Trigout Source)settings. | |
| Syntax | :SYSTem:CONFigure:TRIGger:OUTPut:SOURce {<NR1> NONE OUTPut SETTing MEMory} | |
| Query Syntax | :SYSTem:CONFigure:TRIGger:OUTPut:SOURce? | |
| Parameter | NONE 0 | No output trigger. |
| | OUTPut 1 | Output trigger is generated by a change in the output. |
| | SETTing 2 | Output trigger is generated when a setting is changed. |
| | MEMory 3 | Output trigger is generated when a memory setting is loaded. |
| Return Parameter | <NR1> | Returns the output source. |

:SYSTem:CONFigure:TRIGger:OUTPut:WI 
DTh 

| | | |
|------------------|---|---------------------|
| Description | Sets or queries the output trigger pulse width. This is the equivalent to the TRIG Control menu(Trigout Width)settings. | |
| Syntax | :SYSTem:CONFigure:TRIGger:OUTPut:WIDTh {<NR2> MINimum MAXimum} | |
| Query Syntax | :SYSTem:CONFigure:TRIGger:OUTPut:WIDTh? [MINimum MAXimum] | |
| Parameter | <NR2> | 1.0 ~100.0 unit:ms. |
| | MINimum | 1.0 unit:ms |
| | Maximum | 100.0 unit:ms |
| Return Parameter | <NR2> | |
| Example | :SYST:CONF:TRIG:OUTP:WIDT 20.0 Sets the output trigger pulse 20.0ms. | |

:SYSTem:CONFigure:TRIGger:OUTPut:L 
EVel 

| | | |
|------------------|---|---|
| Description | Sets or queries the logic used to output trigger level. This is the equivalent to the TRIG Control menu (Trigin Level)settings. | |
| Syntax | :SYSTem:CONFigure:TRIGger:OUTPut:LEVel {<NR1> LOW HIGH} | |
| Query Syntax | :SYSTem:CONFigure:TRIGger:OUTPut:LEVel? | |
| Parameter | <NR1> | |
| | LOW 0 | Sets the output trigger to active low. |
| | High 1 | Sets the output trigger to active high. |
| Return Parameter | <NR1> | Returns the trigger output level. |

:SYSTem:CONFigure:TEMPerature:CON 
Trol 

| | | |
|------------------|--|---|
| Description | Sets or queries the temperature control (K-Type Thermocouple) on/off. This is the equivalent to the Temperature menu (Control) settings. | |
| Syntax | :SYSTem:CONFigure:TEMPerature:CONTRol {<bool> OFF ON} | |
| Query Syntax | :SYSTem:CONFigure:TEMPerature:CONTRol? | |
| Parameter | OFF 0 | Turns the temperature control off. |
| | ON 1 | Turns the temperature control on. |
| Return Parameter | <bool> | Returns the temperature control status. |

:SYSTem:CONFigure:TEMPerature:UNIT  

| | | |
|------------------|---|--------------------------------------|
| Description | Sets or queries the temperature unit. This is the equivalent to the Temperature menu (Unit) settings. | |
| Syntax | :SYSTem:CONFigure:TEMPerature:UNIT {<NR1> CELSius FAHREnheit } | |
| Query Syntax | :SYSTem:CONFigure:TEMPerature:UNIT? | |
| Parameter | CELSius | Sets unit temperature in Celsius. |
| | FAHREnheit 1 | Sets unit temperature in Fahrenheit. |
| Return Parameter | <NR1> | Returns the unit temperature. |

:SYSTem:CONFigure:TEMPerature:OUTPut:SAFE  

| | | |
|--------------|---|--|
| Description | Sets or queries the temperature output safe on/off. Monitor the temperature when the output is turned on and turn off the output when the monitored temperature is reached. This is the equivalent to the Temperature menu (Output safe) setting. Note: The temperature control is turned on first. | |
| Syntax | :SYSTem:CONFigure:TEMPerature:OUTPut:SAFE {<bool> OFF ON} | |
| Query Syntax | :SYSTem:CONFigure:TEMPerature:OUTPut:SAFE? | |

| | | |
|------------------|---------|---|
| Parameter | OFF 0 | Sets the temperature output safe off. |
| | ON 1 | Sets the temperature output safe on. |
| Return Parameter | <bool> | Returns the temperature output safe status. |


:SYSTem:CONFigure:TEMPerature:MONi 
tor 

| | | |
|------------------|--|--|
| Description | Sets or queries the monitored temperature. This is the equivalent to the Temperature menu (Monitor)settings. | |
| Syntax | :SYSTem:CONFigure:TEMPerature:MONitor{<NR2> MINimum MAXimum} | |
| Query Syntax | :SYSTem:CONFigure:TEMPerature:MONitor?[MINimum MAXimum] | |
| Parameter | <NR2> | -200~1372(Celsius) / -328~2501.6(Fahrenheit) |
| | MINimum | -200(Celsius) / -328(Fahrenheit) |
| | MAXimum | 1372(Celsius) / 2501.6(Fahrenheit) |
| Return Parameter | <NR2> | Returns the monitor temperature. |


:SYSTem:CONFigure:TEMPerature:ADJu 
st 

| | | |
|--------------|--|--|
| Description | Sets or queries the adjust temperature. This is the equivalent to the Temperature menu (Adjust)settings. | |
| Syntax | :SYSTem:CONFigure:TEMPerature:ADJust{<NR2> MINimum MAXimum} | |
| Query Syntax | :SYSTem:CONFigure:TEMPerature:ADJust?[MINimum MAXimum] | |

| | | |
|---------------------|------------------|----------------------------------|
| Parameter | <NR2> MINimum | -2.5(Celsius) / -4.5(Fahrenheit) |
| | MAXimum | 2.5(Celsius) / 4.5(Fahrenheit) |
| Return Parameter | <NR1> | Returns the adjust temperature. |



:SYSTem:COMMunicate:ENABLE

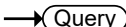

| | |
|-------------|---|
| Description | Enables/Disables GP-IB, USB or other remote interfaces such as Sockets and the Web Server. This setting is only applied after the unit has been reset. |
|-------------|---|

| | |
|--------|--|
| Syntax | :SYSTem:COMMunicate:ENABLE {<NR1> OFF ON AUTO FULL RS232 RS485,GP- IB USBCdc SOCKets WEB UART} |
|--------|--|

| | |
|--------------|--|
| Query Syntax | :SYSTem:COMMunicate:ENABLE? { GP-IB USBCdc SOCKets WEB UART} |
|--------------|--|

| | | |
|-------------|-----------|----------------------------------|
| Parameter 1 | OFF 0 | Disables the selected interface. |
| | ON 1 | Enables the selected interface. |
| | AUTO 1 | USB-CDC selected auto. |
| | FULL 2 | USB-CDC selected full. |
| | RS232 1 | UART selected RS232. |
| | RS485 2 | UART selected RS485. |

| | | |
|-------------|---------|-----------------------|
| Parameter 2 | GP-IB | Select GP-IB |
| | USBCdc | Select USB-CDC |
| | SOCKets | Select Sockets |
| | WEB | Select the web server |
| | UART | Select the UART |

| | | |
|---------------------|--------|--|
| Return Parameter | <bool> | Returns the status of the selected mode. |
|---------------------|--------|--|

| | |
|---------|--|
| Example | SYST:COMM:ENAB 1,USBC Turns the USB-CDC interface auto. |
|---------|--|

| | |
|---------------|--|
| Query Example | SYST:COMM:ENAB? USBC 1 Queries the USB-CDC state, returns 1 (USB-CDC is auto). |
|---------------|--|

:SYSTem:COMMunicate:GP-IB[:SELF] 
:ADDResS 

| | |
|------------------|--|
| Description | Sets or queries the GP-IB address. Note: the setting will only be valid after the power has been cycled. |
| Syntax | :SYSTem:COMMunicate:GP-IB[:SELF]:ADDResS <NR1> |
| Query Syntax | :SYSTem:COMMunicate:GP-IB[:SELF]:ADDResS? |
| Parameter/Return | <NR1> 0~30 |
| Example | SYST:COMM:GP-IB:SELF:ADDR 15 Sets the GP-IB address to 15. |

:SYSTem:COMMunicate:LAN:IPADdress 


| | |
|------------------|---|
| Description | Sets or queries LAN IP address. Note: the setting will only be valid after the power has been cycled. |
| Syntax | :SYSTem:COMMunicate:LAN:IPADdress <string> |
| Query Syntax | :SYSTem:COMMunicate:LAN:IPADdress? |
| Parameter/Return | <string> LAN IP address in string format ("address") Applicable ASCII characters: 20H to 7EH |
| Example | SYST:COMM:LAN:IPAD "172.16.5.111" Sets the IP address to 172.16.5.111. |

:SYSTem:COMMunicate:LAN:GATEway 


| | |
|------------------|--|
| Description | Sets or queries the Gateway address. Note: the setting will only be valid after the power has been cycled. |
| Syntax | :SYSTem:COMMunicate:LAN:GATEway <string> |
| Query Syntax | :SYSTem:COMMunicate:LAN:GATEway? |
| Parameter/Return | <string> Gateway address in string format ("address") Applicable ASCII characters: 20H to 7EH |
| Example | SYST:COMM:LAN:GATE "172.16.0.254" Sets the LAN gateway to 172.16.0.254. |

:SYSTem:COMMunicate:LAN:SMASk  

| | |
|------------------|--|
| Description | Sets or queries the LAN subnet mask. Note: the setting will only be valid after the power has been cycled. |
| Syntax | :SYSTem:COMMunicate:LAN:SMASk <string> |
| Query Syntax | :SYSTem:COMMunicate:LAN:SMASk? |
| Parameter/Return | <string> Subnet mask in string format ("mask") Applicable ASCII characters: 20H to 7EH |
| Example | SYST:COMM:LAN:SMASk "255.255.0.0" Sets the LAN mask to 255.255.0.0. |

:SYSTem:COMMunicate:LAN:MAC 

| | |
|------------------|--|
| Description | Returns the unit MAC address as a string. The MAC address cannot be changed. |
| Query Syntax | :SYSTem:COMMunicate:LAN:MAC? |
| Return parameter | <string> Returns the MAC address in the following format "FF-FF-FF-FF-FF-FF" |
| Example | SYST:COMM:LAN:MAC? 02-80-AD-20-31-B1 Returns the MAC address. |

:SYSTem:COMMunicate:LAN:DHCP  

| | |
|------------------|---|
| Description | Turns DHCP on/off. Queries the DHCP status. Note: the setting will only be valid after the power has been cycled. |
| Syntax | :SYSTem:COMMunicate:LAN:DHCP {<bool> OFF ON} |
| Query Syntax | :SYSTem:COMMunicate:LAN:DHCP? |
| Parameter | OFF 0 DHCP off ON 1 DHCP on |
| Return parameter | <bool> Returns the DHCP status. |

:SYSTem:COMMunicate:LAN:DNS

Set →
→ Query

| | |
|------------------|--|
| Description | Sets or queries the DNS address. Note: the setting will only be valid after the power has been cycled. |
| Syntax | :SYSTem:COMMunicate:LAN:DNS <string> |
| Query Syntax | :SYSTem:COMMunicate:LAN:DNS? |
| Parameter/Return | <string> DNS in string format ("mask") Applicable ASCII characters: 20H to 7EH |
| Example | SYST:COMM:LAN:DNS "172.16.1.252" Sets the DNS to 172.16.1.252. |

:SYSTem:COMMunicate:RLState


Set →
→ Query

| | |
|----------------------------|--|
| Description | Enables or disables local/remote state of the instrument. |
| Syntax | :SYSTem:COMMunicate:RLState {LOCAL REMOte RWLock} |
| Query Syntax | :SYSTem:COMMunicate:RLState? |
| Parameter/Return parameter | LOCAL All keys are valid. This instrument is controlled by the front panel controls. REMOte All keys are invalid, except for the [shift+local] key and the ability to turn the output on/off. RWLock All keys are invalid. The instrument can only be controlled remotely. |
| Example | :SYST:COMM:RLST LOCAL Sets the operating mode to local. |

:SYSTem:COMMunicate:TCPIp:CONTRol → Query


| | |
|------------------|---|
| Description | Queries the socket port number. |
| Query Syntax | :SYSTem:COMMunicate:TCPIp:CONTRol? |
| Return parameter | <NR1> 0000 ~ 9999 |
| Example | SYST:COMM:TCP:CONT? >2268 Returns the socket port number. |

:SYSTem:COMMunicate:SERial[:RECeiv
e]
:TRANsmit:BAUD



| | | |
|------------------|---|---|
| Description | Sets or queries the UART baud rate. Note: the setting will only be valid after the power has been cycled. | |
| Syntax | :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit | |
| Query Syntax | :BAUD <NR1> :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :BAUD? | |
| Parameter/Return | <NR1> | 2400, 4800, 9600, 19200, 38400, 57600, 115200 |
| Example | SYST:COMM:SER:TRAN:BAUD? >2400 Returns the baud rate settings. | |


:SYSTem:COMMunicate:SERial[:RECeiv
e]
:TRANsmit:BITS



| | | |
|----------------------------|---|--------|
| Description | Sets or queries the UART number of data bits. Note: the setting will only be valid after the power has been cycled. | |
| Syntax | :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit | |
| Query Syntax | :BITS <NR1> :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :BITS? | |
| Parameter/Return parameter | <NR1> | |
| | 0 | 7 bits |
| | 1 | 8 bits |


| | |
|---------|--|
| Example | SYST:COMM:SER:TRAN:BITS? >1 Indicates that 8 data bits are used for the UART connection. |
|---------|--|

:SYSTem:COMMunicate:SERial[:RECeiv
e]
:TRANsmit:PARity



| | | |
|----------------------------|--|------|
| Description | Sets or queries the parity of the UART connection. Note: the setting will only be valid after the power has been cycled. | |
| Syntax | :SYSTem:COMMunicate:SERial[:RECeiv]e]:TRANsmit | |
| Query Syntax | :PARity <NR1> | |
| | :SYSTem:COMMunicate:SERial[:RECeiv]e]:TRANsmit | |
| | :PARity? | |
| Parameter/Return parameter | 0 | None |
| | 1 | Odd |
| | 2 | Even |
| Example | SYST:COMM:SER:TRAN:PARity? >1 Indicates that odd parity is used for the UART connection. | |

:SYSTem:COMMunicate:SERial[:RECeiv
e]
:TRANsmit:SBITs



| | | |
|------------------|---|------------|
| Description | Sets or queries the number of stop bits used for the UART connection. Note: the setting will only be valid after the power has been cycled. | |
| Syntax | :SYSTem:COMMunicate:SERial[:RECeiv]e]:TRANsmit | |
| | :SBITs<NR1> | |
| Query Syntax | :SYSTem:COMMunicate:SERial[:RECeiv]e]:TRANsmit | |
| | :SBITs? | |
| Parameter/Return | 0 | 1 stop bit |

| | | |
|-------------|---|-------------|
| n parameter | 1 | 2 stop bits |
| Example | SYST:COMM:SER:TRAN:SBITs? >1 Indicates that one stop bit is used for the UART connection. | |

:SYSTem:COMMunicate:USB:FRONT:STATe

→ Query

| | | |
|------------------|---|-------------------|
| Description | Queries the front panel USB-A port state. | |
| Query Syntax | :SYSTem:COMMunicate:USB:FRONT:STATe? | |
| Return parameter | 0 | <NR1>Absent |
| | 1 | <NR1>Mass Storage |

:SYSTem:COMMunicate:USB:REAR:STATe

→ Query

| | | |
|------------------|--|--------------------------|
| Description | Queries the rear panel USB-B port state. | |
| Query Syntax | :SYSTem:COMMunicate:USB:REAR:STATe? | |
| Return parameter | 0 | <NR1>Absent |
| | 1 | <NR1>Connected to the PC |

:SYSTem:ERRor

→ Query

| | | |
|------------------|--|--|
| Description | Queries the error queue. The last error message is returned. A maximum of 32 errors are stored in the error queue. | |
| Query Syntax | :SYSTem:ERRor? | |
| Return parameter | <string> | Returns an error code followed by an error message as a single string. |
| Example | SYSTem:ERRor? -100, "Command error" | |

Set →

:SYSTem:KLOCK

→ Query

| | | |
|------------------|---|------------------------------|
| Description | Enables or disables the front panel key lock. | |
| Syntax | :SYSTem:KLOCK {<bool> OFF ON } | |
| Query Syntax | :SYSTem:KLOCK? | |
| Parameter | OFF 0 | Panel keys unlocked |
| | ON 1 | Panel keys locked |
| Return parameter | <bool> | Returns the key lock status. |

Set →

:SYSTem:KEYLock:MODE

→ Query

| | | |
|----------------------------|---|----------------------------------|
| Description | Sets or queries the keylock mode. This setting is the equivalent to the Keyboard menu(Lock Mode) setting. | |
| Syntax | :SYSTem:KEYLock {<bool> OFF ON} | |
| Query Syntax | :SYSTem:KEYLock? | |
| Parameter/Return parameter | 0 OFF | Panel lock: allow output off. |
| | 1 ON | Panel lock: allow output on/off. |

:SYSTem:ERRor:ENABLE

Set →

| | | |
|-------------|---|--|
| Description | Clears the Error Queue and enables all error messages to be placed in the System Error Queue. | |
| Syntax | :SYSTem:ERRor:ENABLE | |

:SYSTem:PRESet

Set →

| | | |
|-------------|-----------------------------|--|
| Description | Loads the default settings. | |
| Syntax | :SYSTem:PRESet | |

:SYSTem:VERSion

→ Query

| | | |
|--------------|--|---------------------------------------|
| Description | Returns the version of the PPX SCPI version. | |
| Query Syntax | :SYSTem:VERSion? | |
| Return | <string> | Returns the SCPI version as a string. |

Query Example SYST:VERS?
>1999.9

:SYSTem:KEYBoard:BEEPer

Set →

→ Query

Description Sets or queries the keyboard buzzer state on/off. This is the equivalent to the Buzzer menu (Keyboard)settings.

Syntax :SYSTem:KEYBoard:BEEPer {<bool>|OFF|ON}

Query Syntax :SYSTem:KEYBoard:BEEPer?

Parameter OFF | 0 Turns the keyboard buzzer off.
ON | 1 Turns the keyboard buzzer on.

Return Parameter <bool> Returns the keyboard buzzer status.

:SYSTem:CAPacity:AHOur

Set →

→ Query

Description Sets or queries the Ampere-hour capacity. This is the equivalent to the Ah/Wh Meter menu (AHour) settings. Note: Install the license first.

Syntax :SYSTem:CAPacity:AHOur
{<NR2>|MINimum|MAXimum}

Query Syntax :SYSTem:CAPacity:AHOur? [MINimum|MAXimum]

Parameter <NR2> 0.001~999999999.999
MINimum 0.001
MAXimum 999999999.999

Return Parameter <NR2> Returns the Ampere-hour capacity.

:SYSTem:CAPacity:WHour

Set →

→ Query

Description Sets or queries the Watt-hour capacity. This is the equivalent to the Ah/Wh Meter menu (WHour) settings. Note: Install the license first.

Syntax :SYSTem:CAPacity:WHour
{<NR2>|MINimum|MAXimum}

Query Syntax :SYSTem:CAPacity:WHour? [MINimum|MAXimum]

| | | |
|------------------|---------|---------------------------------|
| Parameter | <NR2> | 0.001~999999999.999 |
| | MINimum | 0.001 |
| | MAXimum | 999999999.999 |
| Return Parameter | <NR2> | Returns the Watt-hour capacity. |

Set →

:SYSTem:CAPacity:MODE

→ Query

| | | |
|------------------|---|--|
| Description | Sets or queries the capacity mode. This is the equivalent to the AH/WH Meter menu (Mode) settings. Note: Install the license first. | |
| Syntax | :SYSTem:CAPacity:MODE {<NR1> DISable AHOuR WHOUr} | |
| Query Syntax | :SYSTem:CAPacity:MODE? | |
| Parameter | Disable 0 | Sets capacity mode in Disable. |
| | AHOuR 1 | Sets capacity mode in AHour, The sets will turn off output when Ampere-hour capacity is reached. |
| | WHOUr 2 | Sets capacity mode in WHour, The sets will turn off output when Watt -hour capacity is reached. |
| Return Parameter | <NR2> | Returns the capacity mode. |

:SYSTem:CAPacity:STATe→ **Query**

Description Queries the capacity state. Monitor the capacity when the output is turned on. Turn off the output when the monitored AHour/Whour capacity is reached. Note: The capacity mode is selected Ahour/Whour first.

Query Syntax :SYSTem:CAPacity:STATe?

Parameter 0 AHour/Whour capacity isn't reached.
 1 AHour/Whour capacity is reached.

Return Parameter <NR1> Returns the capacity state.

Fetch Commands

:FETCh:AHOu? 125

:FETCh:WHOu? 125

:FETCh:DLOG? 126

:FETCh:AHOu?→ **Query**

Description Queries the measurement of Ampere-hour capacity.

Note: Install the license first.

Query Syntax :FETCh:AHOu?

Return Parameter <NR1> Returns the the measurement of Ampere - hour capacity.

:FETCh:WHOu?→ **Query**


Description Queries the measurement of Watt-hour capacity.


Note: Install the license first.

Query Syntax :FETCh:WHOu?

Return Parameter <NR1> Returns the the measurement of Watt -hour capacity.
 >

:FETCh:DLOG?



| | | |
|--|--|---|
| Description | Queries the measurement of Watt-hour capacity. Note: Install the license first. | |
|  Note | <p>The maximum number of data that can be returned at one time when logging is started is 1000. If the data is accumulated in the main body, issue the command again to acquire the data.</p> <p>If there is no data in the main body, the data with 0 data will be returned. Also, if logging is not started, no data will be returned.</p> <p>The LF of <end_code> indicating the end of data is not included in the number of bytes of the binary. The LF command is added to ensure the consistency of communication processing.</p> | |
| Query Syntax | :FETCh:DLOGr? | |
| Query Format | #<number digits in byte count><byte count><Byte1><Byte2>...<ByteN>+NL.#8<byte count(8B)><reserved(2B)><checksum(4B)><start number(4B)><sample period(4B)><Cell total(4B)>{Cell-1}{Cell-2}{Cell-3}...{Cell-N}<end_code(1B)>{Cell-N} :<state(4B)><vmeas(4B)><imeas(4B)><tmeas(4B)>N : <Cell total>; | |
| Query | Byte | Contents |
| # | 1 | Initialization character |
| <number digits in byte count> | 1 | Byte length (ASCII format) |
| <byte count> | 8 | Number of bytes (ASCII format) |
| <reserved> | 2 | reserve |
| <checksum> | 4 | Checksum of response data The value obtained by adding the bytes from <start number> to {Cell-N}. |
| <start number> | 4 | Number of the first data in the response data Number since logging started The value ranges from 0 to 1,999,999,999 and returns to 0 when it exceeds 1,999,999,999. |

| | | | |
|------------------------------|---|--|---------------|
| <sample period> | 4 | Logging interval unit is mS Set logging interval | |
| <number of data> {Cell-N} | 4 12 | Number of data in {Cell-N} Returns the measurement data in the order of status, voltage, current. | |
| <end_code> | 1 | Returns LF as the exit code after the byte data. | |
| {Cell-N}の応答 | | | |
| <state> | 4 | Status information is returned in 32 bits. | |
| <vmeas> | 4 | Voltage measurement unit is mV | |
| <imeas> | 4 | Current measurement value unit is mA | |
| <tmeas> | 4 | Temperature measurement unit is °C or °F | |
| # 8 00000246 1 2 3 | # <len> <byte count> is returned as an ASCII string. In the example on the left, 246 bytes of binary data will be returned. All binary data except <reserved> are 4-byte integer values. If the byte data is the following 4 bytes, it will be 1000. $232\ 3\ 0\ 0 = 3 \times 256 + 232 = 1000$ When the voltage value is 1000, the unit is mV, so it is 1V. Below is the meaning of each bit of status information. (bit0 = LSB, bit31 = MSB) | | |
| bit 0 | Calibration mode | bit 16 | OVP |
| bit 1 | Locked state | bit 17 | OCP |
| bit 2 | (unused) | bit 18 | (unused) |
| bit 3 | Output OFF/ON | bit 19 | AC power OFF |
| bit 4 | Remote state | bit 20 | OTP |
| bit 5 | Waiting for trigger | bit 21 | (unused) |
| bit 6 | (unused) | bit 22 | (unused) |
| bit 7 | (unused) | bit 23 | (unused) |
| bit 8 | CV Operation | bit 24 | Voltage Limit |
| bit 9 | (unused) | bit 25 | Current Limit |
| bit 10 | CC Operation | bit 26 | (unused) |
| bit 11 | Output ON Delay | bit 27 | Shut down |
| bit 12 | Output OFF Delay | bit 28 | Power Limit |

| | | | | |
|--|--------|-----------|--------|-------------|
| | bit 13 | (unused) | bit 29 | Sense alarm |
| | bit 14 | TEST Mode | bit 30 | (unused) |
| | bit 15 | (unused) | bit 31 | (unused) |

Query example FETC:DLOG?
 > #800000246*****<LF>
 Returns log data. The * part of the response example is the binary data part, which is 246 bytes.

Trigger Commands

| | | |
|-----------------------------------|---|--|
| | | Set → |
| | | → Query |
| :TRIGger:OUTPut:SOURce | | |
| Description | Sets or queries the trigger source of the output trigger. | |
| Syntax | :TRIGger:OUTPut:SOURce {BUS IMMediate EXTernal} | |
| Query Syntax | :TRIGger:OUTPut:SOURce? | |
| Parameter/ Return parameter | BUS | Output trigger is generated by the bus. |
| | IMMediate | Output trigger is immediately generated. |
| | EXTernal | The output trigger is generated when an external signal triggers it. |
| Example | :TRIGger:OUTPut:SOURce? Sets the output trigger source to EXT. | |

| | | |
|------------------------------------|---|-------|
| | | Set → |
| :TRIGger:OUTPut[:IMMediate] | | |
| Description | Generates an immediate trigger for the output trigger system. | |
| Syntax | :TRIGger:OUTPut[:IMMediate] | |
| Example | :TRIG:OUTP | |

| | | |
|------------------------------------|--|---------|
| | | Set → |
| | | → Query |
| :TRIGger[:TRANSient]:SOURce | | |
| Description | Sets or queries the source of the transient trigger. | |

| | | |
|-----------------------------------|---|---|
| Syntax | :TRIGger[:TRANsient]:SOURce {BUS IMMediate EXTernal} | |
| Query Syntax | :TRIGger[:TRANsient]:SOURce? | |
| Parameter/ Return parameter | BUS | Transient trigger is generated by the bus. |
| | IMMediate | Transient trigger is immediately generated. |
| | EXTernal | The transient trigger is generated when an external signal triggers it. |
| Example | :TRIG:SOUR? EXT Sets the transient trigger source to EXT. | |

:TRIGger[:TRANsient][:IMMediate] 

| | |
|-------------|--|
| Description | Generates an immediate trigger for the transient trigger system. |
| Syntax | :TRIGger[:TRANsient][:IMMediate] |
| Example | :TRIG |

Trigger Command Examples

1. The transient system for the trigger in immediate mode.

| | | |
|-----------|--|---|
| Example 1 | TRIG:TRAN:SOUR IMM CURR:TRIG MAX VOLT:TRIG 5 INIT:NAME TRAN | <==The current changes to the maximum, and the voltage changes to 5V. |
| | | |

2. The transient system for the trigger in BUS mode.

| | |
|-----------|--|
| Example 2 | TRIG:TRAN:SOUR BUS CURR:TRIG MAX VOLT:TRIG 5 INIT:NAME TRAN |
|-----------|--|

| | |
|---------------------|---|
| TRIG:TRAN (or *TRG) | <==The current changes to the maximum, and the voltage changes to 5V. |
|---------------------|---|

3. The output system for the trigger in immediate mode.

| | | |
|-----------|---|------------------------------|
| Example 3 | TRIG:OUTP:SOUR IMM OUTP:TRIG 1 INIT:NAME OUTP | <==The output changes to ON. |
|-----------|---|------------------------------|

4. The output system for the trigger in BUS mode.

| | | |
|-----------|--|------------------------------|
| Example 4 | TRIG:OUTP:SOUR BUS OUTP:TRIG 1 INIT:NAME OUTP TRIG:OUTP (or *TRG) | <==The output changes to ON. |
|-----------|--|------------------------------|

IEEE 488.2 Common Commands

*CLS

Set

 →

| | |
|-------------|---|
| Description | The *CLS command clears all the event registers, including the status byte, event status and error queue. |
| Syntax | *CLS |

*ESE

Set

→

Query

| | | |
|------------------|--|---|
| Description | Sets or queries the Standard Event Status Enable register. | |
| Syntax | *ESE <NR1> | |
| Query Syntax | *ESE? | |
| Parameter | <NR1> | 0~255 |
| Return parameter | <NR1> | Returns the bit sum of the Standard Event Status Enable register. |

***ESR**

→ Query

| | | |
|------------------|--|--|
| Description | Queries the Standard Event Status (Event) register. The Event Status register is cleared after it is read. | |
| Query Syntax | *ESR? | |
| Return parameter | <NR1> | Returns the bit sum of the Standard Event Status (Event) register and clears the register. |

***IDN**

→ Query

| | | |
|------------------|---|--|
| Description | Queries the manufacturer, model name, serial number, and firmware version of the PPX. | |
| Query Syntax | *IDN? | |
| Return parameter | <string> | <p>Returns the instrument identification as a string in the following format:</p> <p>TEXIO,PPX36-3,XXXXXXX,VX.XX</p> <p>Manufacturer: TEXIO</p> <p>Model number : PPX36-3</p> <p>Serial number : XXXXXXX</p> <p>Firmware version : VX.XX</p> |

Set →

***OPC**

→ Query

Description The *OPC command sets the OPC bit (bit0) of the Standard Event Status Register when all current commands have been processed.

The *OPC? Query returns 1 when all the outstanding commands have completed.

Syntax *OPC

Query Syntax *OPC?

Return parameter 1 Returns 1 when all the outstanding commands have completed.

*RCL

Set →

Description Recalls the contents stored in memory slot M1 ~ M10.

Syntax *RCL {<NR1>|MAX|MIN}

Parameter

| | |
|-------|----------------------------------|
| <NR1> | 0 ~ 9 (as memory M1 ~ M10) |
| MIN | Recalls the M1 memory contents. |
| MAX | Recalls the M10 memory contents. |

*RST

Set →

Description Performs a device reset. Configures the unit to a known configuration (default settings). This known configuration is independent of the usage history.

Syntax *RST

*SAV

Set →

Description Saves the settings into memory slot M1 ~ M10.

Syntax *SAV {<NR1>|MIN|MAX}

Return parameter

| | |
|-------|--------------------------------|
| <NR1> | 0 ~ 9 (as memory M1 ~ M10) |
| MIN | Saves the M1 memory contents. |
| MAX | Saves the M10 memory contents. |

Set →

*SRE

→ Query

| | | |
|------------------|--|---|
| Description | Sets or queries the Service Request Enable register. The Service Request Enable register determines which registers of the Status Byte register are able to generate service requests. | |
| Syntax | *SRE <NR1> | |
| Query Syntax | *SRE? | |
| Parameter | <NR1> | 0~255 |
| Return parameter | <NR1> | Returns the bit sum of the Service Request Enable register. |

***STB**

→ Query

| | | |
|------------------|---|---|
| Description | Queries the bit sum of the Status Byte register with MSS (Master summary Status) replacing the RQS bit (bit 6). | |
| Query Syntax | *STB? | |
| Return parameter | <NR1> | Returns the bit sum of the Status Byte register with the MSS bit (bit 6). |

***TRG**

Set →

| | | |
|-------------|---|--|
| Description | The *TRG command is able to generate a “get” (Group Execute Trigger). If the PPX cannot accept a trigger at the time of the command, an error message is generated (-211, “Trigger ignored”). | |
| Syntax | *TRG | |

***TST**

→ Query

| | | |
|------------------|-----------------------|---|
| Description | Executes a self test. | |
| Query Syntax | *TST? | |
| Return parameter | 0 | Returns “0” if there are no errors. |
| | <NR1> | Returns an error code <NR1> if there is an error. |

***WAI**

Set →

| | |
|-------------|---|
| Description | Prevents any other commands or queries from being executed until all outstanding commands have completed. |
| Syntax | *WAI |

Status Register Overview

To program the PPX power supply effectively, the Status registers need to be understood. This chapter explains in detail how the Status registers are used and how to configure them.

Introduction to the Status Registers

Overview


The status registers are used to determine the status of the power supply. The status registers maintain the status of the protection conditions, operation conditions and instrument errors.

The PPX Series have a number of register groups:

- Questionable Status Register Group
- Standard Event Status Register Group
- Operation Status Register Group
- Status Byte Register
- Service Request Enable Register
- Service Request Generation
- Error Queue
- Output Buffer

The next page shows the structure of the Status registers.


The Status Registers

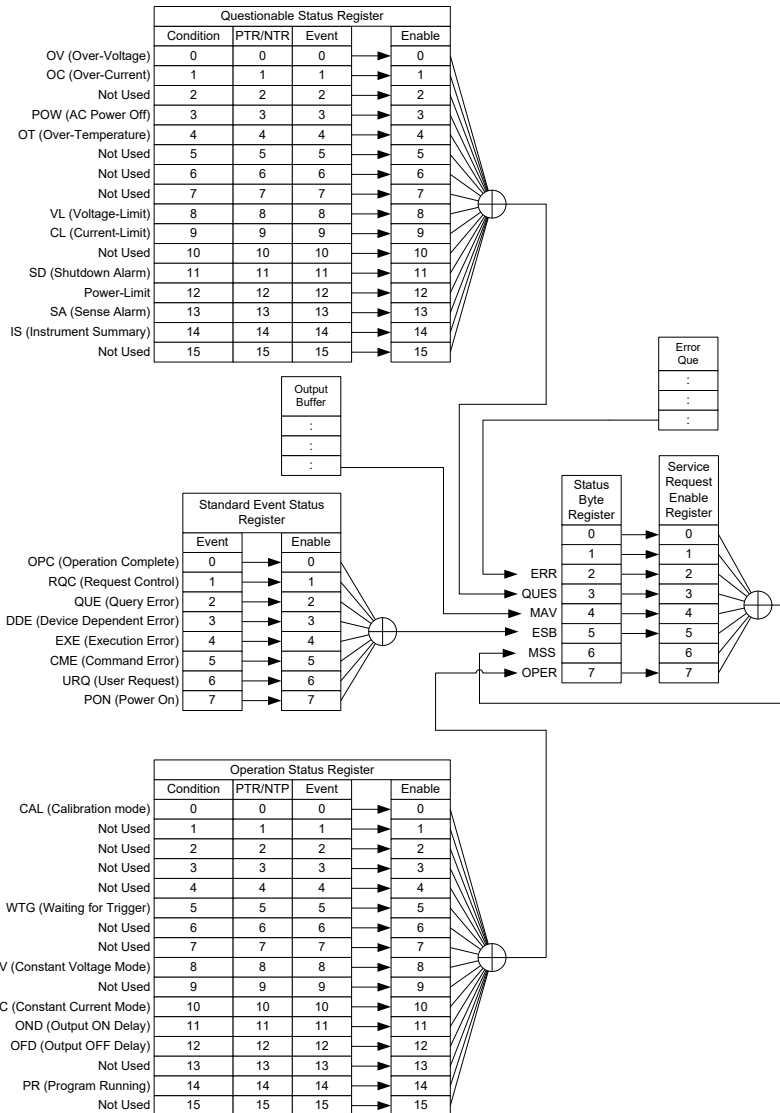

Questionable Status Register Group

Overview

The Questionable Status Register Group indicates if any protection modes or limits have been tripped.

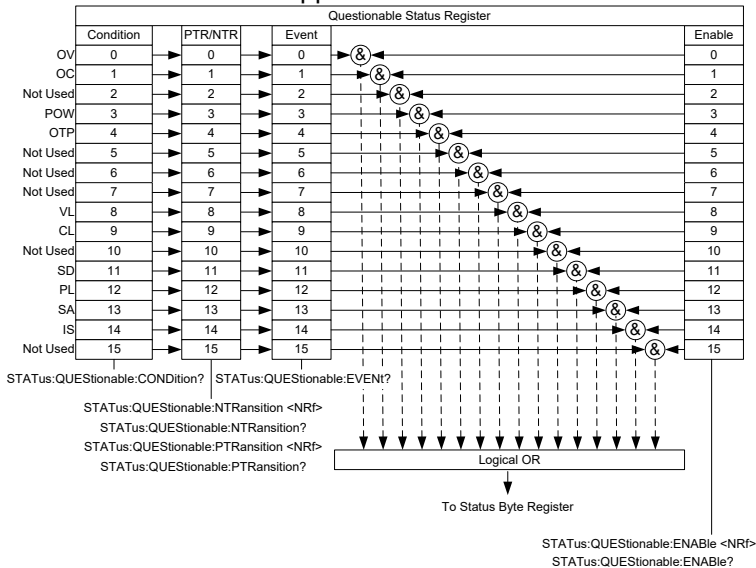

Bit Summary


| Event | Bit # | Bit Weight |
|--|-------|------------|
| OV (Over-Voltage) Over voltage protection has been tripped | 0 | 1 |
| OC (Over-Current) Over current protection has been tripped | 1 | 2 |
| POW (AC Power Off) AC power switch is off | 3 | 8 |
| OTP(Over Temperature Protection) Over temperature protection has been tripped | 4 | 16 |
| TSH(Temperature Short) K-Type thermocouple short. | 5 | 32 |

| | | | |
|--------------------|---|-----|------|
| | TM(Temperature Monitor) | 6 | 64 |
| | Temperature monitor reached. | | |
| | VL (Voltage Limit) | 8 | 256 |
| | Voltage limit has been reached | | |
| | CL (Current Limit) | 9 | 512 |
| | Current limit has been reached | | |
| | SD (Shutdown Alarm) | 11 | 2048 |
| | PL (Power-Limit) | 12 | 4096 |
| | SA (Sense Alarm) | 13 | 8192 |
| Condition Register | The Questionable Status Condition Register indicates the status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register. | | |
| PTR/NTR Filters | The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative. | | |
| | Positive Transition | 0→1 | |
| | Negative Transition | 1→0 | |
| Event Register | The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0. | | |
| Enable Register | The Enable register determines which Events in the Event Register will be used to set the QUES bit in the Status Byte Register. | | |

Operation Status Register Group

Overview

The Operation Status Register Group indicates the operating status of the power supply.

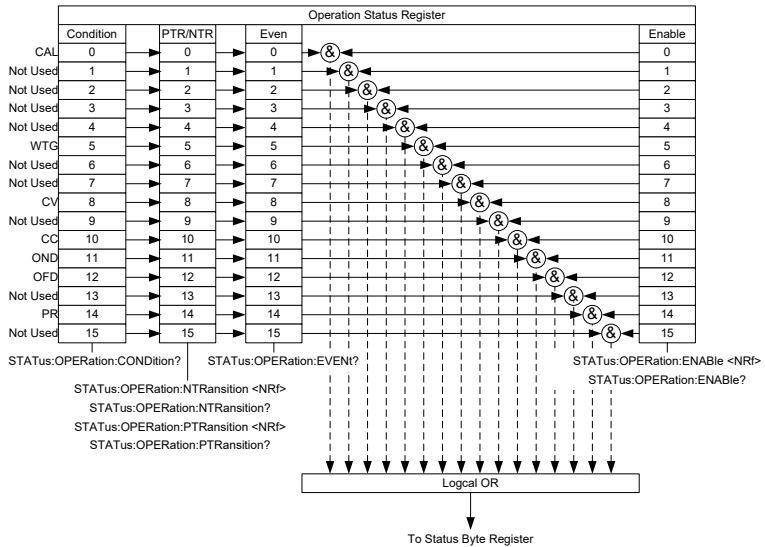

Bit Summary


| Event | Bit # | Bit Weight |
|---|-------|------------|
| CAL (Calibration mode) Indicates if the PPX is in calibration mode. | 0 | 1 |
| LOCK (Key Lock) Keyboard locked. | 1 | 2 |
| OUT(Output off/on) Output off/on state. | 3 | 8 |
| RMT(Remote state) Remote state | 4 | 16 |
| WTG (Waiting for trigger) Indicates if the PPX is waiting for a trigger. | 5 | 32 |
| CV (Constant voltage mode) Indicates if the PPX is in CV mode. | 8 | 256 |

| | | | |
|--------------------|---|-----|-------|
| | CP (Constant power mode) Indicates if the PPX is in CP mode. | 9 | 512 |
| | CC (Constant current mode) Indicates if the PPX is in CC mode. | 10 | 1024 |
| | OND (Output ON Delay) Indicates if Output ON delay time is active | 11 | 2048 |
| | OFD (Output OFF Delay) Indicates if Output OFF delay time is active | 12 | 4096 |
| | PR (Program Running) Indicates if a Test is running | 14 | 16384 |
| Condition Register | The Operation Status Condition Register indicates the operating status of the power supply. If a bit is set in the Condition register, it indicates that the event is true. Reading the condition register does not change the state of the condition register. | | |
| PTR/NTR Filters | The PTR/NTR (Positive/Negative transition) register determines the type of transition conditions that will set the corresponding bit in the Event Registers. Use the Positive transition filter to view events that change from false to positive, and use the negative transition filter to view events that change from positive to negative. | | |
| | Positive Transition | 0→1 | |
| | Negative Transition | 1→0 | |
| Event Register | The PTR/NTR Register will dictate the type of transition conditions will set the corresponding bits in the Event Register. If the Event Register is read, it will be cleared to 0. | | |
| Enable Register | The Enable register determines which registered Events in the Event Register will be used to set the OPER bit in the Status Byte Register. | | |

Standard Event Status Register Group

Overview

The Standard Event Status Register Group indicates if any errors have occurred. The bits of the Event register are set by the error event queue.

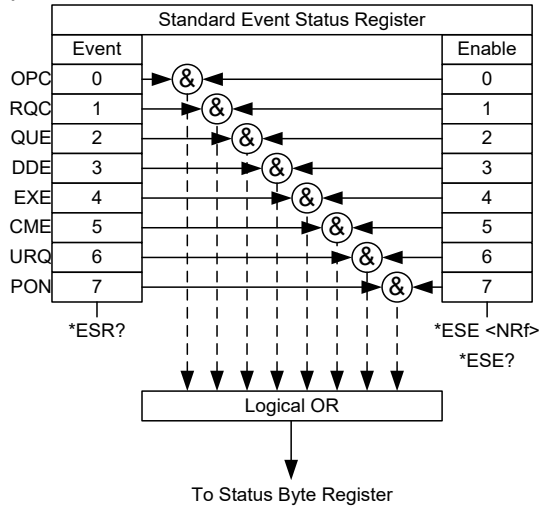

Bit Summary


| Event | Bit # | Bit Weight |
|--|-------|------------|
| OPC (Operation complete) The OPC bit is set when all selected pending operations are complete. This bit is set in response to the *OPC command. | 0 | 1 |
| RQC (Request control) | 1 | 2 |
| QUE (Query Error) The Query Error bit is set in response to an error reading the Output Queue. This can be caused by trying to read the Output Queue when there is no data present. | 2 | 4 |

| | | | |
|-----------------|--|---|-----|
| | DDE (Device Dependent Error) | 3 | 8 |
| | Device specific error. | | |
| | EXE (Execution Error) | 4 | 16 |
| | The EXE bit indicates an execution error due to one of the following: illegal command parameter, parameter out of range, invalid parameter, the command didn't execute due to an overriding operation condition. | | |
| | CME (Command Error) | 5 | 32 |
| | The CME bit is set when a syntax error has occurred. The CME bit can also be set when a <GET> command is received within a program message. | | |
| | URQ (User Request) | 6 | 64 |
| | PON (Power On) | 7 | 128 |
| | Indicates the power is turned on. | | |
| Event Register | Any bits set in the event register indicate that an error has occurred. Reading the Event register will reset the register to 0. | | |
| Enable Register | The Enable register determines which Events in the Event Register will be used to set the ESB bit in the Status Byte Register. | | |

Status Byte Register & Service Request Enable Register

Overview

The Status Byte register consolidates the status events of all the status registers. The Status Byte register can be read with the *STB? query and can be cleared with the *CLS command.

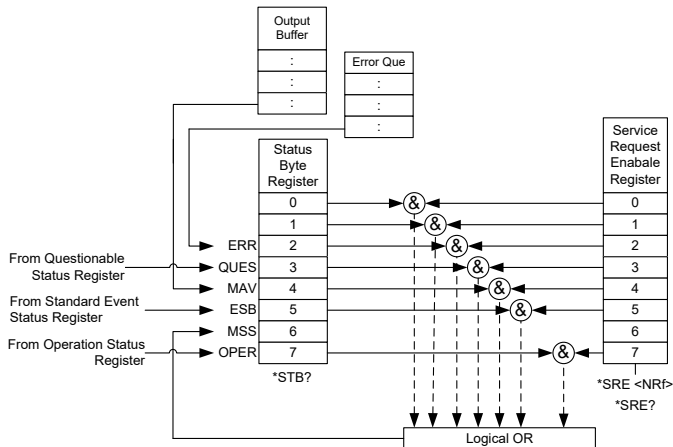

Bit Summary

| Event | Bit # | Bit Weight |
|--|-------|------------|
| ERR (Error Event/Queue) If data is present in the Error queue, the ERR bit will be set. | 2 | 4 |
| QUES (Questionable Status Register) The summary bit for the Questionable Status Register group. | 3 | 8 |
| MAV (Message Available) This is set when there is data in the Output Queue waiting to be read. | 4 | 16 |
| (ESB) Event Summary Bit. The ESB is the summary bit for the Standard Event Status Register group. | 5 | 32 |

| | | | |
|---------------------------------|---|---|-----|
| | MSS Bit | 6 | 64 |
| | The MSS Bit is the summary of the Status Byte Register and Service Request register (bits 1-5, 7). This will be set to 1. | | |
| | OPER (Operation Status Register) | 7 | 128 |
| | OPER bit is the summary bit for the Operation Status Register Group. | | |
| Status Byte Register | Any bits set in the Status byte register acts as a summary register for all the three other status registers and indicates if there is a service request, an error in the Error Queue or data in the Output Queue. Reading the Status Byte register will reset the register to 0. | | |
| Service Request Enable Register | The Service Request Enable Register controls which bits in the Status Byte Register are able to generate service requests. | | |

Error List

Command Errors

Overview

An <error/event number> in the range [-199 , -100] indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class shall cause the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received which is in violation of the IEEE 488.2 standard. Possible violations include a data element which violates the device listening formats or whose type is unacceptable to the device.

An unrecognized header was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Events that generate command errors shall not generate execution errors, device-specific errors, or query errors; see the other error definitions in this chapter.

| Error Code | Description |
|---------------------------------|--|
| -100 Command Error | This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that a Command Error as defined in IEEE 488.2, 11.5.1.1.4 has occurred. |
| -102 Syntax error | An unrecognized command or data type was encountered; for example, a string was received when the device does not accept strings. |
| -103 Invalid separator | The parser was expecting a separator and encountered an illegal character; for example, the semicolon was omitted after a program message unit, MEAS:VOLT:DC?:MEASCURR:DC? |
| -104 Data type error | The parser recognized a data element different than one allowed; for example, numeric or string data was expected but block data was encountered. |
| -108 Parameter not allowed | More parameters were received than expected for the header; for example, the KLOCK command only accepts one parameter, so receiving SYSTem:KLOCK 1,0 is not allowed. |
| -109 Missing parameter | Fewer parameters were received than required for the header; for example, the KLOCK command requires one parameter, so receiving KLOCK is not allowed. |
| -111 Header separator error | A character which is not a legal header separator was encountered while parsing the header; for example, no white space followed the header, thus *SRE2 is an error. |
| -112 Program mnemonic too long | The header contains more than twelve characters (see IEEE 488.2, 7.6.1.4.1). |
| -113 Undefined header | The header is syntactically correct, but it is undefined for this specific device; for example, *XYZ is not defined for any device. |
| -114 Header suffix out of range | The value of a numeric suffix attached to a program mnemonic, see Syntax and Style section 6.2.5.2, makes the header invalid. |

| | |
|---|---|
| -115 Unexpected number of parameters | The number of parameters received does not correspond to the number of parameters expected. This is typically due an inconsistency with the number of instruments in the selected group. |
| -120 Numeric data error | This error, as well as errors -121 through -129, are generated when parsing a data element which appears to be numeric, including the nondecimal numeric types. This particular error message should be used if the device cannot detect a more specific error. |
| -121 Invalid character in number | An invalid character for the data type being parsed was encountered; for example, an alpha in a decimal numeric or a "9" in octal data. |
| -128 Numeric data not allowed | A legal numeric data element was received, but the device does not accept one in this position for the header. |
| -131 Invalid suffix | The suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device. |
| -141 Invalid character data | Either the character data element contains an invalid character or the particular element received is not valid for the header. |
| -148 Character data not allowed | A legal character data element was encountered where prohibited by the device. |
| -151 Invalid string data | A string data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.5.2); for example, an END message was received before the terminal quote character. |
| -158 String data not allowed | A string data element was encountered but was not allowed by the device at this point in parsing. |
| -160 Block data error | This error, as well as errors -161 through -169, are generated when parsing a block data element. This particular error message should be used if the device cannot detect a more specific error. |
| -161 Invalid block data | A block data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.6.2); for example, an END message was received before the length was satisfied. |

| | |
|----------------------------------|--|
| -168 Block data not allowed | A legal block data element was encountered but was not allowed by the device at this point in parsing. |
| -178 Expression data not allowed | A legal expression data was encountered but was not allowed by the device at this point in parsing. |

Execution Errors

Overview

An <error/event number> in the range [-299 , -200] indicates that an error has been detected by the instrument's execution control block. The occurrence of any error in this class shall cause the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

A <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device's capabilities.

A valid program message could not be properly executed due to some device condition.

Execution errors shall be reported by the device after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, shall not be reported as an execution error. Events that generate execution errors shall not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

| Error Code | Description |
|----------------------|---|
| -200 Execution error | This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that an Execution Error as defined in IEEE 488.2, 11.5.1.1.5 has occurred. |

| | |
|-----------------------------|---|
| -201 Invalid while in local | Indicates that a command is not executable while the device is in local due to a hard local control (see IEEE 488.2, 5.6.1.5); for example, a device with a rotary switch receives a message which would change the switches state, but the device is in local so the message cannot be executed. |
| -203 Command protected | Indicates that a legal password-protected program command or query could not be executed because the command was disabled. |
| -211 Trigger ignored | Indicates that a GET, *TRG, or triggering signal was received and recognized by the device but was ignored because of device timing considerations; for example, the device was not ready to respond. Note: a DT0 device always ignores GET and treats *TRG as a Command Error. |
| -213 Init ignored | Indicates that a request for a measurement initiation was ignored as another measurement was already in progress. |
| -220 Parameter error | Indicates that a program data element related error occurred. This error message should be used when the device cannot detect the more specific errors described for errors -221 through -229. |
| -221 Settings conflict | Indicates that a legal program data element was parsed but could not be executed due to the current device state (see IEEE 488.2, 6.4.5.3 and 11.5.1.1.5.). |
| -222 Data out of range | Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device (see IEEE 488.2, 11.5.1.1.5.). |

| | |
|---------------------------------|--|
| -224 Illegal parameter value | Used where exact value, from a list of possibles, was expected. |
|---------------------------------|--|

Device Specific Errors

| | |
|----------|---|
| Overview | An <error/event number> in the range [-399 , -300] or [1 , 32767] indicates that the instrument has detected an error which is not a command error, a query error, or an execution error; some device operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. The meaning of positive error codes is device-dependent and may be enumerated or bit mapped; the <error message>string for positive error codes is not defined by SCPI and available to the device designer. |
|----------|---|

Note that the string is not optional; if the designer does not wish to implement a string for a particular error, the null string should be sent (for example, 42,""). The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. Events that generate device-specific errors shall not generate command errors, execution errors, or query errors; see the other error definitions in this section.

| Error Code | Description |
|-------------------|--|
| -310 System error | Indicates that some error, termed “system error” by the device, has occurred. This code is device-dependent. |

| | |
|--------------------|--|
| -320 Storage fault | Indicates that the firmware detected a fault when using data storage. This error is not an indication of physical damage or failure of any mass storage element. |
|--------------------|--|

Query Errors

| | |
|----------|---|
| Overview | <p>An <error/event number> in the range [-499 , -400] indicates that the output queue control of the instrument has detected a problem with the message exchange protocol described in IEEE 488.2, chapter 6. The occurrence of any error in this class shall cause the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1) to be set. These errors correspond to message exchange protocol errors described in IEEE 488.2, section 6.5. One of the following is true:</p> <p>An attempt is being made to read data from the output queue when no output is either present or pending;</p> <p>Data in the output queue has been lost.</p> <p>Events that generate query errors shall not generate command errors, execution errors, or device-specific errors; see the other error definitions in this section.</p> |
|----------|---|

| Error Code | Description |
|------------------|---|
| -400 Query error | This is the generic query error for devices that cannot detect more specific errors. This code indicates only that a Query Error as defined in IEEE 488.2, 11.5.1.1.7 and 6.3 has occurred. |

PPX Series Default Settings

The following default settings are the factory configuration settings for the power supply.

| Initial | Default Setting |
|--------------------------------|--|
| Output | Off |
| LOCK | Disabled |
| Voltage Set | 0.000 V |
| Current Set | 0.0000 A |
| Output | |
| Output On Dly(Delay) | 00(hour):00(minute):00.00(sec) |
| Output Off Dly(Delay) | 00(hour):00(minute):00.00(sec) |
| Remote Sense | 2 Wire |
| V/I Slew Rate | CVHS = CV high speed priority |
| R_V(Rising Voltage) Slew Rate | 0.001 V/ms (PPX100-1) 0.0001 V/ms (Other Model) |
| F_V(Falling Voltage) Slew Rate | 0.001 V/ms (PPX100-1) 0.0001 V/ms (Other Model) |
| R_C(Rising Current) Slew Rate | 0.00001 A/ms (PPX all series) |
| F_C(Falling Current) Slew Rate | 0.00001 A/ms (PPX all series) |
| Measurement | |
| Measure Average | Off |
| Voltage Range | Auto |
| Current Range | Auto |
| EXT (External) Control | |
| CV Control | Front Panel |
| CC Control | Front Panel |
| Output Type | High |
| Output Enable | Off |
| TRIG(Trigger Control) | |
| Trigin Level | High |
| Trigin Action | None |
| Trigin Voltage | 0.000 V |
| Trigin Current | 0.0000 A |
| Trigin Memory | M1 |
| Trigout Level | Low |
| Trigout Source | None |
| Trigout Width | 1.0 ms |
| PWR(Power) On Config | |
| Power On Status | Safe |

| | |
|--|---|
| Constant PWR(Power) | |
| Control | Off |
| Power | $(1.05 \times V_{rate}) * (1.05 \times I_{rate})$ |
| Temperature | |
| Control | Off |
| Unit | °C |
| Output Safe | Off |
| Monitor | 100.0 °C |
| Adjust | 0.0 °C |
| Save/Recall | |
| Save Mem(Memory) Set | M1 |
| Recall Mem(Memory) Set | M1 |
| Utility - Buzzer | |
| Protect | On |
| Keyboard | Off |
| Utility - Bleeder | |
| Bleeder | On |
| APP - AH/WH Meter (License Key) | |
| Mode | Disable |
| AHour | 999999999.999 Ah |
| WHour | 999999999.999 Wh |
| Protect | |
| Default Setting | |
| Voltage Limit | Off |
| UVL | 0.000 V |
| OVP Level | 1.1 X Vrate |
| Current Limit | Off |
| OCP Level | 1.1 X Irate) |
| OCP Delay | 0.05s |



TEXIO TECHNOLOGY CORPORATION

7F Towa Fudosan Shin Yokohama Bldg.

2-18-13, Shin Yokohama, Kohoku-ku, Yokohama, Kanagawa, 222-0033
Japan

<https://www.texio.co.jp/>