


ファームウェアアップデートについての補足

現在のファームウェアのバージョンによっては取扱説明書にあるファームウェアのアップデートの手順でアップできないことがあります。この場合は以下の手順に従ってアップデートをおこなってください。

1. FAT32 でフォーマットを行った USB メモリで内容を全て消去した物を用意し、ファームウェアのアップデートファイル(*.upg)のみをコピーしてください。
2. DSO の Util メニューで言語設定を英語 (English) に変更し、Default キーで設定をクリアしてください。
3. DSO の電源をオフし、USB メモリを挿してから Variable ツマミを回しながら電源をオンすると、メモリを検索してから表示が以下ようになります。

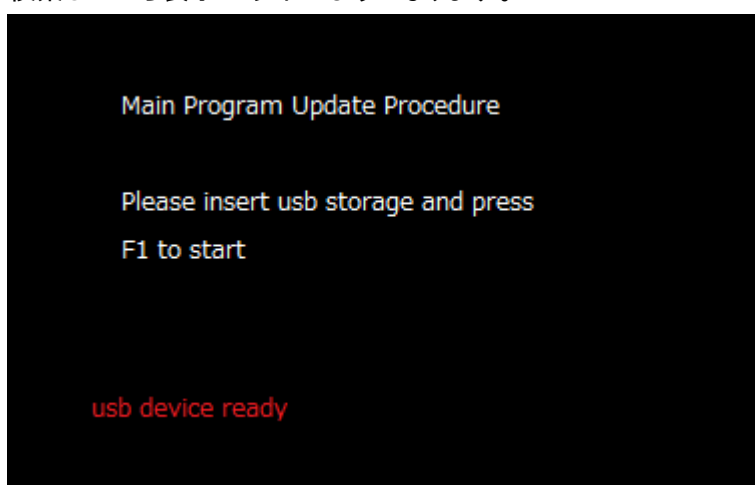


UPG ファイルが認識できない場合は他の USB メモリに交換して同様の手順を行ってください。

4. “F1”のキーを押すとアップデートが開始されます、白いステータスバーが一杯になるまで待ちください。
 5. 電源を再投入して、Util キー → System → System Info でバージョンを確認して下さい。
- 以上でアップデートの完了です。

Supplementary Information Regarding Firmware Updates

Depending on the current firmware version, it may not be possible to perform the update using the standard procedure described in the instruction manual. In such cases, please follow the procedure below to update the firmware.

1. Prepare a USB flash drive formatted to FAT32 with all existing data erased, and copy only the firmware update file (*.upg) onto it.
2. Change the language setting to "English" in the DSO's "Util" menu, then clear the settings by pressing the "Default" key.
3. Turn off the DSO, insert the USB flash drive, and then turn the power back on while rotating the "Variable" knob; the device will search the memory, and the display will change to the following state.

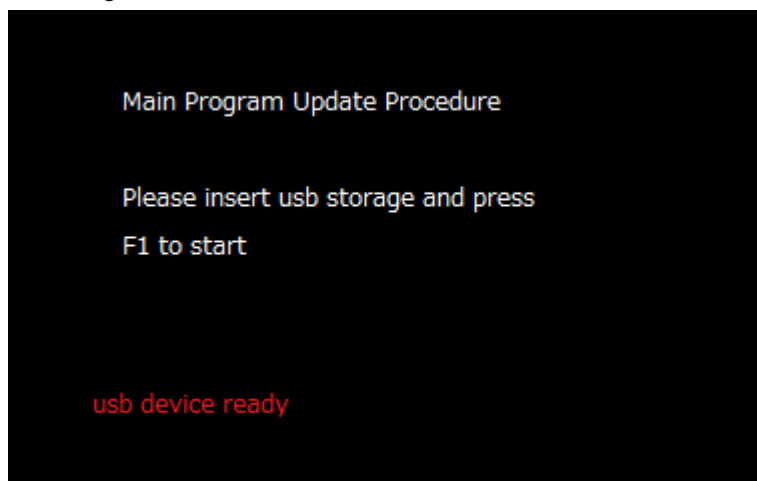

If the UPG file is not recognized, please switch to a different USB flash drive and follow the same procedure.

4. Press the "F1" key to start the update; wait until the white status bar is completely filled.
5. Cycle the power, then check the version by navigating to Util key → System → System Info. This completes the update process.