

PROGRAMMING MANUAL

AC/DC POWER SOURCE ASR SERIES



B71-0499-01

■ **About a trademark, a registered trademark**

A company name and the brand name mentioned in this instruction manual are the trademark or the registered trademark of each company or group in each country and region.

■ **About this instruction manual**

When copying the part or all of contents of this instruction manual, seek the copyright holder.

In addition, the specifications of the product and the contents of this instruction manual are subject to change without notice for improvement. Please check to our website for the latest version.

■ **About firmware version**

This programming manual is required firmware version 1.07 or higher.

CONTENTS

1. REMOTE CONTROL	1
1-1. Interface Configuration	1
1-1-1. Configure Ethernet Connection.....	1
1-1-2. Web Server Remote Control Function Check.....	3
1-1-3. Socket Server Function Check.....	4
1-2. USB Interface 8	
1-2-1. USB Remote Interface.....	8
1-2-2. USB Remote Control Function Check.....	10
1-3. RS-232C Interface(G Type)	11
1-3-1. RS-232C Remote Interface.....	11
1-3-2. RS-232C Remote Control Function Check.....	13
1-3-3. Using Realterm to Establish a Remote Connection.....	14
1-4. GP-IB Interface(G type)	17
1-4-1. GPIB Remote Interface.....	17
1-4-2. GPIB Function Check	18
2. Command Syntax.....	21
3. Command List.....	25
3-1. Common Commands.....	25
3-1-1. *CLS.....	25
3-1-2. *IDN.....	25
3-1-3. *OPC.....	26
3-1-4. *RCL.....	26
3-1-5. *RST.....	26
3-1-6. *SAV.....	26
3-1-7. *WAI.....	27
3-2. Trace/Data Commands	27
3-2-1. :DATA TRACe:SEQuence:CLEAr	27
3-2-2. :DATA TRACe:SEQuence:RECall	27
3-2-3. :DATA TRACe:SEQuence:STORe.....	28
3-2-4. :DATA TRACe:SIMulation:CLEAr.....	28
3-2-5. :DATA TRACe:SIMulation:RECall.....	28
3-2-6. :DATA TRACe:SIMulation:STORe.....	29
3-2-7. :DATA TRACe:WAVe:CLEAr	29
3-2-8. :DATA TRACe:WAVe[:DATA].....	29
3-3. Measure Commands	31
3-3-1. :MEASure[:SCALar]:CURRent:CFACtor	31
3-3-2. :MEASure[:SCALar]:CURRent:HIGH	31
3-3-3. :MEASure[:SCALar]:CURRent:LOW	31
3-3-4. :MEASure[:SCALar]:CURRent:PEAK:CLEAr.....	31
3-3-5. :MEASure[:SCALar]:CURRent:PEAK:HOLD.....	32
3-3-6. :MEASure[:SCALar]:CURRent[:RMS]	32
3-3-7. :MEASure[:SCALar]:CURRent:AVERAge	32
3-3-8. :MEASure[:SCALar]:CURRent:HARMonic[:RMS]	32
3-3-9. :MEASure[:SCALar]:CURRent:HARMonic:RATIo	33

3-3-10.	:MEASure[:SCALar]:FREQuency	33
3-3-11.	:MEASure[:SCALar]:POWer[:AC]:APParent	33
3-3-12.	:MEASure[:SCALar]:POWer[:AC]:PFACTOR	33
3-3-13.	:MEASure[:SCALar]:POWer[:AC]:REACTive	34
3-3-14.	:MEASure[:SCALar]:POWer[:AC][:REAL]	34
3-3-15.	:MEASure[:SCALar]:VOLTage[:RMS]	34
3-3-16.	:MEASure[:SCALar]:VOLTage:AVERAge	34
3-3-17.	:MEASure[:SCALar]:VOLTage:HIGH	34
3-3-18.	:MEASure[:SCALar]:VOLTage:LOW	35
3-3-19.	:MEASure[:SCALar]:VOLTage:HARMonic[:RMS]	35
3-3-20.	:MEASure[:SCALar]:VOLTage:HARMonic:RATio	35
3-3-21.	:MEASure:CONFigure:SENsing	36
3-4.	Memory Commands	36
3-4-1.	:MEMory:RCL	36
3-4-2.	:MEMory:SAV	37
3-5.	Output Commands	37
3-5-1.	:OUTPut[:STATe]	37
3-5-2.	:OUTPut:PON	37
3-5-3.	:OUTPut:PROTEction:CLEar	38
3-5-4.	:OUTPut:RELAy	38
3-6.	System Function Commands	38
3-6-1.	:SYSTem:BEEPer:STATe	38
3-6-2.	:SYSTem:COMMunicate:GPIB[:SELF]:ADDReSS	39
3-6-3.	:SYSTem:COMMunicate:LAN:DHCP	39
3-6-4.	:SYSTem:COMMunicate:LAN:DNS	40
3-6-5.	:SYSTem:COMMunicate:LAN:GATEway	40
3-6-6.	:SYSTem:COMMunicate:LAN:IPADdress	40
3-6-7.	:SYSTem:COMMunicate:LAN:MAC	41
3-6-8.	:SYSTem:COMMunicate:LAN:SMASk	41
3-6-9.	:SYSTem:COMMunicate:RLState	41
3-6-10.	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit:BAUD	42
3-6-11.	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit:BITS	42
3-6-12.	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit:PARity	43
3-6-13.	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmit:SBITS	44
3-6-14.	:SYSTem:COMMunicate:TCPip:CONTRol	44
3-6-15.	:SYSTem:COMMunicate:USB:FRONT:STATe	45
3-6-16.	:SYSTem:COMMunicate:USB:REAR:MODE	45
3-6-17.	:SYSTem:COMMunicate:USB:REAR:STATe	46
3-6-18.	:SYSTem:CONFigure[:MODE]	46
3-6-19.	:SYSTem:CONFigure:EXTio[:STATe]	46
3-6-20.	:SYSTem:ERRor	47
3-6-21.	:SYSTem:ERRor:ENABle	47
3-6-22.	:SYSTem:HOLD:STATe	47
3-6-23.	:SYSTem:IPKHold:TIME	47
3-6-24.	:SYSTem:KLOCK	48
3-6-25.	:SYSTem:REBoot	48
3-6-26.	:SYSTem:SLEW:MODE	48
3-6-27.	:SYSTem:VUNit	49
3-7.	Source Commands	49
3-7-1.	[:SOURce]:CURRent:LIMit:PEAK:HIGH	49
3-7-2.	[:SOURce]:CURRent:LIMit:PEAK:LOW	50
3-7-3.	[:SOURce]:CURRent:LIMit:RMS[:AMPLitude]	50

3-7-4.	[.SOURce]:CURRent:LIMit:PEAK:MODE	51
3-7-5.	[.SOURce]:CURRent:LIMit:RMS:MODE	51
3-7-6.	[.SOURce]:FREQuency:LIMit:HIGH	51
3-7-7.	[.SOURce]:FREQuency:LIMit:LOW	52
3-7-8.	[.SOURce]:FREQuency[:IMMEDIATE]	52
3-7-9.	[.SOURce]:FUNctIon[:SHAPE][:IMMEDIATE]	53
3-7-10.	[.SOURce]:FUNctIon:THD:FORMat	54
3-7-11.	[.SOURce]:MODE	54
3-7-12.	[.SOURce]:PHASe:STARt:STATe	55
3-7-13.	[.SOURce]:PHASe:STOP:STATe	55
3-7-14.	[.SOURce]:PHASe:STARt[:IMMEDIATE]	56
3-7-15.	[.SOURce]:PHASe:STOP[:IMMEDIATE]	56
3-7-16.	[.SOURce]:READ	57
3-7-17.	[.SOURce]:VOLTage:RANGe	57
3-7-18.	[.SOURce]:VOLTage:LIMit:RMS	58
3-7-19.	[.SOURce]:VOLTage:LIMit:HIGH	58
3-7-20.	[.SOURce]:VOLTage:LIMit:LOW	59
3-7-21.	[.SOURce]:VOLTage:LIMit:PEAK	59
3-7-22.	[.SOURce]:VOLTage[:LEVel][:IMMEDIATE][:AMPLitude]	60
3-7-23.	[.SOURce]:VOLTage[:LEVel][:IMMEDIATE]:OFFSet	60
3-8.	Sequence Commands	61
3-8-1.	[.SOURce]:SEQuence:CPARameter	61
3-8-2.	[.SOURce]:SEQuence:CSTep	62
3-8-3.	[.SOURce]:SEQuence:SPARameter	62
3-8-4.	[.SOURce]:SEQuence:STEP	63
3-8-5.	:TRIGger:SEQuence:SELected:EXECute	64
3-9.	Simulate Commands	64
3-9-1.	[.SOURce]:SIMulation:ABNormal:CODE	64
3-9-2.	[.SOURce]:SIMulation:ABNormal:FREQuency	65
3-9-3.	[.SOURce]:SIMulation:ABNormal:PHASe:STARt:ENABLE	65
3-9-4.	[.SOURce]:SIMulation:ABNormal:PHASe:STARt[:IMMEDIATE]	66
3-9-5.	[.SOURce]:SIMulation:ABNormal:PHASe:STOP:ENABLE	66
3-9-6.	[.SOURce]:SIMulation:ABNormal:PHASe:STOP[:IMMEDIATE]	67
3-9-7.	[.SOURce]:SIMulation:ABNormal:TIME	67
3-9-8.	[.SOURce]:SIMulation:ABNormal:VOLTage	68
3-9-9.	[.SOURce]:SIMulation:CSTep	68
3-9-10.	[.SOURce]:SIMulation:INITial:CODE	68
3-9-11.	[.SOURce]:SIMulation:INITial:FREQuency	69
3-9-12.	[.SOURce]:SIMulation:INITial:PHASe:STARt:ENABLE	69
3-9-13.	[.SOURce]:SIMulation:INITial:PHASe:STARt[:IMMEDIATE]	70
3-9-14.	[.SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE	70
3-9-15.	[.SOURce]:SIMulation:INITial:PHASe:STOP[:IMMEDIATE]	71
3-9-16.	[.SOURce]:SIMulation:INITial:VOLTage	71
3-9-17.	[.SOURce]:SIMulation:NORMal<1 2>:CODE	72
3-9-18.	[.SOURce]:SIMulation:NORMal 1:FREQuency	72
3-9-19.	[.SOURce]:SIMulation:NORMal<1 2>:PHASe:STARt:ENABLE	73
3-9-20.	[.SOURce]:SIMulation:NORMal<1 2>:PHASe:STARt[:IMMEDIATE]	73
3-9-21.	[.SOURce]:SIMulation:NORMal<1 2>:PHASe:STOP:ENABLE	74
3-9-22.	[.SOURce]:SIMulation:NORMal<1 2>:PHASe:STOP[:IMMEDIATE]	74
3-9-23.	[.SOURce]:SIMulation:NORMal<1 2>:TIME	75
3-9-24.	[.SOURce]:SIMulation:NORMal1:VOLTage	75
3-9-25.	[.SOURce]:SIMulation:REPeat:COUNT	76
3-9-26.	[.SOURce]:SIMulation:REPeat:ENABLE	76

3-9-27. [:SOURce]:SIMulation:TRANSition<1 2>:TIME	76
3-9-28. [:SOURce]:SIMulation:TRANSition<1 2>:CODE	77
3-9-29. :TRIGger:SIMulation:SELected:EXECute	77
3-10. Input Subsystem Command	78
3-10-1. :INPut:GAIN	78
3-10-2. :INPut:SYNC:SOURce	78
3-11. Display Command	79
3-11-1. :DISPlay[:WINDow]:DESIgn:MODE	79
3-11-2. :DISPlay[:WINDow]:MEASure:SOURce<1 2 3>	79
4. Error List	80
4-1. Command Errors	80
4-2. Execution Errors	84
4-3. Device Specific Errors	86
4-4. Query Errors	87
5. APPENDIX	88
5-1. Factory Default Settings	88

1. REMOTE CONTROL

This chapter describes basic configuration of IEEE488.2 based remote control.

1-1. Interface Configuration



1-1-1. Configure Ethernet Connection

The Ethernet interface can be configured for a number of different applications. Ethernet can be configured for basic remote control or monitoring using a web server or it can be configured as a socket server.

The ASR supports both DHCP connections so the instrument can be automatically connected to an existing network or alternatively, network settings can be manually configured.

Ethernet Parameters	MAC Address (display only)	DHCP
	IP Address	Subnet mask
	Gateway	DNS address
	DNS Server	Socket port fixed at 2268

Ethernet Configuration

1. Connect a LAN cable from the PC to the Ethernet port on the rear panel. 
2. Press the *Menu* key. The Menu setting will appear on the display. 
3. Use the scroll wheel to go to item 3, *LAN* and press *Enter*.
4. If the LAN cable is installed correctly a connection is active, the *Connection Status* will show *Online*.

- To automatically have the network assign an IP address, set DHCP to ON. Otherwise set DHCP to OFF to manually set the Ethernet settings.

DHCP ON, OFF

- If DHCP was set to OFF, configure the remaining LAN parameters.


IP Address

Subnet Mask

Gateway

DNS Server

Socket Port

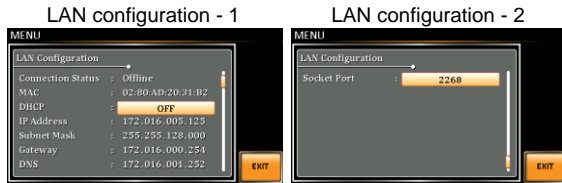

Exit

- Press *Exit*[F4] to exit from the LAN settings.



Note

If connecting to an existing network, check the settings with your administrator.

1-1-2. Web Server Remote Control Function Check

Functionality Check

Enter the IP address of the power supply (for example: http:// XXX.XXX.XXX.XXX) in a web browser after the instrument has been configured for LAN (page 1).

The web interface allows you to:

- View the system and information and the network configuration.
- View the analog control pinout.
- View the dimensions of the unit.
- View the operating area

Example:



Welcome Page	Network Configuration
	IP Address: 172.16.5.125
	Subnet Mask: 255.255.128.0
Network Configuration	Gateway: 172.16.0.254
	DNS: 172.16.1.252
Analog Control	DHCP State: <input type="radio"/> ON <input checked="" type="radio"/> OFF
Figure of Dimensions	Password: <input type="password"/>
Operating Area	<input type="button" value="Submit"/>


1-1-3. Socket Server Function Check

Background To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com, via a search for the VISA Run-time Engine page, or “downloads” at the following URL, <http://www.ni.com/visa/>

Requirements Operating System: Windows XP, 7, 8, 10

Functionality Check 1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:


Start>All Programs>NI MAX

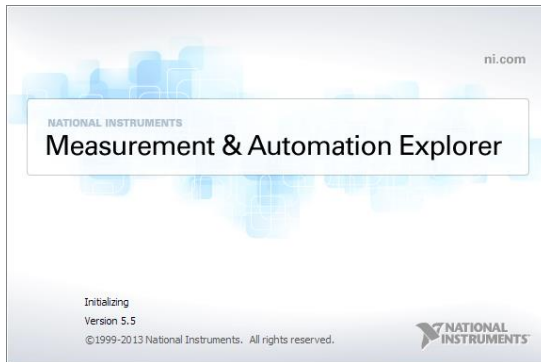


2. From the Configuration panel access;

My System>Devices and Interfaces>Network Devices


3. Press *Add New Network Device>Visa TCP/IP Resource...*

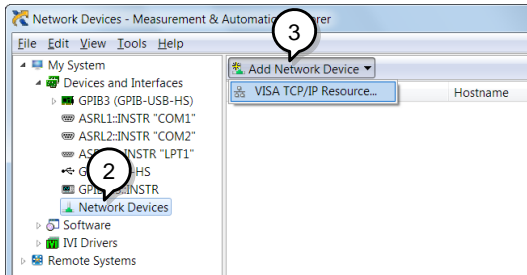


4. Select *Manual Entry of Raw Socket* from the popup window.

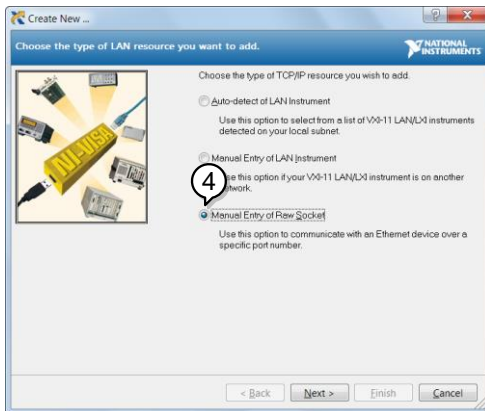


5. Enter the IP address and the port number of the ASR. The port number is fixed at 2268.
6. Double click the Validate button and press *Next*.

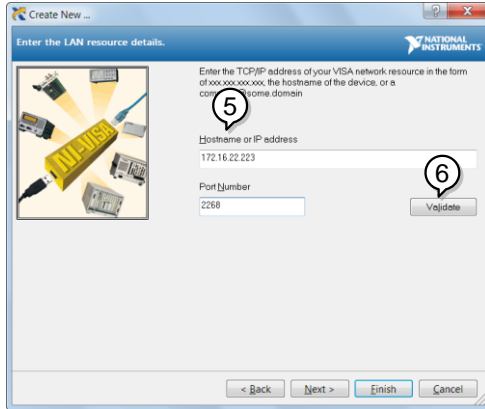

7. Next configure the Alias (name) of the ASR connection. In this example the Alias is: ASR
8. Click finish.

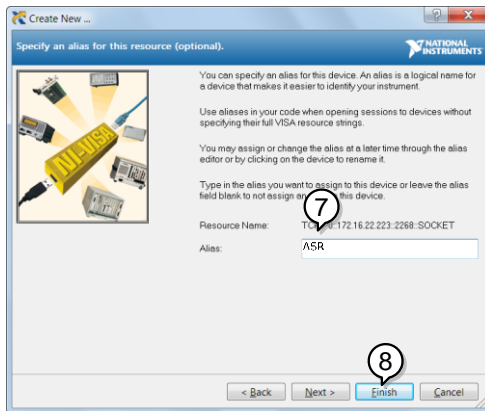

9. The IP address of the power supply will now appear under Network Devices in the configuration panel. Select this icon now.
10. Press *Open VISA Test Panel*.

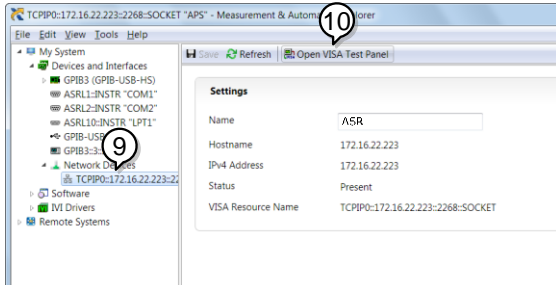

11. Click the *Configuration* Icon. Under the *IO Settings* tab check *Enable Termination Character*. The termination character should be set as *Line Feed -\n*.



12. Click the *Input/Output* icon. Under the *Basic I/O* tab, make sure **IDN?\n* is entered in the *Select or Enter Command* drop box.


13. Click *Query*.

The ASR will return the machine identification string into the buffer area:

```

TEXTIO, ASRXXX-XXX, XXXXXXXXXX,
XX.XX.XX.XXXX-X

```

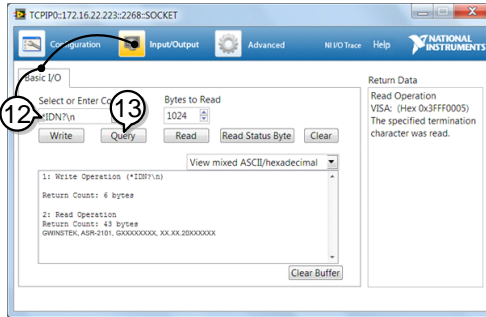



1-2.USB Interface


1-2-1. USB Remote Interface

USB Configuration	PC side connector	Type A, host
	ASR side connector	Rear panel Type B, slave
	Speed	1.1/2.0 (full speed)
	USB Class	CDC (communications device class)

Steps

1. Connect the Type A-Type B USB cable from the PC to the rear panel USB B port. 
2. Press the *Menu* key. The Menu setting will appear on the display. 
3. Use the scroll wheel to go to item 4, *USB Device*.
4. If the connection is successful *Connection Status* will change from Offline to Online.

USB Device Configuration

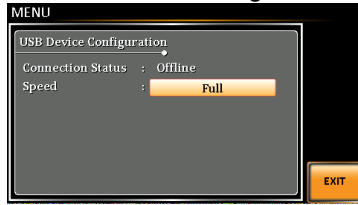

Exit

5. Press *Exit*[F4] to exit from the rear panel USB settings.



1-2-2. USB Remote Control Function Check

Functionality Check

Invoke a terminal application such as Realterm.
ASR will appear as a COM port on the PC.

To check the COM settings in Windows, see the
Device Manager. For example, in Win7 go to
the Control panel → System → Hardware tab.



Note

If you are not familiar with using a terminal
application to send/receive remote commands
via a USB connection, please see page 14 for
more information.

Run this query command via the terminal after
the instrument has been configured for
USB remote control (page 8).

*IDN?

This should return the Manufacturer, Model
number, Serial number, and Software version in
the following format.

TEXIO, ASRXXX-XXX, XXXXXXXXXX,
XX.XX.XX.XXXX-X

Manufacturer: TEXIO

Model number : ASRXXX-XXX


Serial number : XXXXXXXXXX

Software version : XX.XX.XX.XXXX-X


1-3.RS-232C Interface(G Type)



1-3-1. RS-232C Remote Interface

RS-232C Configuration	Connector	BD-9, male
	Parameters	Baud rate, data bits, parity, stop bits.

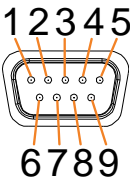Pin Assignment		2: RxD (Receive data)
		3: TxD (Transmit data)
		5: GND
		4, 6 ~ 9: No connection


Pin Connection Use a Null Modem connection (RS-232C cable) as shown in the diagram below.

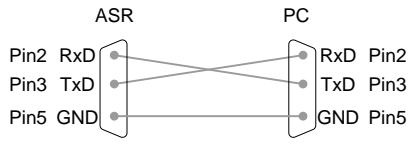

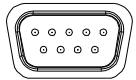- Steps**
1. Connect the RS-232C cable from the PC to the rear panel RS-232 port. 
 2. Press the *Menu* key. The Menu setting will appear on the display. 
 3. Use the scroll wheel to go to item 5, *RS232C* and press *Enter*.
 4. Set the RS232C relative settings.
-
- | | |
|-----------|---|
| Baud rate | 1200, 2400, 4800, 9600(default), 19200, 38400, 57600, 115200, |
|-----------|---|
-

Data bits	7 bits, 8 bits(default)
Parity	None(default), Odd, Even
Stop bits	1 bit(default), 2 bits

RS232C Configuration

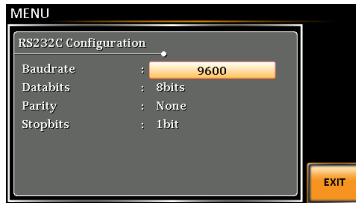

Exit

5. Press *Exit[F4]* to exit from the RS232C settings.



1-3-2. RS-232C Remote Control Function Check

Functionality Check

Invoke a terminal application such as Realterm.

For RS-232C, set the COM port, baud rate, stop bit, data bit and parity accordingly.

To check the COM settings in Windows, see the Device Manager. For example, in Win7 go to the Control panel → System → Hardware tab.



If you are not familiar with using a terminal application to send/receive remote commands from the serial port, please see page 14 for more information.

Run this query command via the terminal after the instrument has been configured for RS-232C remote control (page 11).

*IDN?

This should return the Manufacturer, Model number, Serial number, and Software version in the following format.

TEXIO, ASRXXX-XXX, XXXXXXXXXX,
XX.XX.XX.XXXX-X

Manufacturer: TEXIO

Model number : ASRXXX-XXX

Serial number : XXXXXXXXXX

Software version : XX.XX.XX.XXXX-X

1-3-3. Using Realterm to Establish a Remote Connection

Background Realterm is a terminal program that can be used to communicate with a device attached to the serial port of a PC or via an emulated serial port via USB.

The following instructions apply to version 2.0.0.70. Even though Realterm is used as an example to establish a remote connection, any terminal program can be used that has similar functionality.



Note

Realterm can be downloaded on Sourceforge.net free of charge.


For more information please see <http://realterm.sourceforge.net/>

- Operation**
1. Download Realterm and install according to the instructions on the Realterm website.
 2. Connect the ASR via USB (page 8) or via RS-232 (page 11).
 3. If using RS-232, make note of the configured baud rate, stop bits and parity.
 4. Go to the Windows device manager and find the COM port number for the connection. For example, go to the Start menu > Control Panel > Device Manager.

Double click the *Ports* icon to reveal the connected serial port devices and the COM port for the each connected device.

If using USB, the baud rate, stop bit and parity settings can be viewed by right-clicking the

connected device and selecting the *Properties* option.

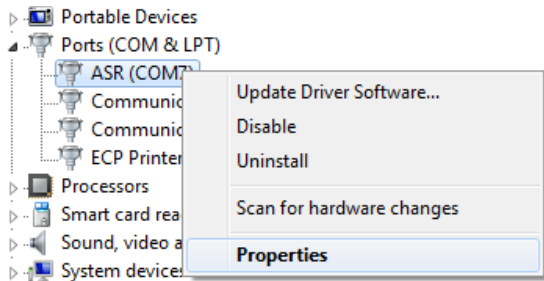

5. Start Realterm on the PC as an administrator.
Click:
Start menu>All Programs>RealTerm>realterm


Tip: to run as an administrator, you can right click the Realterm icon in the Windows Start menu and select the *Run as Administrator* option.

6. After Realterm has started, click on the *Port* tab.

Enter the *Baud*, *Parity*, *Data bits*, *Stop bits* and *Port* number configuration for the connection.

The *Hardware Flow Control*, *Software Flow Control* options can be left at the default settings.

Press *Open* to connect to the ASR.

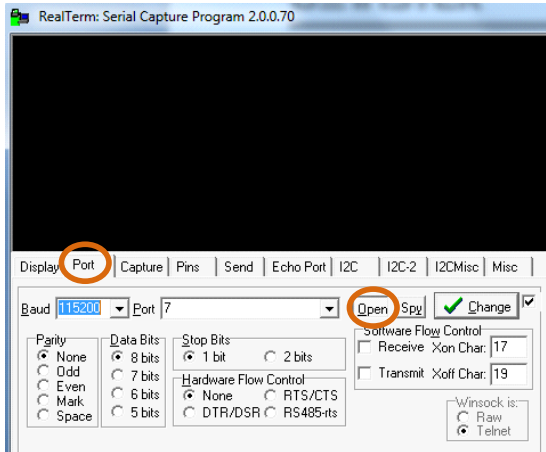

Note

For USB, the baud rate should be fixed to 115,200.


7. Click on the *Send* tab.

In the *EOL* configuration, check on the **+LF** check boxes.

Enter the query:

**idn?*

Click on *Send ASCII*.

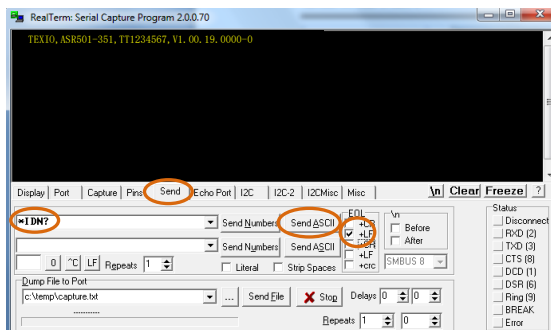

8. The terminal display will return the following:

TEXIO, ASRXXX-XXX, XXXXXXXXXX,
XX.XX.XX.XXXX-X

(manufacturer, model, serial number, software version)


9. If Realterm fails to connect to the ASR, please check all the cables and settings and try again.

1-4.GP-IB Interface(G type)

1-4-1. GPIB Remote Interface

GPIB Configuration

1. Connect a GPIB cable from the PC to the GPIB port on the rear panel.




2. Press the *Menu* key. The Menu setting will appear on the display.
3. Use the scroll wheel to go to item 6, *GPIB* and press *Enter*.
4. Set the GPIB address.



GPIB Address 0 ~ 30 (10 by default)

GPIB Configuration

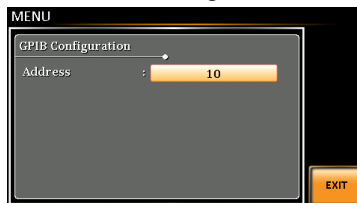

Note

Only one GPIB address can be used at a time.

Exit

5. Press *Exit*[F4] to exit from the GPIB settings.



GPIB
Constraints

- Maximum 15 devices altogether, 20m cable length, 2m between each device
- Unique address assigned to each device
- At least 2/3 of the devices turned On
- No loop or parallel connection

1-4-2. GPIB Function Check

Functionality
Check

Please use the National Instruments Measurement & Automation Controller software to confirm GPIB/LAN functionality.

See the National Instrument website, <http://www.ni.com> for details.



Note

- Operating System: Windows XP, 7, 8, 10

Operation


1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press:



Start>All Programs>NI MAX




2. From the Configuration panel access;
My System>Devices and Interfaces>GPIB0
3. Press the *Scan for Instruments* button.
4. In the *Connected Instruments* panel the ASR should be detected as *Instrument 0* with the address the same as that configured on the ASR.
5. Double click the *Instrument 0* icon.

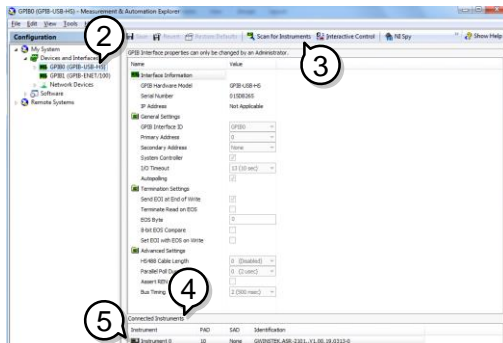

6. Click on *Communicate with Instrument*.
7. Under the Communicator tab, ensure **IDN?* is written in the *Send String* text box.
8. Click on the *Query* button to send the **IDN?* query to the instrument.
9. The instrument identification string will be returned to the buffer area:

TEXIO, ASRXXX-XXX, XXXXXXXXXX,
XX.XX.XX.XXXX-X

(manufacturer, model, serial number, software version)

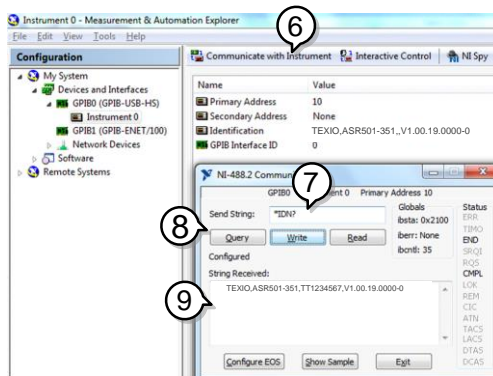

10. The function check is complete.


2. Command Syntax

Compatible Standard	IEEE488.2	Partial compatibility
	SCPI, 1999	Partial compatibility

Command Structure

SCPI commands follow a tree-like structure, organized into nodes. Each level of the command tree is a node. Each keyword in a SCPI command represents each node in the command tree. Each keyword (node) of a SCPI command is separated by a colon (:).

For example, the diagram below shows an SCPI sub-structure and a command example.

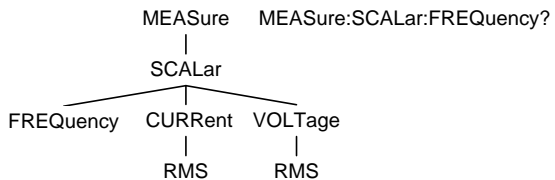

Command types

There are a number of different instrument commands and queries. A command sends instructions or data to the unit and a query receives data or status information from the unit.

Command types

Simple A single command with/without a parameter

Example *IDN?

Query A query is a simple or compound command followed by a question mark (?). A parameter (data) is returned.

Example meas:curr?


Compound Two or more commands on the same command line. Compound commands are separated with either a semi-colon (;) or a semi-colon and a colon (;:).

A semi-colon is used to join two related commands, with the caveat that the last command must begin at the last node of the first command.

Example meas:volt?;curr?

A semi-colon and colon are used to combine two commands from different nodes.

Example meas:volt?::sour:volt?

 **Note**
(Further explanation)

A semi-colon(;) is used to connect two commands. A colon(:) at the start of a command indicates that the command starts from the root node. The first command can ignore that first colon. Any commands after the first command (for compound commands) that do not begin with a colon, must begin at the last node of the first command.

Command
Forms

Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.

The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized.

Below are examples of correctly written commands.


Long form	:SYSTem:ERRor? :SYSTEM:ERROR? :system:error?
Short form	SYST:ERR? syst:err?

Square Brackets

Commands that contain square brackets indicate that the contents are optional. The function of the command is the same with or without the square bracketed items, as shown below.

For example the query “:OUTPut[:STATe]?” has two valid forms, “:OUTPut:STATe?” and “:OUTPut?”.

Command
Format



1. Command header
 2. Space
 3. Parameter 1
 4. Comma (no space before/after comma)
 5. Parameter 2
-

Parameters	Type	Description	Example
	<Boolean>	Boolean logic	0, 1
	<NR1>	integers	0, 1, 2, 3
	<NR2>	decimal numbers	0.1, 3.14, 8.5
	<NR3>	floating point	4.5e-1, 8.25e+1
	<NRf>	any of NR1, 2, 3	1, 1.5, 4.5e-1
	<block data>	Definitive length arbitrary block data. A single decimal digit followed by data. The decimal digit specifies how many 8-bit data bytes follow.	
Message Terminator	LF	Line feed code	

3.

3. Command List

3-1. Common Commands

3-1-1. *CLS

Set →

Description	The *CLS command clears all the event registers, including the status byte, event status and error queue.
-------------	---

Syntax	*CLS
--------	------

3-1-2. *IDN

→ Query

Description	Queries the manufacturer, model name, serial number, and firmware version of the APS.
-------------	---

Query Syntax	*IDN?
--------------	-------

Return parameter	<code><string></code> Returns the instrument identification as a string in the following format: TEXIO, ASRXXX-XXX, XXXXXXXXX, XX.XX.XX.XXXX-X Manufacturer: TEXIO Model number : ASRXXX-XXX Serial number : XXXXXXXXX Firmware version : XX.XX.XX.XXXX-X
------------------	--

3-1-3. *OPC

→ Query

Description	The *OPC? Query returns 1 when all the outstanding commands have completed.	
Syntax	*OPC	
Query Syntax	*OPC?	
Return parameter	1	Returns 1 when all the outstanding commands have completed.

3-1-4. *RCL

Set →

Description	Recalls the contents stored in memory slot M0 ~ M9. These memory slots are mapped to the preset settings.	
Syntax	*RCL {<NR1> MINimum MAXimum}	
Parameter	<NR1>	0 ~ 9 (as memory M0 ~ M9)
	MIN	Recalls the M0 memory contents.
	MAX	Recalls the M9 memory contents.

3-1-5. *RST

Set →

Description	Performs a device reset. Configures the unit to a known configuration (default settings). This known configuration is independent of the usage history.	
Syntax	*RST	

3-1-6. *SAV

Set →

Description	Saves the settings into memory slot M0 ~ M9. These memory slots are mapped to the preset settings.	
Syntax	*SAV {<NR1> MINimum MAXimum}	
Return parameter	<NR1>	0 ~ 9 (as memory M0 ~ M9)
	MIN	Saves to the M0 memory slot.
	MAX	Saves to the M9 memory slot.

3-1-7. *WAI

Set →

Description	Prevents any other commands or queries from being executed until all outstanding commands have completed.
Syntax	*WAI

3-2. Trace/Data Commands



Note

The TRACE and DATA node for the following commands are functionally equivalent.

3-2-1. :DATA|TRACe:SEQuence:CLEAr

Set →

Description	Clears the sequence data for the selected save memory (Seq0 ~ Seq9).
Syntax	:DATA TRACe:SEQuence:CLEAr {<NR1> MINimum MAXimum}
Parameter	<NR1> 0~9 MIN 0 MAX 9
Example	:DATA:SEQ:CLE 1 Clears the sequence data from Seq1.

3-2-2. :DATA|TRACe:SEQuence:RECall

Set →

Description	Loads the sequence data. This command is the equivalent to recalling a sequence memory in the Sequence mode.
Syntax	:DATA TRACe:SEQuence:RECall {<NR1> MINimum MAXimum}
Parameter	<NR1> 0~9 (Seq0 ~ Seq9). MIN 0 MAX 9
Example	:DATA:SEQ:REC 1 Loads the data from Seq1.

3-2-3. :DATA|TRACe:SEQuence:STORe

Description Saves the sequence data. This command is the equivalent to saving a sequence memory in Sequence mode.

Syntax :DATA|TRACe:SEQuence:STORe
{<NR1>|MINimum|MAXimum}

Parameter

<NR1>	0~9 (Seq0 ~ Seq9).
MIN	0
MAX	9

Example :DATA:SEQ:STOR 1
Saves the data from Seq1.

3-2-4. :DATA|TRACe:SIMulation:CLEAr

Description Clears the simulation data for the selected save memory (SIM0 ~ SIM9).

Syntax :DATA|TRACe:SIMulation:CLEAr
{<NR1>|MINimum|MAXimum}

Parameter

<NR1>	0~9 (SIM0 ~ SIM9).
MIN	0
MAX	9

Example :DATA:SIM:CLE 1
Clears the simulation data from SIM1.

3-2-5. :DATA|TRACe:SIMulation:RECall

Description Loads the simulation data. This command is the equivalent to recalling a simulation memory in the Simulation mode (SIM0~SIM9).

Syntax :DATA|TRACe:SIMulation:RECall
{<NR1>|MINimum|MAXimum}

Parameter

<NR1>	0~9 (SIM0 ~ SIM9).
MIN	0
MAX	9

Example :DATA:SIM:REC 1
 Loads the data from SIM1.

3-2-6. :DATA|TRACe:SIMulation:STORE

Description Saves the simulation data. This command is the equivalent saving a simulation memory in Simulation mode (SIM0 ~ SIM9).

Syntax :DATA|TRACe:SIMulation:STORE
 {<NR1>|MINimum|MAXimum}

Parameter <NR1> 0~9 (SIM0 ~ SIM9).
 MIN 0
 MAX 9

Example :DATA:SIM:STOR 1
 Saves the data from SIM1.

3-2-7. :DATA|TRACe:WAVe:CLEAr

Description Clears the ARB 1-16 data for the selected wave group.

Syntax :DATA|TRACe:WAVe:CLEAr
 {<NR1>|MINimum|MAXimum}

Parameter <NR1> 1~16 (ARB1 ~ ARB16).
 MIN Minimum
 MAX Maximum

Example :DATA:WAV:CLE 13
 Clears the wave data from ARB13.

3-2-8. :DATA|TRACe:WAVe[:DATA]

Description Sets the arbitrary wave.

Syntax :DATA|TRACe:WAVe[:DATA] {<NR1>|<Binary Data>}

Parameter	<NR1> 1 – 16 (ARB 1 – 16)
	Binary Data includes the #48192<DAB>...<DAB>
	# Indicates the block data is sent.
	4 Indicates the number of subsequent numbers.
	8192 Indicates the number of subsequent byte data.
	<DAB>. Indicates 16-bit with 4096 words ..<DAB waveform data. Plus, the data format of > wave is the big endian in the form of two's complement.
Example	TRAC:WAV 1, #48192<DAB>...<DAB>

3-3.Measure Commands

3-3-1. :MEASure[:SCALar]:CURRent:CFAC tor → Query

Description Returns the output current crest factor (CF).

Query syntax :MEASure[:SCALar]:CURRent:CFACtor?

Return parameter <NR2> Returns the crest factor.

3-3-2. :MEASure[:SCALar]:CURRent:HIGH → Query

Description Returns the output current maximum peak value (Imax).

Note: Current maximum peak value is defined as the highest peak value in the complete period.

Query syntax :MEASure[:SCALar]:CURRent:HIGH?

Return parameter <NR2> Returns the Imax value in amps.

3-3-3. :MEASure[:SCALar]:CURRent:LOW → Query

Description Returns the output current minimum value (Imin).

Note: Current minimum value is defined as the lowest value in the complete period.

Query syntax :MEASure[:SCALar]:CURRent:LOW?

Return parameter <NR2> Returns the Imin value in amps.

3-3-4. :MEASure[:SCALar]:CURRent:PEAK :CLEar Set →

Description Clears the current peak-hold value.

Syntax :MEASure[:SCALar]:CURRent:PEAK:CLEar

3-3-5. :MEASure[:SCALar]:CURRent:PEAK :HOLD

→ Query

Description Returns the current peak hold value in amps (IPK Hold).

Query syntax :MEASure[:SCALar]:CURRent:PEAK:HOLD?

Return <NR2> Returns the peak hold value in amps.

3-3-6. :MEASure[:SCALar]:CURRent[:RMS]

→ Query

Description Returns the output current (Irms).

Query syntax :MEASure[:SCALar]:CURRent[:RMS]?

Return <NR2> Returns the Irms value.

3-3-7. :MEASure[:SCALar]:CURRent:AVER age

→ Query

Description Returns the current average value (Iavg).

Query syntax :MEASure[:SCALar]:CURRent:AVERage?

Return <NR2> Returns the current average value in amps.

3-3-8. :MEASure[:SCALar]:CURRent:HARMon ic[:RMS]

→ Query

Description Returns 41 values covering Total and order 1 to 40 current (Irms) in harmonic. (Only AC-INT and 50 /60 Hz Active)

Query syntax :MEASure[:SCALar]:CURRent:HARMonic[:RMS]?

Return <NR2>,<NR2>,<NR2>...,<NR2> etc. Returns the entire 41 values containing Total and order 1 to 40 current (Irms) in harmonic.

3-3-9. :MEASure[:SCALar]:CURRent:HARMonic:RATio → Query

Description Returns 41 values covering Total and order 1 to 40 current (Ratio) in harmonic. (Only AC-INT and 50 /60 Hz Active)

Query syntax :MEASure[:SCALar]:CURRent:HARMonic:RATio?

Return <NR2>,<NR2> Returns the entire 41 values containing Total and order 1 to 40 current (Ratio) in harmonic. <NR2>..., etc.

3-3-10. :MEASure[:SCALar]:FREQuency → Query

Description Returns the SYNC signal source frequency in Hz. (Only AC+DC-sync or AC-sync Active)

Query syntax :MEASure[:SCALar]:FREQuency?

Return <NR2> Returns the SYNC frequency in Hz.

3-3-11. :MEASure[:SCALar]:POWer[:AC]:AP Parent → Query

Description Returns the apparent power (S).

Query syntax :MEASure[:SCALar]:POWer[:AC]:APParent?

Return <NR2> Returns the apparent power in VA.

3-3-12. :MEASure[:SCALar]:POWer[:AC]:PF ACtor → Query

Description Returns the power factor (PF).

Query syntax :MEASure[:SCALar]:POWer[:AC]:PFACTOR?

Return <NR2> Returns the power factor.

3-3-13.:MEASure[:SCALar]:POWER[:AC]:RE
Active → Query

Description	Returns the reactive power (Q).
Query syntax	:MEASure[:SCALar]:POWER[:AC]:REACTIVE?
Return	<NR2> Returns the reactive power in VAR.

3-3-14.:MEASure[:SCALar]:POWER[:AC][:RE
AL] → Query

Description	Returns the active power in Watts (P).
Query syntax	:MEASure[:SCALar]:POWER[:AC][:REAL]?
Return	<NR2> Returns the power in Watts.

3-3-15.:MEASure[:SCALar]:VOLTage[:RMS] → Query

Description	Returns the voltage (Vrms).
Query syntax	:MEASure[:SCALar]:VOLTage[:RMS]?
Return	<NR2> Returns the voltage in Vrms.

3-3-16.:MEASure[:SCALar]:VOLTage:AVER
age → Query

Description	Returns the voltage average value (Vavg).
Query syntax	:MEASure[:SCALar]:VOLTage:AVERage?
Return	<NR2> Returns the voltage average value in volts.

3-3-17.:MEASure[:SCALar]:VOLTage:HIGH → Query

Description	Returns the output voltage maximum peak value (Vmax).
Note:	Voltage maximum peak value is defined as the highest peak value in the complete period.

Query syntax	:MEASure[:SCALar]:VOLTage:HIGH?	
Return parameter	<NR2>	Returns the Vmax value in volts.

3-3-18. :MEASure[:SCALar]:VOLTage:LOW → Query

Description	Returns the output current minimum value (Vmin).	
-------------	--	--

Note: Voltage minimum value is defined as the lowest value in the complete period.

Query syntax	:MEASure[:SCALar]:VOLTage:LOW?	
Return parameter	<NR2>	Returns the Vmin value in volts.

3-3-19. :MEASure[:SCALar]:VOLTage:HARMonic[:RMS] → Query

Description	Returns 41 values covering Total and order 1 to 40 voltage (Vrms) in harmonic. (Only AC-INT and 50 /60 Hz Active)	
-------------	---	--


Query syntax	:MEASure[:SCALar]: VOLTage:HARMonic[:RMS]?	
Return	<NR2>,<NR2>,<NR2>...,<NR2>... etc.	Returns the entire 41 values containing Total and order 1 to 40 voltage (Vrms) in harmonic.

3-3-20. :MEASure[:SCALar]:VOLTage:HARMonic:RATio → Query

Description	Returns 41 values covering Total and order 1 to 40 voltage (Ratio) in harmonic. (Only AC-INT and 50 /60 Hz Active)	
-------------	--	--

Query syntax	:MEASure[:SCALar]: VOLTage:HARMonic:RATio?	
Return	<NR2>,<NR2>,<NR2>...,<NR2>... etc.	Returns the entire 41 values containing Total and order 1 to 40 voltage (Ratio) in harmonic.

3-3-21. :MEASure:CONFigure:SENSing



Description	Sets or queries the remote sense configuration. (Only AC-INT, DC-INT, AC-SYNC Mode and 100V, 200V Range and SIN Wave Shape and Time Slew Rate Mode Active)	
Syntax	:MEASure:CONFigure:SENSing {<bool> OFF ON}	
Query Syntax	:MEASure:CONFigure:SENSing?	
Parameter	OFF 0	Turns the remote sense off.
	ON 1	Turns the remote sense on.
Return parameter	<bool>	Returns the status of remote sense.
Example	:MEAS:CONF:SENS 0 Sets the remote sense off.	

3-4. Memory Commands

3-4-1. :MEMory:RCL



Description	Recalls the settings from memory slot M0~M9. These memory slots are mapped to the preset settings. Equivalent to the *RCL command.	
Syntax	:MEMory:RCL {<NR1> MINimum MAXimum}	
Parameter	<NR1>	0~9
	MINimum	0
	MAXimum	9
Example	:MEMory:RCL Recall the settings to M1.	

3-4-2. :MEMory:SAV

Set →

Description Saves the settings into memory slot M0 ~ M9. These memory slots are mapped to the preset settings. Equivalent to the *SAV command.

Syntax :MEMory:SAV {<NR1>|MINimum|MAXimum}

Parameter <NR1> 0~9
MINimum 0
MAXimum 9

Example :MEMory:SAV 1
Save the settings to M1.

3-5. Output Commands

3-5-1. :OUTPut[:STATe]

Set →

→ Query

Description Sets or queries the output state of power source.

Syntax :OUTPut[:STATe] {<bool>|OFF|ON}

Query Syntax :OUTPut[:STATe]?

Parameter OFF | 0 Turns the output off.
ON | 1 Turns the output on.

Return parameter <bool> Returns output status of the instrument.

Example :OUTP 0
Sets power output off.

3-5-2. :OUTPut:PON

Set →

→ Query

Description Sets the output state at power-on.

Syntax :OUTPut:PON {<NR1>|OFF|ON|SEQ|SIM}

Return Syntax :OUTPut:PON?

Parameter	<NR1>	0 ~ 3
	OFF 0	Disabled
	ON 1	Enabled
	SEQ 2	Sequence function
	SIM 3	Simulate function
Return parameter	<NR1>	Returns the selected output state at power-on from 0 to 3.
Example	:OUTPut:PON 2 Sets sequence function on at power-on.	

3-5-3. :OUTPut:PROTEction:CLEar

Description	Clears the machine error.	
Syntax	:OUTPut:PROTEction:CLEar	

3-5-4. :OUTPut:RELAy

Description	Sets or queries the output relay of power source.	
Syntax	:OUTPut:RELAy {<bool> OFF ON}	
Query Syntax	:OUTPut:RELAy?	
Parameter	OFF 0	Turns the output relay off.
	ON 1	Turns the output relay on.
Return parameter	<bool>	Returns output relay of the instrument.
Example	:OUTP:REL 1 Sets output relay on.	

3-6. System Function Commands

3-6-1. :SYSTem:BEEPer:STATe

Description	Sets or queries the buzzer state on/off.	
Syntax	:SYSTem:BEEPer:STATe {<bool> OFF ON}	
Query Syntax	:SYSTem:BEEPer:STATe?	
Parameter	OFF 0	Turns the buzzer off.

	ON 1	Turns the buzzer on.
Return parameter	<bool>	Returns the buzzer status.

3-6-2. :SYSTem:COMMunicate:GPIB[:SEL F]:ADDRESS

Description	Sets or queries the GPIB address.	
Note:	The setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:GPIB[:SEL F]:ADDRESS <NR1>	
Query Syntax	:SYSTem:COMMunicate:GPIB[:SEL F]:ADDRESS?	
Parameter/Return	<NR1>	0~30
Example	SYST:COMM:GPIB:ADDR 15 Sets the GPIB address to 15.	

3-6-3. :SYSTem:COMMunicate:LAN:DHCP

Description	Turns DHCP on/off. Queries the DHCP status.	
Note:	The setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:LAN:DHCP {<bool> OFF ON}	
Query Syntax	:SYSTem:COMMunicate:LAN:DHCP?	
Parameter	OFF 0	DHCP off
	ON 1	DHCP on
Return parameter	<bool>	Returns the DHCP status.

3-6-4. :SYSTem:COMMunicate:LAN:DNS

Set →
→ Query

Description	Sets or queries the DNS address.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:DNS <string>
Query Syntax	:SYSTem:COMMunicate:LAN:DNS?
Parameter/Return	<string> DNS in string format ("mask") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:DNS "172.16.1.252" Sets the DNS to 172.16.1.252.

3-6-5. :SYSTem:COMMunicate:LAN:GATEway

Set →
→ Query

Description	Sets or queries the Gateway address.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:GATEway <string>
Query Syntax	:SYSTem:COMMunicate:LAN:GATEway?
Parameter/Return	<string> Gateway address in string format ("address") Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:GATE "172.16.0.254" Sets the LAN gateway to 172.16.0.254.

3-6-6. :SYSTem:COMMunicate:LAN:IPADdress

Set →
→ Query

Description	Sets or queries LAN IP address.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:IPADdress <string>
Query Syntax	:SYSTem:COMMunicate:LAN:IPADdress?

Parameter/Return	<string> LAN IP address in string format (“address”) Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:IPAD “172.16.5.111” Sets the IP address to 172.16.5.111.

3-6-7. :SYSTem:COMMunicate:LAN:MAC →

Description	Returns the unit MAC address as a string. The MAC address cannot be changed.
Query Syntax	:SYSTem:COMMunicate:LAN:MAC?
Return parameter	<string> Returns the MAC address in the following format “FF-FF-FF-FF-FF-FF”
Example	SYST:COMM:LAN:MAC? 02-80-AD-20-31-B1 Returns the MAC address.

3-6-8. :SYSTem:COMMunicate:LAN:SMAS k → →

Description	Sets or queries the LAN subnet mask.
Note:	The setting will only be valid after the power has been cycled.
Syntax	:SYSTem:COMMunicate:LAN:SMASk <string>
Query Syntax	:SYSTem:COMMunicate:LAN:SMASk?
Parameter/Return	<string> Subnet mask in string format (“mask”) Applicable ASCII characters: 20H to 7EH
Example	SYST:COMM:LAN:SMASk “255.255.0.0” Sets the LAN mask to 255.255.0.0.

3-6-9. :SYSTem:COMMunicate:RLState → →

Description	Enables or disables local/remote state of the instrument.
Syntax	:SYSTem:COMMunicate:RLState {LOCAl REMote RWLock LREMote}
Query Syntax	:SYSTem:COMMunicate:RLState?

Parameter/Return parameter	LOCAL	All keys are valid. This instrument is controlled by the front panel controls.
	REMOte	All keys are invalid, except for the [local] key and the ability to turn the output off.
	RWLock	All keys are invalid. The instrument can only be controlled remotely.
	LREMote	All keys are valid. This instrument is controlled by the front panel controls and remotely.
Example	:SYST:COMM:RLST LOCAL Sets the operating mode to local.	

3-6-10.:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit:BAUD  


Description	Sets or queries the UART baud rate.	
Note:	The setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit	
Query Syntax	:BAUD <NR1> :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :BAUD?	
Parameter/Return	<NR1>	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200
Example	SYST:COMM:SER:TRAN:BAUD? >2400 Returns the baud rate settings.	

3-6-11.:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit:BITS  

Description	Sets or queries the UART number of data bits.	
Note:	The setting will only be valid after the power has been cycled.	

Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit	
Query Syntax	:BITS <NR1> :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :BITS?	
Parameter	0	7 bits
	1	8 bits
Return parameter	+0	7 bits
	+1	8 bits
Example	SYST:COMM:SER:TRAN:BITS? >+1 Indicates that 8 data bits are used for the UART connection.	

3-6-12. :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit:PARity



Description	Sets or queries the parity of the UART connection.	
Note:	The setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit	
Query Syntax	:PARity {NONE ODD EVEN} :SYSTem:COMMunicate:SERial[:RECeive]:TRANsmit :PARity?	
Parameter	NONE	No parity
	ODD	Odd parity
	EVEN	Even parity
Return parameter	+0	No parity
	+1	Odd parity
	+2	Even parity
Example	SYST:COMM:SER:TRAN:PARity? >+0 Indicates that no parity is used for the UART connection.	

3-6-13.:SYSTem:COMMunicate:SERial[:RE
Ceive]:TRANsmitt:SBITs (Set) →
→ (Query)

Description	Sets or queries the number of stop bits used for the UART connection.	
Note:	The setting will only be valid after the power has been cycled.	
Syntax	:SYSTem:COMMunicate:SERial[:RECEive]:TRANsmitt	
Query Syntax	:SBITs <NR1> :SYSTem:COMMunicate:SERial[:RECEive]:TRANsmitt :SBITs?	
Parameter	0	1 stop bit
	1	2 stop bits
Return parameter	+0	1 stop bit
	+1	2 stop bits
Example	SYST:COMM:SER:TRAN:SBITs? >+1 Indicates that one stop bit is used for the UART connection.	

3-6-14.:SYSTem:COMMunicate:TCPIP:CON
Trol → (Query)

Description	Queries the socket port number.	
Query Syntax	:SYSTem:COMMunicate:TCPIP:CONTRol?	
Return parameter	<NR1>	0000 ~ 9999
Example	SYST:COMM:TCP:CON? >2268 Returns the socket port number.	

3-6-15. :SYSTem:COMMunicate:USB:FRONT:
STATE

→ Query

Description	Queries the front panel USB-A port state.	
Query Syntax	:SYSTem:COMMunicate:USB:FRONT:STATE?	
Return parameter	+0	<NR1>Absent
	+1	<NR1>Mass Storage

3-6-16. :SYSTem:COMMunicate:USB:REAR:
MODE

Set →

→ Query

Description	Sets or queries the speed of the rear panel USB B port. This setting is applied only after the unit is reset.	
Syntax	:SYSTem:COMMunicate:USB:REAR:MODE {<NR1> AUTO FULL}	
Query Syntax	:SYSTem:COMMunicate:USB:REAR:MODE?	
Parameter	0 AUTO	AUTO
	1 FULL	FULL
Return parameter	<NR1>	
	+0	AUTO
	+1	FULL

3-6-17.:SYSTem:COMMunicate:USB:REAR:STATE

→ Query

Description	Queries the rear panel USB-B port state.	
Query Syntax	:SYSTem:COMMunicate:USB:REAR:STATE?	
Return parameter	+0	<NR1>Absent
	+1	<NR1>Connected to the PC

3-6-18.:SYSTem:CONFigure[:MODE]

Set →

→ Query

Description	Sets or queries the test mode for the power supply.	
Syntax	:SYSTem:CONFigure[:MODE] {<NR1> CONTInuous SEQuence SIMulation} (SEQ is available for AC+DC-INT, AC-INT, DC-INT Modes, whilst SIM is available for AC+DC-INT Mode.)	
Query Syntax	:SYSTem:CONFigure[:MODE]?	
Parameter	0 CONTInuous	Continuous mode (normal operating mode)
	1 SEQuence	Sequence mode
	2 SIMulation	Simulation mode
Return parameter	<NR1>	
	CONT	Continuous mode (normal operating mode)
	SEQ	Sequence mode
	SIM	Simulation mode

Set →

3-6-19.:SYSTem:CONFigure:EXTio[:STATE]

→ Query

Description	Sets or queries the external control state on/off.
-------------	--

Syntax	:SYSTem:CONFigure:EXTio[:STATe]	
Query Syntax	{<bool> OFF ON}	
	:SYSTem:CONFigure:EXTio[:STATe]?	
Parameter	OFF 0	Turns the external control off.
	ON 1	Turns the external control on.
Return parameter	<bool>	Returns the external control status.

3-6-20. :SYSTem:ERRor

→ Query

Description	Queries the error queue. The last error message is returned. A maximum of 32 errors are stored in the error queue.	
Query Syntax	:SYSTem:ERRor?	
Return parameter	<string>	Returns an error code followed by an error message as a single string.
Example	SYSTem:ERRor? -100, "Command error"	

3-6-21. :SYSTem:ERRor:ENABle

Set →

Description	Clears the Error Queue and enables all error messages to be placed in the System Error Queue.	
Syntax	:SYSTem:ERRor:ENABle	

3-6-22. :SYSTem:HOLD:STATe

Set →

→ Query

Description	Sets or queries the freeze hold state on/off.	
Syntax	:SYSTem:HOLD:STATe {<bool> OFF ON}	
Query Syntax	:SYSTem:HOLD:STATe?	
Parameter	OFF 0	Turns the freeze hold off.
	ON 1	Turns the freeze hold on.
Return parameter	<bool>	Returns the freeze hold status.

3-6-23. :SYSTem:IPKHold:TIME

Set →

→ Query

Description	Sets or queries the lpeak hold time for peak current measurement when output on.
Syntax	:SYSTem:IPKhold:TIME {<NR1>}
Query Syntax	:SYSTem:IPKhold:TIME?
Parameter	<NR1> 1~60,000
Example	:SYST:IPKH:TIME 10 Sets the lpeak hold time 10ms to measure when output on.

3-6-24.:SYSTem:KLOCK (Set) →
→ (Query)

Description	Enables or disables the front panel key lock.
Syntax	:SYSTem:KLOCK {<bool> OFF ON}
Query Syntax	:SYSTem:KLOCK?
Parameter	OFF 0 Panel keys unlocked ON 1 Panel keys locked
Return parameter	<bool> Returns the key lock status.


3-6-25.:SYSTem:REBoot (Set) →

Description	Reboots the ASR system.
Syntax	:SYSTem:REBoot

3-6-26.:SYSTem:SLEW:MODE (Set) →
→ (Query)

Description	Sets or queries slew mode setting.
Syntax	:SYSTem:SLEW:MODE {<bool> TIME SLOPe}
Query Syntax	:SYSTem:SLEW:MODE?
Parameter	TIME 0 Sets the Time mode. SLOPe 1 Sets the Slope mode.
Return parameter	<bool> Returns the slew mode setting.
Example	:SYST:SLEW:MODE TIME Sets the Time mode for slew mode.


3-6-27. :SYSTem:VUNit




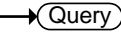
Description	Sets or queries V unit setting.	
Syntax	:SYSTem:VUNit {<NR1> RMS P-P}	
Query Syntax	:SYSTem:VUNit?	
Parameter	RMS 0 P-P 1	Sets the RMS. Sets the P-P.
Return parameter	+0 +1	The Unit of Voltage Setting is Vrms. The Unit of Voltage Setting is Vpp.
Example	:SYST:VUN RMS Sets the RMS for V unit.	

3-7. Source Commands


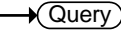
3-7-1. [:SOURce]:CURRent:LIMit:PEAK:HIGH



Description	Sets or queries the Ipk-High Limit parameter for the continuous operation mode.	
Syntax	[:SOURce]:CURRent:LIMit:PEAK:HIGH {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:LIMit:PEAK:HIGH? [MINimum MAXimum]	
Parameter	<NR2> MINimum MAXimum	Ipk-High Limit in Arms. Minimum settable peak current high limit Maximum settable peak current high limit
Return parameter	<NR2>	Returns the Ipk-High Limit value
Example	CURR:LIM:PEAK:HIGH? 16.80 Returns the peak current high limit as 16.8Arms.	



3-7-2. [:SOURce]:CURRent:LIMit:PEAK:LOW 
W 

Description	Sets or queries the Ipk-Low Limit parameter for the continuous operation mode.	
Syntax	[:SOURce]:CURRent:LIMit:PEAK:LOW {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:LIMit:PEAK:LOW? [MINimum MAXimum]	
Parameter	<NR2> MINimum MAXimum	Ipk-Low Limit in Arms. Minimum settable peak current low limit <small>TEXTIO,ASR501-351,V1.00.19.00000-0</small> Maximum settable peak current low limit
Return parameter	<NR2>	Returns the Ipk-Low Limit value
Example	:CURR:LIM:PEAK:LOW? 14.80 Returns the peak current low limit as 14.8Arms.	

3-7-3. [:SOURce]:CURRent:LIMit:RMS 
[:AMPLitude] 

Description	Sets or queries the Irms parameter for the continuous operation mode.	
Syntax	[:SOURce]:CURRent:LIMit:RMS[:AMPLitude] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:CURRent:LIMit:RMS[:AMPLitude]? [MINimum MAXimum]	
Parameter	<NR2> MINimum MAXimum	Irms in A. Minimum settable current Maximum settable current
Return parameter	<NR2>	Returns the Irms.

Example :CURR:LIM:RMS?
 5.25
 Returns the Irms setting.

3-7-4. [[:SOURce]:CURRent:LIMit:PEAK:MO  →
 DE 



Description Sets or queries lpk limit enabled or disabled.

Syntax [:SOURce]:CURRent:LIMit:PEAK:MODE
 {<bool>|OFF|ON}

Query Syntax [:SOURce]:CURRent:LIMit:PEAK:MODE?

Parameter/	<bool>	OFF (0) ON (1)
Return	OFF	lpk limit off
parameter	ON	lpk limit on

Example :CURR:LIM:PEAK:MODE ON
 Sets lpk limit enabled.

3-7-5. [[:SOURce]:CURRent:LIMit:RMS:MO  →
 DE 



Description Sets or queries IRMS OC-Fold enable.

Syntax [:SOURce]:CURRent:LIMit:RMS:MODE
 {<bool>|OFF|ON}

Query Syntax [:SOURce]:CURRent:LIMit:RMS:MODE?

Parameter/	<bool>	OFF (0) ON (1)
Return	OFF	IRMS limit off
parameter	ON	IRMS limit on

Example :CURR:LIM:RMS:MODE ON
 Sets IRMS limit enabled.

3-7-6. [[:SOURce]:FREQuency:LIMit:HIGH  →


Description Sets or queries the frequency upper limit range.
 (Only AC+DC-INT or AC-INT or AC+DC-ADD or
 AC-ADD Active)

Syntax	[:SOURce]:FREQuency:LIMit:HIGH {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:FREQuency:LIMit:HIGH? [INimum MAXimum]	
Parameter	<NR2> MINimum MAXimum	Frequency in Hz. Minimum settable frequency Maximum settable frequency
Return parameter	<NR2>	Returns the frequency limit
Example	FREQ:LIM:HIGH? >60.50 Returns the frequency upper limit.	

3-7-7. [:SOURce]:FREQuency:LIMit:LOW

Description	Sets or queries the frequency lower limit range. (Only AC+DC-INT or AC-INT or AC+DC-ADD or AC-ADD Active)	
Syntax	[:SOURce]:FREQuency:LIMit:LOW {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:FREQuency:LIMit:LOW? [INimum MAXimum]	
Parameter	<NR2> MINimum MAXimum	Frequency in Hz. Minimum settable frequency Maximum settable frequency
Return parameter	<NR2>	Returns the frequency limit
Example	FREQ:LIM:LOW? >60.50 Returns the frequency lower limit.	

3-7-8. [:SOURce]:FREQuency[:IMMEDIATE]

Description	Sets or queries the frequency for the immediate trigger. (Only AC+DC-INT or AC-INT or AC+DC-ADD or AC-ADD Active)	
Syntax	[:SOURce]:FREQUency[:IMMediate] {<NR2>(HZ) MINimum MAXimum}	
Query Syntax	[:SOURce]:FREQUency[:IMMediate]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	Frequency setting in Hz. Minimum frequency Maximum frequency
Example	:FREQ 60.00 Sets the frequency of 60Hz.	

3-7-9. [:SOURce]:FUNCTion[:SHAPE][:IMMediate]

Description	Sets or queries the waveforms of power supply. (Not available for AC+DC-EXT or AC-EXT)	
Syntax	[:SOURce]:FUNCTion[:SHAPE][:IMMediate] {<NR1> ARB1 ARB2 ARB3 ARB4 ARB5 ARB6 ARB7 ARB8 ARB9 ARB10 ARB11 ARB12 ARB13 ARB14 ARB15 ARB16 SIN SQU TRI}	
Query Syntax	[:SOURce]:FUNCTion[:SHAPE][:IMMediate]?	
Parameter / Return parameter	<NR1>	From 0 – 18, which represent different waveforms, respectively.
	ARB1	Arbitrary wave 1
	ARB2	Arbitrary wave 2
	ARB3	Arbitrary wave 3
	ARB4	Arbitrary wave 4
	ARB5	Arbitrary wave 5
	ARB6	Arbitrary wave 6
	ARB7	Arbitrary wave 7
	ARB8	Arbitrary wave 8
	ARB9	Arbitrary wave 9
	ARB10	Arbitrary wave 10
	ARB11	Arbitrary wave 11

ARB12	Arbitrary wave 12
ARB13	Arbitrary wave 13
ARB14	Arbitrary wave 14
ARB15	Arbitrary wave 15
ARB16	Arbitrary wave 16
SIN	Sin wave
SQU	Square wave
TRI	Triangle wave

Example :SOUR:FUNC:SHAP:IMM?
 TRI
 Returns the waveform as Triangle wave.

3-7-10.[:SOURce]:FUNCTION:THD:FORMat

Description	Sets or queries the THD format.
Syntax	[:SOURce]:FUNCTION:THD:FORMat {<bool> IEC CSA}
Query Syntax	[:SOURce]:FUNCTION:THD:FORMat?
Parameter /	<bool> IEC (0) CSA (1)
Return	IEC IEC THD format
parameter	CSA CSA THD format
Example	:SOUR:FUNC:THD:FORM? IEC Returns the THD format as IEC.

3-7-11.[:SOURce]:MODE

Description	Sets or queries the output mode of power supply.
Syntax	[:SOURce]:MODE {<NR1> ACDC-INT AC-INT DC-INT ACDC-EXT AC-EXT ACDC-ADD AC-ADD ACDC-SYNC AC-SYNC}
Query Syntax	[:SOURce]:MODE?

Parameter / Return parameter	<NR1>	From 0 – 8, which represent different output modes, respectively.
	ACDC-INT	AC+DC-INT
	AC-INT	AC-INT
	DC-INT	DC-INT
	ACDC-EXT	AC+DC-EXT
	AC-EXT	AC-EXT
	ACDC-ADD	AC+DC-ADD
	AC-ADD	AC-ADD
	ACDC-SYNC	AC+DC-SYNC
	AC-SYNC	AC-SYNC

Example MODE?
AC+DC-INT
Returns the output mode as AC+DC-INT.

3-7-12. [:SOURCE]:PHASe:STARt:STATe  

Description Sets or queries state of start phase. (Not available for DC-INT, AC+DC-EXT and AC-EXT)

Syntax [:SOURCE]:PHASe:STARt:STATe
{<bool>|FREE|FIXED}

Query Syntax [:SOURCE]:PHASe:STARt:STATe?

Parameter/ Return parameter	<bool>	FREE (0) FIXED (1)
	FREE	Start phase Free
	FIXED	Start phase Fixed

Example :PHAS:STAR:STAT?
FREE
Returns the state of start phase as Free.

3-7-13. [:SOURCE]:PHASe:STOP:STATe  

Description Sets or queries state of stop phase. (Not available for DC-INT, AC+DC-EXT and AC-EXT)

Syntax [:SOURCE]:PHASe:STOP:STATe
{<bool>|FREE|FIXED}

Query Syntax	[:SOURce]:PHASe:STOP:STATe?	
Parameter/	<bool>	FREE (0) FIXED (1)
Return	FREE	Start phase Free
parameter	FIXED	Start phase Fixed
Example	:PHAS:STOP:STATe? FIXED Returns the state of stop phase as Fixed.	

3-7-14.[:SOURce]:PHASe:STARt[:IMMEDIATE]

Description	Sets or queries the start phase. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Syntax	[:SOURce]:PHASe:STARt[:IMMEDIATE] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:PHASe:STARt[:IMMEDIATE]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	Start phase value
	MINimum	0°
	MAXimum	359 °
Example	:PHAS:STAR 0 Sets the starting phase to 0.	

3-7-15.[:SOURce]:PHASe:STOP[:IMMEDIATE]

Description	Sets or queries the off phase of the waveform. (Not available for DC-INT, AC+DC-EXT and AC-EXT)	
Note:	Sets the off phase of the waveform after the output has been turned off.	
Syntax	[:SOURce]:PHASe:STOP[:IMMEDIATE] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:PHASe:STOP[:IMMEDIATE]? [MINimum MAXimum]	

Parameter/Return parameter	<NR2> MINimum MAXimum	Stop phase value 0 ° 359 °
Example	:PHAS:STOP 60 Sets the stop phase to 60.	

3-7-16. [:SOURce]:READ

→ Query

Description	Returns the measurement readouts.	
Query Syntax	[:SOURce]:READ?	
Return parameter	<Vrms>,<Vavg>,<Vmax>,<Vmin>,<Irms>,<lavg>,<lmax>,<lmin>,<lpeakH>,<P>,<S>,<Q>,<PF>,<CF>,<Freq>	<THDv>,<THDi> returns values in AC-INT mode only, whereas returns Invalid in other modes. <S>,<Q>,<PF>,<CF> returns Invalid in DC-INT mode. <Freq> returns values in AC+DC-Sync and AC-Sync modes only, whereas returns Invalid in other modes.
Example	:READ? >+0.3204,+0.0306,+0.1879,-0.5809,+0.0121, -0.0007, +0.0030, -0.0060, -0.0201, +0.0013, +0.0039, +0.0037, +0.3400, +1.1500, Invalid, Invalid, Invalid	

Set →


3-7-17. [:SOURce]:VOLTage:RANGe

→ Query

Description	Sets or queries the voltage range.	
Syntax	[:SOURce]:VOLTage:RANGe {<NR1> 100 200 AUTO}	
Query Syntax	[:SOURce]:VOLTage:RANGe?	
Parameter / Return parameter	<NR1> 100	From 0 – 2, which represent different voltage ranges, respectively. 100V


200	200V
AUTO	AUTO (Only AC+DC-INT or AC-INT or DC-INT or AC+DC-sync or AC-sync Active)

Example :SOUR:VOLT:RANG?
200V
Returns the voltage range as 200V.



3-7-18.[:SOURce]:VOLTage:LIMit:RMS

Description	Sets or queries the voltage limit for the continuous operation mode. (Only AC-INT or AC-ADD or AC-Sync Active)	
Syntax	[:SOURce]:VOLTage:LIMit:RMS {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage:LIMit:RMS? [MINimum MAXimum]	
Parameter	<NR2>	Vrms.
	MINimum	Minimum voltage limit
	MAXimum	Maximum voltage limit
Return parameter	<NR2>	Returns the voltage limit.
Example	VOLT:LIM:RMS? 600.00 Returns the Vrms limit.	



3-7-19.[:SOURce]:VOLTage:LIMit:HIGH

Description	Sets or queries the voltage high limit. (Only AC+DC-INT or DC-INT or AC+DC-ADD or AC+DC-Sync Active)	
Syntax	[:SOURce]:VOLTage:LIMit:HIGH {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage:LIMit:HIGH? [MINimum MAXimum]	
Parameter	<NR2>	Voltage high limit
	MINimum	Minimum voltage high limit

	MAXimum	Maximum voltage high limit
Return parameter	<NR2>	Returns the voltage high limit.
Example	VOLT:LIM:HIGH? 500.00 Returns the voltage high limit.	



3-7-20. [:SOURce]:VOLTage:LIMit:LOW  

Description	Sets or queries the voltage low limit. (Only AC+DC-INT or DC-INT or AC+DC-ADD or AC+DC-Sync Active)	
Syntax	[:SOURce]:VOLTage:LIMit:LOW {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:VOLTage:LIMit:LOW? [MINimum MAXimum]	
Parameter	<NR2>	Voltage low limit
	MINimum	Minimum voltage low limit
	MAXimum	Maximum voltage low limit
Return parameter	<NR2>	Returns the voltage low limit.
Example	VOLT:LIM:LOW? 400.00 Returns the voltage low limit.	

3-7-21. [:SOURce]:VOLTage:LIMit:PEAK  

Description	Sets or Queries the Value of Vpp in Specific Mode(AC-INT or AC-ADD or AC-Sync) and Wave Shape(TRI or ARB) and V Unit(p-p)	
Syntax	[:SOURce]:VOLTage:LIMit:PEAK <NR2> MINimum MAXimum	
Query Syntax	[:SOURce]:VOLTage:LIMit:PEAK? [MINimum MAXimum]	
Parameter/Return parameter	<NR2>	
	MINimum	Minimum voltage
	MAXimum	Maximum voltage

Example VOLT:LIM:PEAK?
 300.00
 Returns the Vp-p limit.

3-7-22.[:SOURce]:VOLTage[:LEVel][:IMMediate][:AMPLitude]  


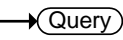
Description Sets or queries the RMS voltage for the continuous operation mode. (Not available for DC-INT, AC+DC-EXT and AC-EXT)

Syntax [:SOURce]:VOLTage[:LEVel][:IMMediate][:AMPLitude] {<NR2>(V)|MINimum|MAXimum}

Query Syntax [:SOURce]:VOLTage[:LEVel][:IMMediate][:AMPLitude]? [MINimum|MAXimum]

Parameter/Return parameter	<NR2>	Vrms.
	MINimum	Minimum voltage
	MAXimum	Maximum voltage

Example :VOLT 150.0
 Sets the voltage to 150.0 ACV.

3-7-23.[:SOURce]:VOLTage[:LEVel][:IMMediate]:OFFSet  

Description Sets or queries the voltage offset value. (Only AC+DC-INT or DC-INT or AC+DC-ADD or AC+DC-Sync Active)

Syntax [:SOURce]:VOLTage[:LEVel][:IMMediate]:OFFSet {<NR2>(V)|MINimum|MAXimum}

Query Syntax [:SOURce]:VOLTage[:LEVel][:IMMediate]:OFFSet? [MINimum|MAXimum]

Parameter/Return parameter	<NR2>	Voltage offset value
	MINimum	Minimum voltage offset value
	MAXimum	Maximum voltage offset value

Example :VOLT:OFFS?
 150.0
 Returns the voltage offset value as 150.0.

3-8.Sequence Commands

3-8-1. [[:SOURce]:SEQuence:CPARAmeter

Description	Sets the common parameters for the Sequence mode. Please see the user manual for a full description of each parameter.	
Syntax	[:SOURce]:SEQuence:CPARAmeter {<NR2>,<NR2>,<bool> OFF ON,<NR2>,<bool> OFF ON,<NR1> CONTInue END HOLD,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON,<NR1>,<bool> OFF ON}	
Query Syntax	[:SOURce]:SEQuence:CPARAmeter?	
Parameter	<NR2>	Step Time
	<NR2>	On phase
	<bool> OFF ON FREE FIXED	On phase off (free)(1) / on (fixed)(0)
	<NR2>	Off phase
	<bool> OFF ON FREE FIXED	Off phase off (free) / on (fixed)
	<NR1> CONTInue END HOLD	Term settings: Continue(1)/End(2)/Hold(3)
	<NR1>	Jump step number (0 ~ 999)
	<bool> OFF ON	Jump on(1)/off(0)
	<NR1>	Jump Cnt (0~ 9999)
	<NR1>	Sync Code: LL(0) / LH(1) / HL(2) / HH(3)
	<NR1>	Branch1 (0 ~ 999)
	<bool> OFF ON	Branch1 on(1)/off(0)
	<NR1>	Branch2 (0 ~ 999)
	<bool> OFF ON	Branch2 on(1)/off(0)
	<bool> OFF ON	This parameter is w/o function.

Return parameter	<NR2>,<NR2>,<bool>,<NR2>,<bool>,<NR1>,<NR1>,<bool>,<NR1>,<NR1>,<bool>,<NR1>,<bool>,<bool> Returns the common parameters in the following order: Step time, on phase, on phase on/off, off phase, off phase on/off, term settings, jump step number, jump on/off, jump count, code on/off, branch1, branch1 on/off, branch2, branch2 on/off, trig out on/off.
Example1	:SEQ:CPAR 1,0,10,1,HOLD,10,1,0,1,0,0,0,0,1
Example2	:SEQ:CPAR? >+0.1000,+0,+0,+0,+0,CONT,+1,+1,+1,+0,+0,+0,+0,+0,+0

3-8-2. [:SOURce]:SEQuence:CSTep → Query

Description	Returns the currently running step number.
Query Syntax	[:SOURce]:SEQuence:CSTep?
Return parameter	<NR1> Current step number
Example	:SEQ:CSTep? >1

3-8-3. [:SOURce]:SEQuence:SPARAmeter Set → Query

Description	Sets or queries the parameters for a specified step.
Syntax	[:SOURce]:SEQuence:SPARAmeter {<NR2>,<NR1> CONSt KEEp SWEEp,<NR2>,<NR1> CONSt KEEp SWEEp,<NR2>,<NR1> CONSt KEEp SWEEp,SIN,<NR1>}
Query Syntax	[:SOURce]:SEQuence:SPARAmeter?
Parameter	<NR2> ACV setting <NR1> CONSt ACV mode: Constant(1) KEEp SWEEp Keep(2) Sweep(3) <NR2> DCV. Not applicable. This parameter will be ignored.

	<NR1> CONST KEEP SWEep <NR2> <NR1> CONST KEEP SWEep Waveform <NR1>	DCV mode: Constant(1) Keep(2) Sweep(3) Frequency Frequency mode: Constant(1) Keep(2) Sweep(3) ARB1 ARB2 ARB3 ARB4 ARB5 ARB6 ARB7 ARB8 ARB9 ARB 10 ARB11 ARB12 ARB13 ARB1 4 ARB15 ARB16 SIN SQU TRI Phase angle. Fixed to 0.
Return parameter	<NR2>,<NR1> CONST KEEP SWEep,<NR2>,<NR1> CONST KEEP SWEep,ARB1 ARB2 ARB3 ARB4 ARB5 ARB6 ARB7 ARB8 ARB9 ARB10 ARB11 ARB12 ARB13 ARB14 ARB15 ARB16 SIN SQU TRI,<NR1>	Returns the step parameters in the following order: ACV, ACV mode, DCV, DCV mode, frequency, frequency mode, wave, phase.

Example :SEQ:SPAR?
>+101.0000,KEEP,+0.0000,CONST,+50.0000,CONST,SIN,0

3-8-4. [:SOURce]:SEQuence:STEP (Set) →
→ (Query)

Description	Sets or queries the current step number.	
Syntax	[:SOURce]:SEQuence:STEP {<NR1> MINimum MAXimum}	
Query Syntax	[:SOURce]:SEQuence:STEP? [MINimum MAXimum]	
Parameter/Return parameter	<NR1> MINimum MAXimum	Step number Minimum step number Maximum step number

Example :SEQ:STEP 1
Sets the step number to 1.

3-8-5. :TRIGger:SEquence:SElected:EXECute

Set →

Description	Sets to execute actions for sequence mode	
Syntax	:TRIGger:SEquence:SElected:EXECute {STOP START HOLD BRAN1 BRAN2}	
Parameter	STOP	Stops sequence execution
	START	Starts sequence execution
	HOLD	Holds sequence execution
	BRAN1	Jumps to Branch 1 execution
	BRAN2	Jumps to Branch 2 execution
Example	TRIG:SEQ:SEL:EXEC STAR Starts sequence execution.	

3-9. Simulate Commands

3-9-1. [:SOURce]:SIMulation:ABNormal:CODE

Set →

→ Query

Description	Sets the external trigger output for the abnormal step parameter. This option is only applicable when in the Simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:CODE {<NR1> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:CODE? [MINimum MAXimum]	
Parameter/Return parameter	<NR1> MINimum MAXimum	External trigger output, 0=LL, 1=LH, 2=HL, 3=HH. 0 (LL) 3 (HH)
Example	SIM:ABN:CODE 1	



3-9-2. [:SOURce]:SIMulation:ABNormal:FREQuency

Description	Sets or queries the frequency of the abnormal step of the simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:FREQuency {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:FREQuency? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	Frequency of abnormal step Minimum frequency Maximum frequency
Example	:SIM:ABN:FREQ 55 Sets the frequency to 55Hz.	



3-9-3. [:SOURce]:SIMulation:ABNormal:PHASe:STARt:ENABle

Description	Enables/Disables (Fixed/Free) the ON Phs parameter of the abnormal step for the Simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STARt:ENABle {<bool> OFF ON FREE FIXED}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STARt:ENABle?	

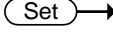Parameter/Return parameter	OFF 0 FREE ON 1 FIXED	Disabled Enabled
Example	:SIM:ABN:PHAS:STAR:ENAB 1 Enable the ON Phs.	

3-9-4. [:SOURce]:SIMulation:ABNormal:PHASe:STARt[:IMMEDIATE]  

Description	Sets or queries the ON Phs parameter of the abnormal step for the Simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STARt[:IMMEDIATE] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STARt[:IMMEDIATE]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	ON Phs (start phase) 0 359
Example	:SIM:ABN:PHAS:STAR 0 Sets ON Phs to 0.	

3-9-5. [:SOURce]:SIMulation:ABNormal:PHASe:STOP:ENABLE  

Description	Enables/Disables (Fixed/Free) the OFF Phs parameter of the abnormal step for the Simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STOP:ENABLE {<bool> OFF ON FREE FIXED }	
Query Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STOP:ENABLE?	

Parameter/Return parameter	OFF 0 FREE ON 1 FIXED	Disabled Enabled
Example	:SIM:ABN:PHAS:STOP:ENAB 1 Enable the OFF Phs.	

3-9-6. [:SOURce]:SIMulation:ABNormal:PHASe:STOP[:IMMEDIATE]



Description	Sets or queries the OFF Phs parameter of the abnormal step for the Simulation mode.	
Note:	Sets the off phase of the waveform after the output has been turned off.	
Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STOP[:IMMEDIATE] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:PHASe:STOP[:IMMEDIATE]? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	OFF Phs (Stop phase) 0 359.9
Example	:SIM:ABN:PHAS:STOP 0 Sets OFF Phs to 0.	

3-9-7. [:SOURce]:SIMulation:ABNormal:TIME

Description	Sets or queries the Time parameter of the abnormal step for the Simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:TIME {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:TIME? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum	Time of the abnormal step in seconds 0

MAXimum 999.9999s

Example :SIM:ABN:TIME 1
Sets the abnormal step time to 1 second.

3-9-8. [:SOURce]:SIMulation:ABNormal:VO LTag e  

Description	Sets or queries the Vset parameter of the abnormal step for the Simulation mode.	
Syntax	[:SOURce]:SIMulation:ABNormal:VOLTage {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:ABNormal:VOLTage? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	Voltage of the abnormal step. Minimum settable voltage Maximum settable voltage
Example	:SIM:ABN:VOLT MAX Sets the abnormal step voltage to the maximum.	

3-9-9. [:SOURce]:SIMulation:CSTep 

Description	Returns the currently running step.	
Query Syntax	[:SOURce]:SIMulation:CSTep?	
Return parameter	<NR1>	Current step +0 = Initial step +1 = Normal1 step +2 = Transition1 step +3 = Abnormal step +4 = Transition2 step +5 = Normal2 step
Example	:SIM:CSTep? >+1	

3-9-10. [:SOURce]:SIMulation:INITial:CODE  

Description	Sets the external trigger output for the initial step parameter. This option is only applicable when in the Simulation mode.
Syntax	[[:SOURce]:SIMulation:INITial:CODE {<NR1> MINimum MAXimum}]
Query Syntax	[[:SOURce]:SIMulation:INITial:CODE? [MINimum MAXimum]]
Parameter/Return parameter	<NR1> 0=LL, 1=LH, 2=HL, 3=HH MINimum 0 (LL) MAXimum 3 (HH)
Example	SIM:INIT:CODE 1

3-9-11. [[:SOURce]:SIMulation:INITial:FREQuency]

Description	Sets or queries the frequency of the initial step of the simulation mode.
Syntax	[[:SOURce]:SIMulation:INITial:FREQuency {<NR2> MINimum MAXimum}]
Query Syntax	[[:SOURce]:SIMulation:INITial:FREQuency? [MINimum MAXimum]]
Parameter/Return parameter	<NR2> Frequency of initial step MINimum Minimum frequency MAXimum Maximum frequency
Example	:SIM:INIT:FREQ 60 Sets the frequency of the initial step to 60Hz.

3-9-12. [[:SOURce]:SIMulation:INITial:PHASe:START:ENABle]

Description	Enables/Disables (Fixed/Free) the ON Phs parameter of the initial step for the Simulation mode.
Syntax	[[:SOURce]:SIMulation:INITial:PHASe:START:ENABle {<bool> OFF ON FREE FIXED}]
Query Syntax	[[:SOURce]:SIMulation:INITial:PHASe:START:ENABle?]

Parameter/Return parameter	OFF 0	Disabled
	FREE	
	ON 1	Enabled
	FIXED	

Example :SIM:INIT:PHAS:STAR:ENAB 1
Enable the ON Phs.

3-9-13.[:SOURce]:SIMulation:INITial:PHASe → Set
:START[:IMMEDIATE] ← Query

Description Sets or queries the ON Phs parameter of the initial step for the Simulation mode.

Syntax [:SOURce]:SIMulation:INITial:PHASe:START[:IMMEDIATE] {<NR2>|MINimum|MAXimum}

Query Syntax [:SOURce]:SIMulation:INITial:PHASe:START[:IMMEDIATE]? [MINimum|MAXimum]

Parameter/Return parameter	<NR2>	ON Phs (start phase)
	MINimum	0
	MAXimum	359.9

Example :SIM:INIT:PHAS:STAR 0
Sets ON Phs to 0.

3-9-14.[:SOURce]:SIMulation:INITial:PHASe → Set
:STOP:ENABLE ← Query


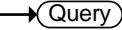
Description Enables/Disables (Fixed/Free) the OFF Phs parameter of the initial step for the Simulation mode.

Syntax [:SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE {<bool>|OFF|ON|FREE|FIXED }


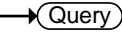
Query Syntax [:SOURce]:SIMulation:INITial:PHASe:STOP:ENABLE?

Parameter/Return parameter	OFF 0	Disabled
	FREE	
	ON 1	Enabled
	FIXED	



Example :SIM:INIT:PHAS:STOP:ENAB 1
Enable the OFF Phs.

3-9-15. [:SOURce]:SIMulation:INITial:PHASe  →
:STOP[:IMMediate]  →

Description	Sets or queries the OFF Phs parameter of the initial step for the Simulation mode.						
Note:	Sets the off phase of the waveform after the output has been turned off.						
Syntax	[:SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate] {<NR2> MINimum MAXimum}						
Query Syntax	[:SOURce]:SIMulation:INITial:PHASe:STOP[:IMMediate]? [MINimum MAXimum]						
Parameter/Return parameter	<table border="1"> <tr> <td><NR2></td> <td>OFF Phs (Stop phase)</td> </tr> <tr> <td>MINimum</td> <td>0</td> </tr> <tr> <td>MAXimum</td> <td>359.9</td> </tr> </table>	<NR2>	OFF Phs (Stop phase)	MINimum	0	MAXimum	359.9
<NR2>	OFF Phs (Stop phase)						
MINimum	0						
MAXimum	359.9						
Example	:SIM:INIT:PHAS:STOP 0 Sets OFF Phs to 0.						

3-9-16. [:SOURce]:SIMulation:INITial:VOLTage  →
 →

Description	Sets or queries the Vset parameter of the initial step for the Simulation mode.						
Syntax	[:SOURce]:SIMulation:INITial:VOLTage {<NR2> MINimum MAXimum}						
Query Syntax	[:SOURce]:SIMulation:INITial:VOLTage? [MINimum MAXimum]						
Parameter/Return parameter	<table border="1"> <tr> <td><NR2></td> <td>Voltage of the initial step.</td> </tr> <tr> <td>MINimum</td> <td>Minimum settable voltage</td> </tr> <tr> <td>MAXimum</td> <td>Maximum settable voltage</td> </tr> </table>	<NR2>	Voltage of the initial step.	MINimum	Minimum settable voltage	MAXimum	Maximum settable voltage
<NR2>	Voltage of the initial step.						
MINimum	Minimum settable voltage						
MAXimum	Maximum settable voltage						
Example	:SIM:INIT:VOLT MAX Sets the initial step voltage to the maximum.						

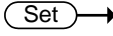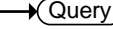3-9-17.[:SOURce]:SIMulation:NORMal<1|2> 
:CODE 



Description Sets the external trigger output for the normal 1 or normal 2 step parameter. This option is only applicable when in the Simulation mode.

Syntax [:SOURce]:SIMulation:NORMal<1|2>:CODE {<NR1>|MINimum|MAXimum}

Query Syntax [:SOURce]:SIMulation:NORMal<1|2>:CODE? [MINimum|MAXimum]

Parameter/Return parameter	<NR1>	0=LL, 1=LH, 2=HL, 3=HH
	MINimum	0 (LL)
	MAXimum	3 (HH)

Example SIM:NORM1:CODE 1

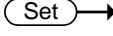3-9-18.[:SOURce]:SIMulation:NORMal 1 
:FREQUENCY 


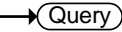
Description Sets or queries the frequency of the normal1 step of the simulation mode.

Syntax [:SOURce]:SIMulation:NORMal 1:FREQUENCY {<NR2>|MINimum|MAXimum}


Query Syntax [:SOURce]:SIMulation:NORMal 1:FREQUENCY? [MINimum|MAXimum]

Parameter/Return parameter	1	Normal 1
	<NR2>	Frequency of abnormal step
	MINimum	Minimum frequency
	MAXimum	Maximum frequency

Example :SIM:NORM1:FREQ 60
Sets the frequency to 60Hz.

3-9-19. [:SOURCE]:SIMulation:NORMal<1|2>  →
 :PHASe:STARt:ENABle 


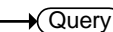
Description	Enables/Disables (Fixed/Free) the ON Phs parameter of the normal1 or normal2 step for the Simulation mode.	
Syntax	[:SOURCE]:SIMulation:NORMal<1 2>:PHASe:STARt:ENABle { <bool> OFF ON FREE FIXED}	
Query Syntax	[:SOURCE]:SIMulation:NORMal<1 2>:PHASe:STARt:ENABle?	
Parameter/Return parameter	<1 2> OFF 0 FREE ON 1 FIXED	Normal 1 or Normal 2 Disabled Enabled
Example	:SIM:NORM1:PHAS:STAR:ENAB 1 Enable the ON Phs.	

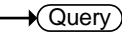3-9-20. [:SOURCE]:SIMulation:NORMal<1|2>  →
 :PHASe:STARt[:IMMEdiate] 


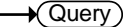
Description	Sets or queries the ON Phs parameter of the normal1 or normal2 step for the Simulation mode.	
Syntax	[:SOURCE]:SIMulation:NORMal<1 2>:PHASe:STARt[:IMMEdiate] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURCE]:SIMulation:NORMal<1 2>:PHASe:STARt[:IMMEdiate]? [MINimum MAXimum]	
Parameter/Return parameter	<1 2> <NR2> MINimum MAXimum	Normal 1 or Normal 2 ON Phs (start phase) 0 359.9
Example	:SIM:NORM1:PHAS:STAR 0 Sets ON Phs to 0.	

3-9-21. [:SOURce]:SIMulation:NORMal<1|2>  →
 :PHASe:STOP:ENABLE 


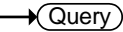
Description	Enables/Disables (Fixed/Free) the OFF Phs parameter of the normal1 or normal2 step for the Simulation mode.	
Syntax	[:SOURce]:SIMulation:NORMal<1 2>:PHASe:STOP:ENABLE {<bool> OFF ON FREE FIXED}	
Query Syntax	[:SOURce]:SIMulation:NORMal<1 2>:PHASe:STOP:ENABLE?	
Parameter/Return parameter	<1 2> OFF 0 FREE ON 1 FIXED	Normal 1 or Normal 2 Disabled Enabled
Example	:SIM:NORM1:PHAS:STOP:ENAB 1 Enable the OFF Phs.	

3-9-22. [:SOURce]:SIMulation:NORMal<1|2>  →
 :PHASe:STOP[:IMMEDIATE] 

Description	Sets or queries the OFF Phs parameter of the normal1 or normal2 step for the Simulation mode.	
Note:	Sets the off phase of the waveform after the output has been turned off.	
Syntax	[:SOURce]:SIMulation:NORMal<1 2>:PHASe:STOP[:IMMEDIATE] {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:NORMal<1 2>:PHASe:STOP[:IMMEDIATE]? [MINimum MAXimum]	
Parameter/Return parameter	<1 2> <NR2> MINimum MAXimum	Normal 1 or Normal 2 OFF Phs (Stop phase) 0 359.9
Example	:SIM:NORM1:PHAS:STOP 0 Sets OFF Phs to 0.	

3-9-23. [:SOURCE]:SIMulation:NORMal<1|2>  →
 :TIME 

Description	Sets or queries the Time parameter of the normal1 or normal2 step for the Simulation mode.	
Syntax	[:SOURCE]:SIMulation:NORMal<1 2>:TIME {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURCE]:SIMulation:NORMal<1 2>:TIME? [MINimum MAXimum]	
Parameter/Return parameter	<1 2> <NR2> MINimum MAXimum	Normal 1 or Normal 2 Time of the step in seconds 0 999.9999s
Example	:SIM:NORM1:TIME 1 Sets the step time to 1 second.	

3-9-24. [:SOURCE]:SIMulation:NORMal1:VO  →
 LTage 

Description	Sets or queries the Vset parameter of the normal1 step for the Simulation mode.	
Syntax	[:SOURCE]:SIMulation:NORMal 1:VOLTage {<NR2> MINimum MAXimum}	
Query Syntax	[:SOURCE]:SIMulation:NORMal 1:VOLTage? [MINimum MAXimum]	
Parameter/Return parameter	1 <NR2> MINimum MAXimum	Normal 1 Voltage of the abnormal step. Minimum settable voltage Maximum settable voltage
Example	:SIM:NORM1:VOLT MAX Sets the normal1step voltage to the maximum.	

3-9-25.[:SOURce]:SIMulation:REPeat:COU Nt Set →
→ Query

Description Sets or queries the repeat count for the Simulation mode.

Syntax [:SOURce]:SIMulation:REPeat:COUNT {<NR1>|MINimum|MAXimum}

Query Syntax [:SOURce]:SIMulation:REPeat:COUNT? [MINimum|MAXimum]

Parameter/Return parameter	<NR1>	0 ~ 9999 (0 = infinite loop)
	MINimum	0
	MAXimum	9999

Example :SIM:REP:COUN 1
Sets the repeat count to 1.

3-9-26.[:SOURce]:SIMulation:REPeat:ENAB le Set →
→ Query

Description Turns the repeat function on or off for the Simulation mode.

Syntax [:SOURce]:SIMulation:REPeat:ENABLE {<bool>|OFF|ON}

Query Syntax [:SOURce]:SIMulation:REPeat:ENABLE?

Parameter/Return parameter	OFF 0	Disabled
	ON 1	Enabled

Example :SIM:REP:ENAB 1
Enables the repeat function.

3-9-27.[:SOURce]:SIMulation:TRANSition<1|2>:TIME Set →
→ Query

Description Sets or queries the Time parameter of the transition step for the Simulation mode.

Syntax [:SOURce]:SIMulation:TRANSition<1|2>:TIME {<NR2>|MINimum|MAXimum}

Query Syntax	[:SOURce]:SIMulation:TRANSition<1 2>:TIME? [MINimum MAXimum]	
Parameter/Return parameter	<NR2> MINimum MAXimum	Time of the step in seconds 0 999.9999s
Example	:SIM:TRAN1:TIME 1 Sets the step time to 1 second.	

3-9-28. [:SOURce]:SIMulation:TRANSition<1|2>:CODE

Description	Sets the external trigger output for the transition step parameter. This option is only applicable when in the Simulation mode.	
Syntax	[:SOURce]:SIMulation:TRANSition<1 2>:CODE {<NR1> MINimum MAXimum}	
Query Syntax	[:SOURce]:SIMulation:TRANSition<1 2>:CODE? [MINimum MAXimum]	
Parameter/Return parameter	<NR1> MINimum MAXimum	0=LL, 1=LH, 2=HL, 3=HH 0 (LL) 3 (HH)
Example	SIM:TRAN1:CODE 1	

3-9-29. :TRIGger:SIMulation:SElected:EXECute

Description	Sets to execute actions for simulate mode	
Syntax	:TRIGger:SIMulation:SElected:EXECute {STOP START HOLD}	
Parameter	STOP START HOLD	Stops simulate execution Starts simulate execution Holds simulate execution
Example	TRIG:SIM:SEL:EXEC STAR Starts simulate execution.	

3-10. Input Subsystem Command

Set →

3-10-1. :INPut:GAIN

→ Query

Description Sets or queries the input gain value. (Only AC+DC-EXT or AC-EXT or AC+DC-ADD or AC-ADD Active)

Syntax :INPut:GAIN {<NR2>(V)|MINimum|MAXimum}

Query Syntax :INPut:GAIN? [MINimum|MAXimum]

Parameter/Return parameter	<NR2>	Input gain value
	MINimum	Minimum input gain value
	MAXimum	Maximum input gain value

Example :INP:GAIN?
150.0
Returns the input gain value as 150.0.

Set →

3-10-2. :INPut:SYNC:SOURce

→ Query

Description Sets or queries state of sync source. (Only AC+DC-sync or AC-sync Active)

Syntax :INPut:SYNC:SOURce {<NR1>|LINE|EXT}

Query Syntax :INPut:SYNC:SOURce?

Parameter/Return parameter	<NR1>	LINE (0) EXT (1)
	LINE	LINE sync source
	EXT	EXT sync source

Example :INP:SYNC:SOUR?
EXT
Returns the state of sync source as EXT.

3-11. Display Command

3-11-1. :DISPlay[:WINDow]:DESign:MODE Set →

Description	Sets two display mode.	
Syntax	:DISPlay[:WINDow]:DESign:MODE{NORMAl SIMPlE}	
Parameter	MORMAl SIMPlE	Configure setup and Measurement. All measurement times.
Example	:DISP:DES:MODE NORM Sets standard normal display.	

3-11-2. :DISPlay[:WINDow]:MEASure:SOUR ce<1|2|3> Set →

Description	Sets standard normal display to measurement items 1 – 3.	
Syntax	:DISPlay[:WINDow]:MEASure:SOURce<1 3> { VRMS VAVG VMAX VMIN IRMS Iavg IMAX IMIN IPKH RPOWer SPOWer QPOWer FREQuency PF ACtor CFACtor THDV THDI}	
Parameter	Item 1	VRMS , VAVG , VMAX , VMIN , RPOWer , SPOWer ^{*1} , QPOWer ^{*1} , THDV ^{*2}
	Item 2	IRMS , Iavg , IMAX , IMIN , IPKH , PFACtor ^{*1} , CFACtor ^{*1} , THDI ^{*2}
	Item 3	RPOWer , SPOWer ^{*1} , QPOWer ^{*1} , IPKH , PFACtor ^{*1} , CFACtor ^{*1} , FREQuency ^{*3}
	Note	^{*1} : Not available for DC-INT ^{*2} : Available for AC-INT only ^{*3} : Available for AC+DC-Sync & AC- Sync only
Example	:DISP:MEAS:SOURC1 VRMS Sets measurement source 1 VRMS display.	

4. Error List

4-1.Command Errors

Overview

An <error/event number> in the range [-199 , -100] indicates that an IEEE 488.2 syntax error has been detected by the instrument's parser. The occurrence of any error in this class shall cause the command error bit (bit 5) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- An IEEE 488.2 syntax error has been detected by the parser. That is, a controller-to-device message was received which is in violation of the IEEE 488.2 standard. Possible violations include a data element which violates the device listening formats or whose type is unacceptable to the device.
- An unrecognized header was received. Unrecognized headers include incorrect device-specific headers and incorrect or unimplemented IEEE 488.2 common commands.

Events that generate command errors shall not generate execution errors, device-specific errors, or query errors; see the other error definitions in this chapter.

Error Code	Description
-100 Command Error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that a Command Error as defined in IEEE 488.2, 11.5.1.1.4 has occurred.
-102 Syntax error	An unrecognized command or data type was encountered; for example, a string was received when the device does not accept strings.
-103 Invalid separator	The parser was expecting a separator and encountered an illegal character; for example, the semicolon was omitted after a program message unit, MEAS:VOLT:DC?:MEASCURR:DC?
-104 Data type error	The parser recognized a data element different than one allowed; for example, numeric or string data was expected but block data was encountered.
-108 Parameter not allowed	More parameters were received than expected for the header; for example, the :SYSTem:KLOCK command only accepts one parameter, so receiving SYSTem:KLOCK 1,0 is not allowed.
-109 Missing parameter	Fewer parameters were received than required for the header; for example, the :SYSTem:KLOCK command requires one parameter, so receiving :SYSTem:KLOCK is not allowed.
-111 Header separator error	A character which is not a legal header separator was encountered while parsing the header; for example, no white space followed the header, thus *SRE2 is an error.
-112 Program mnemonic too long	The header contains more than twelve characters (see IEEE 488.2, 7.6.1.4.1).

-113 Undefined header	The header is syntactically correct, but it is undefined for this specific device; for example, *XYZ is not defined for any device.
-114 Header suffix out of range	The value of a numeric suffix attached to a program mnemonic, see Syntax and Style section 6.2.5.2, makes the header invalid.
-115 Unexpected number of parameters	The number of parameters received does not correspond to the number of parameters expected. This is typically due an inconsistency with the number of instruments in the selected group.
-120 Numeric data error	This error, as well as errors -121 through -129, are generated when parsing a data element which appears to be numeric, including the nondecimal numeric types. This particular error message should be used if the device cannot detect a more specific error.
-121 Invalid character in number	An invalid character for the data type being parsed was encountered; for example, an alpha in a decimal numeric or a "9" in octal data.
-128 Numeric data not allowed	A legal numeric data element was received, but the device does not accept one in this position for the header.
-131 Invalid suffix	The suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device.
-141 Invalid character data	Either the character data element contains an invalid character or the particular element received is not valid for the header.
-148 Character data not allowed	A legal character data element was encountered where prohibited by the device.
-151 Invalid string data	A string data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.5.2); for example, an END message was received before the terminal quote character.

-158 String data not allowed	A string data element was encountered but was not allowed by the device at this point in parsing.
-160 Block data error	This error, as well as errors -161 through -169, are generated when parsing a block data element. This particular error message should be used if the device cannot detect a more specific error.
-161 Invalid block data	A block data element was expected, but was invalid for some reason (see IEEE 488.2, 7.7.6.2); for example, an END message was received before the length was satisfied.
-168 Block data not allowed	A legal block data element was encountered but was not allowed by the device at this point in parsing.
-178 Expression data not allowed	A legal expression data was encountered but was not allowed by the device at this point in parsing.

4-2.Execution Errors

Overview

An <error/event number> in the range [-299 , -200] indicates that an error has been detected by the instrument's execution control block. The occurrence of any error in this class shall cause the execution error bit (bit 4) in the event status register (IEEE 488.2, section 11.5.1) to be set. One of the following events has occurred:

- A <PROGRAM DATA> element following a header was evaluated by the device as outside of its legal input range or is otherwise inconsistent with the device's capabilities.
- A valid program message could not be properly executed due to some device condition.

Execution errors shall be reported by the device after rounding and expression evaluation operations have taken place. Rounding a numeric data element, for example, shall not be reported as an execution error. Events that generate execution errors shall not generate Command Errors, device-specific errors, or Query Errors; see the other error definitions in this section.

Error Code	Description
-200 Execution error	This is the generic syntax error for devices that cannot detect more specific errors. This code indicates only that an Execution Error as defined in IEEE 488.2, 11.5.1.1.5 has occurred.
-201 Invalid while in local	Indicates that a command is not executable while the device is in local due to a hard local control (see IEEE 488.2, 5.6.1.5); for example, a device with a rotary switch receives a message which would change the switches state, but the device is in local so the message cannot be executed.

-203 Command protected	Indicates that a legal password-protected program command or query could not be executed because the command was disabled.
-211 Trigger ignored	Indicates that a GET, *TRG, or triggering signal was received and recognized by the device but was ignored because of device timing considerations; for example, the device was not ready to respond. Note: a DT0 device always ignores GET and treats *TRG as a Command Error.
-213 Init ignored	Indicates that a request for a measurement initiation was ignored as another measurement was already in progress.
-220 Parameter error	Indicates that a program data element related error occurred. This error message should be used when the device cannot detect the more specific errors described for errors -221 through -229.
-221 Settings conflict	Indicates that a legal program data element was parsed but could not be executed due to the current device state (see IEEE 488.2, 6.4.5.3 and 11.5.1.1.5.).
-222 Data out of range	Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range as defined by the device (see IEEE 488.2, 11.5.1.1.5.).
-224 Illegal parameter value	Used where exact value, from a list of possibles, was expected.

4-3.Device Specific Errors

Overview An <error/event number> in the range [-399 , -300] or [1 , 32767] indicates that the instrument has detected an error which is not a command error, a query error, or an execution error; some device operations did not properly complete, possibly due to an abnormal hardware or firmware condition. These codes are also used for self-test response errors. The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. The meaning of positive error codes is device-dependent and may be enumerated or bit mapped; the <error message>string for positive error codes is not defined by SCPI and available to the device designer.

Note that the string is not optional; if the designer does not wish to implement a string for a particular error, the null string should be sent (for example, 42,""). The occurrence of any error in this class should cause the device-specific error bit (bit 3) in the event status register (IEEE 488.2, section 11.5.1) to be set. Events that generate device-specific errors shall not generate command errors, execution errors, or query errors; see the other error definitions in this section.

Error Code	Description
-310 System error	Indicates that some error, termed "system error" by the device, has occurred. This code is device-dependent.
-320 Storage fault	Indicates that the firmware detected a fault when using data storage. This error is not an indication of physical damage or failure of any mass storage element.

4-4.Query Errors

Overview

An <error/event number> in the range [-499 , -400] indicates that the output queue control of the instrument has detected a problem with the message exchange protocol described in IEEE 488.2, chapter 6. The occurrence of any error in this class shall cause the query error bit (bit 2) in the event status register (IEEE 488.2, section 11.5.1) to be set. These errors correspond to message exchange protocol errors described in IEEE 488.2, section 6.5. One of the following is true:

- An attempt is being made to read data from the output queue when no output is either present or pending;
- Data in the output queue has been lost.

Events that generate query errors shall not generate command errors, execution errors, or device-specific errors; see the other error definitions in this section.

Error Code	Description
-400 Query error	This is the generic query error for devices that cannot detect more specific errors. This code indicates only that a Query Error as defined in IEEE 488.2, 11.5.1.1.7 and 6.3 has occurred.

5. APPENDIX

5-1.Factory Default Settings

The following default settings are the factory configuration settings for the ASR series. For details on how to return to the factory default settings, please see the user manual.

AC+DC-INT Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
Wave Shape		SIN
ACV		0.0 Vrms
DCV		+0.0 Vdc
FREQ		50.00 Hz
IRMS	5.25 A	10.50 A
V Limit		+/- 250.0 Vpp
F Limit Lo		1.0 Hz
F Limit Hi		999.9 Hz
IPK Limit	+/- 21.00 A	+/- 42.00 A
ON Phs		0.0°
OFF Phs		0.0°
AC-INT Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
Wave Shape		SIN
ACV		0.0 Vrms
FREQ		50.00 Hz
IRMS	5.25 A	10.50 A
V Limit		175.0 Vrms
F Limit Lo		40.0 Hz
F Limit Hi		999.9 Hz
IPK Limit	+/- 21.00 A	+/- 42.00 A
ON Phs		0.0°
OFF Phs		0.0°
DC-INT Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
DCV		0.0 Vdc
I	5.25 A	10.50 A
V Limit		+/- 250.0 Vpp
IPK Limit	+/- 21.00 A	+/- 42.00 A

AC+DC-EXT Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
GAIN		100.0
IRMS	5.25 A	10.50 A
IPK Limit	+/- 21.00 A	+/- 42.00 A
AC-EXT Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
GAIN		100.0
IRMS	5.25 A	10.50 A
IPK Limit	+/- 21.00 A	+/- 42.00 A
AC+DC-ADD Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
Wave Shape		SIN
ACV		0.0 Vrms
DCV		+0.0 Vdc
GAIN		100.0
FREQ		50.00 Hz
IRMS	5.25 A	10.50 A
V Limit		+/- 250.0 Vpp
F Limit Lo		1.0 Hz
F Limit Hi		999.9 Hz
IPK Limit	+/- 21.00 A	+/- 42.00 A
ON Phs		0.0°
OFF Phs		0.0°
AC-ADD Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
Wave Shape		SIN
ACV		0.0 Vrms
GAIN		100.0
FREQ		50.00 Hz
IRMS	5.25 A	10.50 A
V Limit		175.0 Vrms
F Limit Lo		40.0 Hz
F Limit Hi		999.9 Hz
IPK Limit	+/- 21.00 A	+/- 42.00 A
ON Phs		0.0°
OFF Phs		0.0°
AC+DC-SYNC Mode	ASR501-351(G)	ASR102-351(G)
Range		100V
Wave Shape		SIN

ACV		0.0 Vrms	
DCV		+0.0 Vdc	
SIG		LINE	
IRMS	5.25 A		10.50 A
V Limit		+/- 250.0 Vpp	
F Limit		999.9 Hz	
IPK Limit	+/- 21.00 A		+/- 42.00 A
ON Phs		0.0°	
OFF Phs		0.0°	
AC-SYNC Mode	ASR501-351(G)	ASR102-351(G)	
Range		100V	
Wave Shape		SIN	
ACV		0.0 Vrms	
SIG		LINE	
IRMS	5.25 A		10.50 A
V Limit		175.0 Vrms	
F Limit		999.9 Hz	
IPK Limit	+/- 21.00 A		+/- 42.00 A
ON Phs		0.0°	
OFF Phs		0.0°	
Menu	ASR		
T ipeak, hold(msec)		1 ms	
Ipkh CLR		EXEC	
Power ON		OFF	
Buzzer		ON	
Remote Sense		OFF	
Slew Rate Mode		Slope	
Output Relay		Enable	
THD Format		IEC	
External Control		OFF	
LAN	ASR		
DHCP		ON	
USB Device	ASR		
Speed		Auto	
LCD Configuration	ASR		
LCD Contrast		50%	
LCD Brightness		50%	
LCD Saturation		50%	
Sequence Mode	ASR		

Step	0
Time	0.1000 s
ACV	0.0, CT
DCV	0.0, CT
Fset	50.0, CT
Wave	SIN
Jump To	OFF
Jump Cnt	1
Branch 1	OFF
Branch 2	OFF
Term	CONTI
Sync Code	LL
ON Phs	Free
OFF Phs	Free
Simulation Mode	ASR
Step	Initial
Repeat	OFF
Time	0.1000 s
ACV	0.0
Fset	50.00
ON Phs	Free
OFF Phs	Free
Wave	SIN
Code	LL
RS232C	G Type
Baudrate	9600
Databits	8bits
Parity	None
Stopbits	1bit
GPIB	G Type
Address	10



TEXIO TECHNOLOGY CORPORATION

7F Towa Fudosan Shin Yokohama Bldg.

2-18-13, Shin Yokohama, Kohoku-ku, Yokohama, Kanagawa, 222-0033 Japan

<https://www.texio.co.jp>
