

PROGRAMMING MANUAL

DIGITAL STORAGE OSCILLOSCOPE DCS-9700 SERIES



■About a trademark, a registered trademark

A company name and the brand name mentioned in this instruction manual are the trademark or the registered trademark of each company or group in each country and region.

■About this instruction manual

When copying the part or all of contents of this instruction manual, seek the copyright holder.

In addition, the specifications of the product and the contents of this instruction manual are subject to change without notice for improvement. Please check to our website for the latest version.


Contents

USING THE PRODUCT SAFELY.....	I - V
1. INTERFACE OVERVIEW	1
1-1. Front Panel Overview (4ch model).....	1
1-2. Interface Configuration	2
2. COMMAND OVERVIEW	12
2-1. Command Syntax	12
3. COMMAND DETAILS.....	13
3-1. Common Commands	14
3-2. Acquisition Commands.....	16
3-3. Autoscale Commands	20
3-4. Vertical Commands.....	21
3-5. Math Commands.....	25
3-6. Cursor Commands	31
3-7. Display Commands	39
3-8. Hardcopy Commands.....	41
3-9. Measure Commands	44
3-10. Measurement Commands	64
3-11. Reference Commands.....	69
3-12. Run Command.....	71
3-13. Timebase Commands.....	72
3-14. Trigger Commands	74
3-15. System Commands	109
3-16. Save/Recall Commands	109
3-17. Ethernet Commands	113
3-18. Time Commands.....	113
3-19. Bus Decode Commands	114
3-20. Mark Commands	127
3-21. Search Commands.....	129
3-22. Digital Commands.....	159
3-23. Label Commands	165
3-24. Utility Commands.....	171
3-25. Segment Commands.....	171
3-26. Function Generator Commands	177
3-27. Go_NoGo Commands	179
3-28. DVM Commands	184
3-29. Data Logging Commands	185
4. APPENDIX	188
4-1. Error messages	188

1. INTERFACE OVERVIEW

This manual describes how to use the remote command functionality and lists the command details. The Overview chapter describes how to configure the DCS-9700 USB remote control interface, Ethernet interface, GP-IB interface and RS-232C interface.

1-1. Front Panel Overview (4ch model)

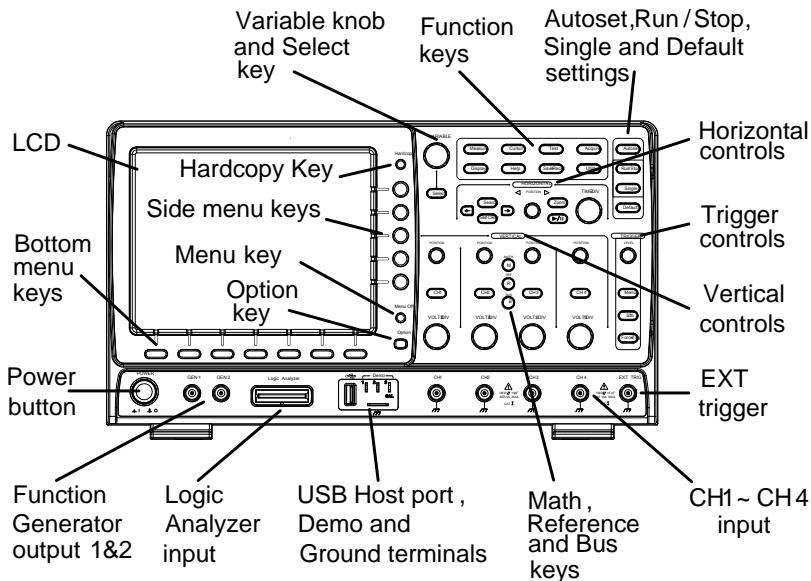

1-2. Interface Configuration

1-2-1. Configure USB Interface


USB Configuration	PC side connector DCS-9700 side connector	Type A, host Type B, device
	Speed	1.1/2.0 (high speed)
	USB Class	USB-CDC
	OS	Windows7(32bit/64bit) or higher
	USB Driver	TEXIO_CDC.inf



Panel Operation	<ol style="list-style-type: none">1. Press the <i>Utility</i> key.2. Press <i>I/O</i> from the bottom menu.3. Press <i>USB Device Port</i> from the side menu and select <i>Computer</i>.4. Connect the USB cable to the rear panel device port.5. When the PC asks for the USB driver or 'Unknown device' listed in Device Manager, install TEXIO-CDC.inf attached CD.
 Note	You must have administrator account to install driver.

1-2-2. Configure RS-232C Interface

RS-232C Configuration	Connector	DB-9, Male
	Baud rate	2400, 4800, 9600, 19200, 38400, 57600, 115200
	Parity	None, Odd, Even
	Data bit	8 (fixed)
	Stop bit	1, 2

Panel Operation	<ol style="list-style-type: none">1. Press the <i>Utility</i> key.2. Press <i>I/O</i> from the bottom menu.3. Press <i>RS-232C</i> from the side menu.4. Use the side menu to set the <i>Baud Rate</i>.
Baud Rate	2400, 4800, 9600, 19200, 38400, 57600, 115200

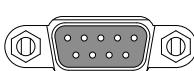- Press *Stop Bit* to toggle the number of stop bits.
- 
- Stop Bits 1, 2
- Press *Parity* to toggle the parity.
- 
- Parity Odd, Even, None
- Press *Save Now* to save the settings.
- 
- Save Now
- Connect the RS-232C cable to the rear panel port: DB-9 male connector. For a functionality check, see page 6.
- 

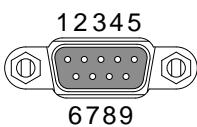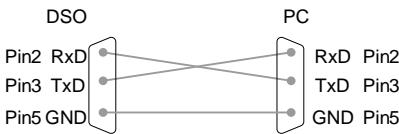
Pin Assignment	 <table border="0"> <tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td></tr> <tr><td>Pin2 RxD</td><td></td><td></td><td></td><td>2: RxD (Receive data)</td><td></td><td></td><td></td><td></td></tr> <tr><td>Pin3 TxD</td><td></td><td></td><td></td><td>3: TxD (Transmit data)</td><td></td><td></td><td></td><td></td></tr> <tr><td>Pin5 GND</td><td></td><td></td><td></td><td>5: GND</td><td></td><td></td><td></td><td></td></tr> <tr><td></td><td></td><td></td><td></td><td>4, 6 ~ 9: No connection</td><td></td><td></td><td></td><td></td></tr> </table>	1	2	3	4	5	6	7	8	9	Pin2 RxD				2: RxD (Receive data)					Pin3 TxD				3: TxD (Transmit data)					Pin5 GND				5: GND									4, 6 ~ 9: No connection				
1	2	3	4	5	6	7	8	9																																						
Pin2 RxD				2: RxD (Receive data)																																										
Pin3 TxD				3: TxD (Transmit data)																																										
Pin5 GND				5: GND																																										
				4, 6 ~ 9: No connection																																										
PC Connection	Use a Null Modem connection as shown in the diagram below.  <pre> graph LR DSO((DSO)) --- Pin2RxD[Pin2 RxD] DSO --- Pin3TxD[Pin3 TxD] DSO --- Pin5GND[Pin5 GND] Pin2RxD --- Pin2RxD[Pin2 RxD] Pin3TxD --- Pin3TxD[Pin3 TxD] Pin5GND --- Pin5GND[Pin5 GND] Pin2RxD --- Pin3TxD Pin3TxD --- Pin2RxD Pin5GND --- Pin5GND </pre>																																													

1-2-3. Configure the Ethernet Interface

Ethernet Configuration	MAC Address Instrument Name User Password Instrument IP Address	Domain Name DNS IP Address Gateway IP Address Subnet Mask HTTP Port 80 (fixed)
 Note	The Ethernet option, DS2-LAN, must first be installed before proceeding. Please refer to the user manual for further details.	
Background	The Ethernet interface is used for remote configuration of the oscilloscope over a network using the integrated web server or for remote control using a socket server connection. For details, please see the Web Server Configuration section in the user manual or the Socket Server section on page 5.	

Panel Operation

1. Connect the Ethernet cable to the LAN port on the DS2-LAN module.

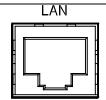

2. Press the *Utility* key.




3. Press *I/O* from the bottom menu.



4. Press *Ethernet* from the side menu.



5. Set *DHCP/BOOTP* to *On* or *Off* from the side menu.

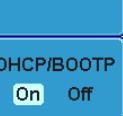


IP addresses will automatically be assigned with DHCP/BOOTP set to on. For Static IP Addresses, DHCP/BOOTP should be set to off.

MAC Address :	82:51:aa:77:11:16
Instrument Name :	[REDACTED]
User Password :	admin
Instrument IP Address :	172.16.22.149
Domain Name :	[REDACTED]
DNS IP Address :	172.16.1.248
Gateway IP Address :	172.16.0.254
Subnet Mask :	255.255.128.0
HTTP Port :	80

**A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
a b c d e f g h i j k l m n o p q r s t u v w x y z
.0123456789-_**

1. Use the variable knob to select a character.
2. Press Select to enter the character.


6. Use the *Up* and *Down* arrows on the side menu to navigate to each Ethernet configuration item.

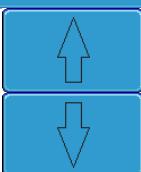

Items

MAC Address, Instrument Name, User Password, Instrument IP Address, Domain Name, DNS IP Address, Gateway IP Address, Subnet Mask
Note: HTTP Port is fixed at 80.

7. Use the *Variable* knob to highlight a character and use the *Select* key to choose a character.

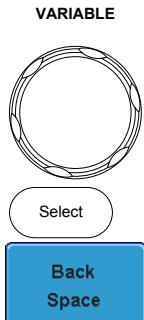

Press *Backspace* to delete a character.

1-2-4. Configure Socket Server


The DCS-9700 supports socket server functionality for direct two-way communication with a client PC or device over LAN. By default, the Sockets Server is off.

Configure Socket Server

1. Configure the IP address for the DCS-9700.
2. Press the *Utility* key.

Utility

3. Press *I/O* from the bottom menu.
4. Press *Socket Server* from the side menu.
5. Press *Select Port* and choose the port number with the Variable knob.
Range 1024~65535
6. Press *Set Port* to confirm the port number.
7. The Current Port icon will update to the new port number.
8. Press *Server* and turn the socket server On.

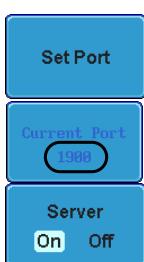

1-2-5. Configure GPIB



To use GPIB, the optional module, DS2-GPIB, must be installed. Please see the user manual for installation details.

Connection

1. Connect a GPIB cable from a PC to the installed GPIB module.

Configure GPIB

2. Press the *Utility* key.

Utility

3. Press *I/O* from the bottom menu.



4. Use the Variable knob to set the GPIB Address from the side menu. This option will only be available when the GPIB module is installed.

Range 1 ~ 30

GPIB Constraints

- Maximum 15 devices altogether, 20m cable length, 2m between each device
- Unique address assigned to each device
- At least 2/3 of the devices turned On
- No loop or parallel connection


1-2-6. USB/RS-232C Functionality Check

Terminal Application (USB/RS-232C)

Invoke a terminal application such as PuTTY or RealTerm. For RS-232C and USB, set the COM port, baud rate, stop bit, data bit, and parity accordingly. To check the COM port number and associated port settings, see the Device Manager in the PC. For Windows:

Control panel → System → Hardware tab

Example: Configuring RealTerm for RS-232C communication.

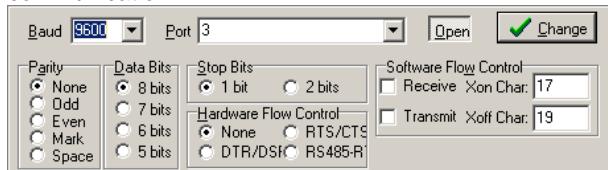

Functionality Check

Key in this query command via the terminal application.
*idn?

This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.


TEXIO, DCS-9710, PXXXXXX, V1.00

1-2-7. Socket Server Functionality Check


NI Measurement and Automation Explorer	To test the socket server functionality, National Instruments Measurement and Automation Explorer can be used. This program is available on the NI website, www.ni.com .
Operation	<ol style="list-style-type: none">1. Start the NI Measurement and Automation Explorer (MAX) program. Using Windows, press: 2. Start>All Programs>National Instruments>Measurement & Automation



3. From the Configuration panel access; My System>Devices and Interfaces>Network Devices
4. Press Add New Network Device>Visa TCP/IP Resource...
5. Select *Auto-detect of LAN Instrument* from the popup window. The DCS-9700 should be automatically detected. If the DCS-9700 is not detected, choose the manual option.

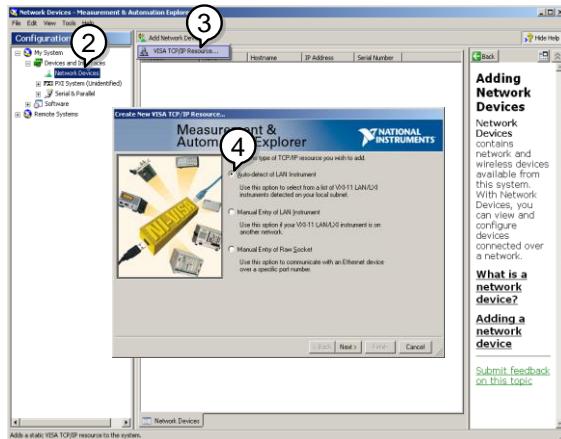


6. Select the IP address that corresponds to the DCS-9700 and click *Next*.

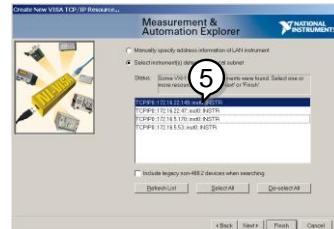


7. The DCS-9700 will now appear under Network Devices in the Configuration Panel.
 8. Click the *Open Visa Test Panel* to send a remote command to the DCS-9700 .

Functionality Check

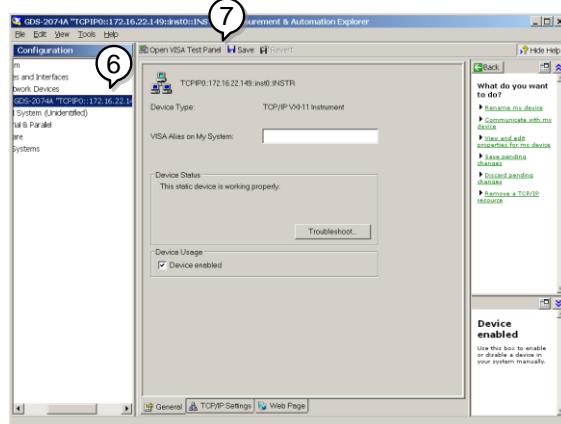


- Click on the *viWrite* tab. The **IDN?* query should already be in the buffer area.
- Click *Execute* to execute the query.

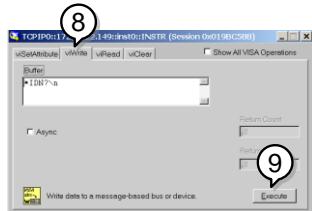

- Click the *viRead* tab.
- Click *Execute* to read the return parameter from the **IDN?* query.
- The manufacturer, model number, serial number and firmware version will be displayed in the buffer. For example:

TEXIO, DCS-9710, P930116, V1.00

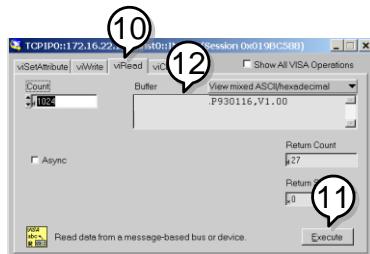

1-2-8. GPIB Functionality Check

To check that the GPIB connection is working, National Instruments Measurement & Automation Explorer (MAX) can be used. The following function check is based on version 4.6.2.


For further information about National Instruments, please see the NI website at www.ni.com.

Operation


- Start the NI Measurement and Automation Explorer (MAX) program.
Using Windows, press:




2. Start>All Programs>National Instruments>Measurement & Automation

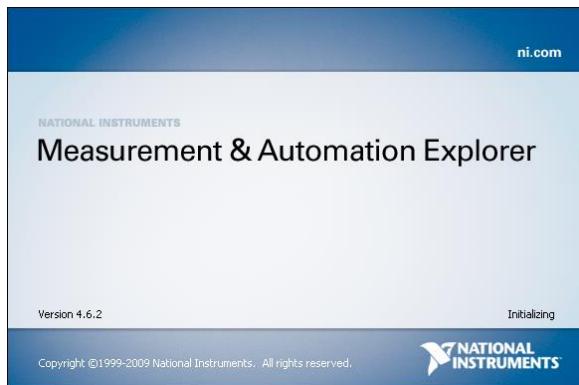

3. From the Configuration panel access;
- My System>Devices and Interfaces>GPIB0
4. Press the Scan for Instruments button.
5. In the *Connected Instruments* panel the DCS-9700 should be detected as *Instrument 0* with the address the same as that configured on the DCS-9700 .
6. Double click the *Instrument 0* icon.

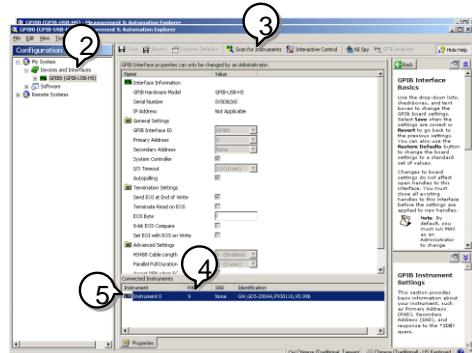

7. Click on Communicate with Instrument.
8. In the *NI-488.2 Communicator* window, ensure **IND?* is written in the *Send String:* text box.
9. Click on the *Query* button to send the **IDN?* query to the instrument.
10. The *String Received* text box will display the query return:
TEXIO, DCS-97XX,PXXXXXX,V1.XX
(manufacturer, model, serial number, version)

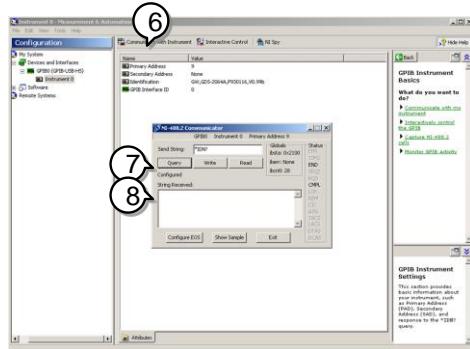

11. The function check is complete.

2. COMMAND OVERVIEW

The Command overview chapter lists all DCS-9700 commands in functional order as well as alphabetical order. The command syntax section shows you the basic syntax rules you have to apply when using commands.

2-1. Command Syntax

Compatible standard	<ul style="list-style-type: none">• USB CDC_ACN compatible• SCPI, 1994 (partially compatible)		
Command forms	Commands and queries have two different forms, long and short. The command syntax is written with the short form of the command in capitals and the remainder (long form) in lower case.		
	<pre>graph TD; Long[Long] --- TIMEbaseSCALE[":TIMEbase:SCALe?"]; TIMEbaseSCALE --- ShortL[Short]; TIMEbaseSCALE --- ShortR[Short]</pre>		
	The commands can be written in capitals or lower-case, just so long as the short or long forms are complete. An incomplete command will not be recognized. Below are examples of correctly written commands.		
	LONG	:TIMEbase:SCALe? :TIMEBASE:SCALE?	
	SHORT	:TIM:SCAL? :TIM:SCAL?	
Command format	:TIMEbase:SCALe <NR3>LF 1: command header 2: single space 3: parameter 4: message terminator		
Parameter	Type <Boolean> <NR1> <NR2> <NR3> <NRf>	Description boolean logic Integers floating point floating point with an exponent any of NR1, 2, 3	Example 0, 1 0, 1, 2, 3 0.1, 3.14, 8.5 4.5e-1, 8.25e+1 1, 1.5, 4.5e-1
Message terminator	LF	line feed code	
Note	Commands are non-case sensitive.		

3. COMMAND DETAILS

The Command details chapter shows the detailed syntax, equivalent panel operation, and example for each command.

3-1. Common Commands	14
3-2. Acquisition Commands.....	16
3-3. Autoscale Commands	20
3-4. Vertical Commands.....	21
3-5. Math Commands.....	25
3-6. Cursor Commands	31
3-7. Display Commands	39
3-8. Hardcopy Commands	41
3-9. Measure Commands	44
3-10. Measurement Commands	64
3-11. Reference Commands.....	69
3-12. Run Command.....	71
3-13. Timebase Commands.....	72
3-14. Trigger Commands	74
3-15. System Commands	109
3-16. Save/Recall Commands	109
3-17. Ethernet Commands	113
3-18. Time Commands.....	113
3-19. Bus Decode Commands	114
3-20. Mark Commands	127
3-21. Search Commands.....	129
3-22. Digital Commands.....	159
3-23. Label Commands	165
3-24. Utility Commands.....	171
3-25. Segment Commands	171
3-26. Function Generator Commands	177
3-27. Go_NoGo Commands	179
3-28. DVM Commands	184
3-29. Data Logging Commands	185

3-1. Common Commands

3-1-1. *IDN?	14
3-1-2. *LRN?	14
3-1-3. *SAV	15
3-1-4. *RCL	15
3-1-5. *RST	15
3-1-6. *CLS	15

3-1-1. *IDN?

→(Query)

Description	Returns the manufacturer, model, serial number and version number of the unit.
-------------	--

Syntax	*IDN?
--------	-------

Example	*IDN? TEXIO, DCS-9710,P930116,V0.82b
---------	---

3-1-2. *LRN?

→(Query)

Description	Returns the oscilloscope settings as a data string.
-------------	---

Syntax	*LRN?
--------	-------

Example	*LRN?
---------	-------

:DISPlay:WAVEform VECTOR;PERSistence 2.400E-01;
INTensity:WAVEform 50;INTensity:GRATicule 50;GRATicule
FULL;:CHANnel CH1:DISPlay ON;BWLimit FULL;COUpling
DC;INVert OFF;POSition -8.800E-02;PROBe:RATio
.
.
.
.
.

OFF;;D9:LABel:DISPlay OFF;;D10:LABel:DISPlay
OFF;;D11:LABel:DISPlay OFF;;D12:LABel:DISPlay
OFF;;D13:LABel:DISPlay OFF;;D14:LABel:DISPlay
OFF;;D15:LABel:DISPlay OFF;;BUZZER OFF

3-1-3. *SAV

(Set →)

Description	Saves the current panel settings to the selected memory number.
Syntax	*SAV {1 2 3 20}
Example	*SAV 1 Saves the current panel settings to Set 1

3-1-4. *RCL

(Set →)

Description	Recalls a set of panel settings.
Syntax	*RCL {1 2 3 20}
Example	*RCL 1 Recalls the selected setup from Set 1.

3-1-5. *RST

(Set →)

Description	Resets the DCS-9700 (recalls the default panel settings).
Syntax	*RST

3-1-6. *CLS


(Set →)

Description	Clears the error queue.
Syntax	*CLS

3-2. Acquisition Commands


3-2-1. :ACQuire:AVERage.....	16
3-2-2. :ACQuire:MODE.....	16
3-2-3. :ACQuire<X>:MEMory?	17
3-2-4. :ACQuire<X>:LMEMemory?	18
3-2-5. :ACQuire<X>:STATE?.....	18
3-2-6. :ACQuire:INTERpolation	19
3-2-7. :ACQuire:FILTer.....	19
3-2-8. :ACQuire:RECOndlength	19
3-2-9. :HEADER	20

3-2-1. :ACQuire:AVERage

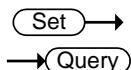

Description	Selects or returns the number of waveform acquisitions that are averaged in the average acquisition mode.
Syntax	:ACQuire:AVERage {<NR1> ?}
Related Commands	:ACQuire:MODE
Parameter	<NR1> 2, 4, 8 ,16, 32, 64, 128, 256
Note	Before using this command, select the average acquisition mode. See the example below.
Example	:ACQuire:MODE AVERage :ACQuire:AVERage 2 Selects the average acquisition mode, and sets the average number to 2.

3-2-2. :ACQuire:MODE

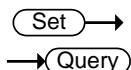

Description	Selects or returns the acquisition mode.
Syntax	:ACQuire:MODE {SAMPLE PDETect AVERage ?}
Related Commands	:ACQuire:AVERage
Parameter	SAMPLE Sample mode sampling PDETect Peak detect sampling AVERage Average sampling mode
Example	:ACQuire:MODE PDETect Sets the sampling mode to peak detection.

3-2-3. :ACQuire<X>:MEMory?

→(Query)

Description	Returns the data in acquisition memory for the selected channel as a header + raw data.
Syntax	:ACQuire<X>:MEMory?
Related Commands	ACQuire:RECOrdlength :HEADer
Parameter	<X> Channel number (1 to 4)
Example	:ACQuire1:MEMory? Format,2,0A;Memory Length,5000;IntpDistance,0;Trigger Address,2499;Trigger Level,9.400E- 02;Source,CH1;Vertical Units,V;Vertical Units Div,0;Vertical Units Extend Div,13;Label,,;Probe Type,0;Probe,1.000e+00;Vertical Scale,5.000e- 02;Vertical Position,-9.400e-02;Horizontal Units,S;Horizontal Scale,2.000E-04;Horizontal Position,0.000E+00;Horizontal Mode,Main;SincET Mode,Real Time;Sampling Period,4.000e- 07;Horizontal Old Scale,2.000E-04;Horizontal Old Position,0.000E+00;Firmware,V0.99.03;Time,19-Sep- 12 10:04:48;Waveform Data; <LF>#510000 <Raw Data> <LF>

3-2-4. :ACQuire<X>:LMemory?

→(Query)

Description	Returns the data in acquisition memory for the selected channel as a header + raw data. This is the equivalent to the Detail LM format.
Syntax	:ACQuire<X>:LMemory?
Related Commands	:ACQuire:RECOndlength :HEADer
Parameter	<X> Channel number (1 to 4)
Example	:ACQuire1:LMemory? Format,2.0A,Memory Length,1000000,IntpDistance,0,Trigger Address,2499,Trigger Level,9.400E- 02,Source,CH1,Vertical Units,V,Vertical Units Div,0,Vertical Units Extend Div,13,Label,;Probe Type,0,Probe,1.000E+00,Vertical Scale,5.000E- 02,Vertical Position,-9.400E-02,Horizontal Units,S,Horizontal Scale,2.000E-04,Horizontal Position,0.000E+00,Horizontal Mode,Main,SincET Mode,Real Time,Sampling Period,2.000E- 09,Horizontal Old Scale,2.000E-04,Horizontal Old Position,0.000E+00,Firmware,V0.99.03,Time,19-Sep- 12 10:40:10,Waveform Data; <LF> #72000000 <Raw Data> <LF>

3-2-5. :ACQuire<X>:STATe?

→(Query)

Description	Returns the status of waveform data.
Syntax	:ACQuire<X>:STATe?
Parameter	<X> Channel number (1 to 4)
Return parameter	0 Raw data is not ready 1 Raw data is ready
Example	:ACQuire1:STATe? 0 Returns 0. The channel 1's raw data is not ready. Note: If the oscilloscope changes the acquisition status from STOP to RUN, the status will be reset as zero.

3-2-6. :ACQuire:INTERpolation

Set →
→ Query

Description	Selects or returns the interpolation mode.
Syntax	:ACQuire:INTERpolation {ET SINC ?}
Parameter/Return parameter	ET Set the Equivalent Time interpolation. SINC Sets to SIN(X)/X interpolation
Example	:ACQuire:INTERpolation ET Sets the scope to ET interpolation.

3-2-7. :ACQuire:FILTter

Set →
→ Query

Description	Sets the normalized cut-off frequency to the nearest set. [0.02:0.02:0.98]
Syntax	:ACQuire:FILTter {OFF <NR3> ?}
Parameter/Return parameter	OFF Turns the digital filter off. <NR3> 0.02,0.04~0.98.
Example	:ACQuire:FILTter OFF Turns the digital filter off.

3-2-8. :ACQuire:RECORDlength

Set →
→ Query

Description	Sets or queries the record length. Please see the user manual for full details.
Syntax	:ACQuire:RECORDlength {AUTo SHORT ?}
Parameter/Return parameter	AUTo Auto record length. SHORT Short record length.
Example	:ACQuire:RECORDlength? AUTo The record length is currently set to AUTO.

3-2-9. :HEADer

Set →
→ Query

Description	Configures whether the :ACQuire:MEM or :ACQuire:LMEM return data will contain header information or not. It is set to ON by default.	
Syntax	:HEADer {OFF ON ?}	
Related Commands	:ACQuire<X>:MEMORY? :ACQuire<X>:LMEMORY?	
Parameter	<X>	Channel number (1 to 4)
	ON	Add header information.
	OFF	Don't add header information.
Return parameter	Returns the configuration (ON, OFF) for the selected channel.	
Example	:HEADer ON	

3-3. Autoscale Commands

3-3-1. :AUTOSet

Set →

Description	Runs the Autoset function to automatically configure the horizontal scale, vertical scale, and trigger according to the input signal.	
Syntax	:AUTOSet	

3-3-2. :AUTORSET:MODE


Set →
→ Query

Description	Sets the Autoset mode or queries its state.	
Syntax	:AUTORSET:MODE {FITScreen ACPriority ?}	
Related Commands	:AUTOSet	
Parameter/Return parameter	FITScreen	Fit Screen mode
	ACPriority	AC priority mode
Example	:AUTORSET? FITSCREEN	

3-4. Vertical Commands


3-4-1. :CHANnel<X>:BWLimit	21
3-4-2. :CHANnel<X>:COUpling.....	21
3-4-3. :CHANnel<X>:DESKew	22
3-4-4. :CHANnel<X>:DISPlay.....	22
3-4-5. :CHANnel<X>:EXPand	22
3-4-6. :CHANnel<X>:IMPedance?.....	23
3-4-7. :CHANnel<X>:INVert	23
3-4-8. :CHANnel<X>:POSition	23
3-4-9. :CHANnel<X>:PROBe:RATio	24
3-4-10. :CHANnel<X>:PROBe:TYPe	24
3-4-11. :CHANnel<X>:SCALE	24

3-4-1. :CHANnel<X>:BWLimit

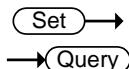


Description	Sets or returns the bandwidth limit on/off.	
Syntax	:CHANnel<X>:BWLimit {FULL <NR3> ?}	
Parameter	<X>	Channel 1,2,3,4
	FULL	Full bandwidth
	<NR3>	Sets the bandwidth limit to a pre-defined bandwidth. 200E+6: 200MHz 100E+6: 100MHz 20E+6: 20MHz
Return Parameter	<NR3>	Returns the bandwidth. Full Full bandwidth
Example	:CHANnel1:BWLImit 2.000E+07 Sets the channel 1 bandwidth 20MHz	

3-4-2. :CHANnel<X>:COUPling

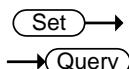


Description	Selects or returns the coupling mode.	
Syntax	CHANnel<X>:COUpling {AC DC GND ?}	
Parameter	<X>	Channel 1,2,3,4
	AC	AC coupling
	DC	DC coupling
	GND	Ground coupling
Return parameter	Returns the coupling mode.	
Example	:CHANnel1:COUpling DC Sets the coupling to DC for Channel 1.	

3-4-3. :CHANnel<X>:DESKew

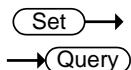


Description	Sets the deskew time in seconds.	
Syntax	:CHANnel<X>:DESKew { <NR3> ? }	
Parameter	<X>	Channel 1,2,3,4
	<NR3>	Deskew time: -5.00E -11 to 5.00E-11 -50ns to 50 ns.
Return parameter	<NR3>	Returns the deskew time.
Example	:CHANnel1:DESKew 1.300E-9 Sets the deskew time to 1.3 nano seconds.	

3-4-4. :CHANnel<X>:DISPlay

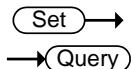

Description	Turns a channel on/off or returns its status.	
Syntax	:CHANnel<X>:DISPlay {OFF ON ?}	
Parameter	<X>	Channel 1,2,3,4
	OFF	Channel off
	ON	Channel on
Return Parameter	ON	Channel is on.
	OFF	Channel is off
Example	:CHANnel1:DISPlay ON Turns on Channel 1	

3-4-5. :CHANnel<X>:EXPand

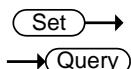

Description	Sets Expand By Ground or Expand By Center for a channel or queries its status.	
Syntax	:CHANnel<X>:EXPand {GND CENTER ?}	
Parameter	<X>	Channel 1,2,3,4
	GND	Ground
	CENTER	Center
Return parameter	GND	Expand By Ground
	CENTER	Expand By Center
Example	:CHANnel1:EXPand GND Sets Channel 1 to Expand By Ground.	

3-4-6. :CHANnel<X>:IMPedance?

→Query

Description	Returns the impedance of the oscilloscope.	
Syntax	:CHANnel<X>:IMPedance?	
Parameter	<x>	Channel 1/2/3/4 CH1/2/3/4
Return parameter	<NR3> Returns the impedance value.	
Example	<code>:CHANnel1:IMPedance?</code> 1.000000E+06 The impedance is 1M ohms.	

3-4-7. :CHANnel<X>:INVert

Set →
→Query


Description	Inverts a channel or returns its status.	
Syntax	:CHANnel<X>:INVert {OFF ON ?}	
Parameter	<X>	Channel 1, 2, 3, 4
	OFF	Invert off
	ON	Invert on
Return parameter	ON	Invert on
	OFF	Invert off
Example	<code>:CHANnel1:INVert ON</code> Inverts Channel 1	

3-4-8. :CHANnel<X>:POSIon

Set →
→Query


Description	Sets or returns the position level for a channel.	
Note	The vertical position will only be set to closest allowed value. The position level range depends on the vertical scale. The scale must first be set before the position can be set.	
Syntax	:CHANnel<X>:POSIon { <NRf> ?}	
Parameter	<X>	Channel 1, 2, 3, 4
	<NRf>	Position. Range depends on the vertical scale.
Return parameter	<NR3> Returns the position value.	
Example 1	<code>:CHANnel1:POSIon 2.4E-3</code> Sets the Channel 1 position to 2.4mV/mA	
Example 2	<code>:CHANnel1:POSIon?</code> 2.4E-3 Returns 2.4mV as the vertical position.	

3-4-9. :CHANnel<X>:PROBe:RATio

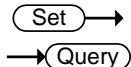


Description	Sets or returns the probe attenuation factor.	
Syntax	:CHANnel<X>:PROBe:RATio { <NRf> ?}	
Related Commands	:CHANnel<X>:PROBe:TYPe	
Parameter	<X>	Channel 1, 2, 3, 4
	<NRf>	Probe attenuation factor.
Return parameter	<NR3>	Returns the probe factor.
Example	:CHANnel1:PROBe:RATio 1.00E+0	Sets the Channel 1 probe attenuation factor to 1x

3-4-10. :CHANnel<X>:PROBe:TYPe

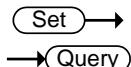

Description	Sets or returns the probe type (voltage/current).	
Syntax	:CHANnel<X>:PROBe:TYPe { VOLtage CURRent ?}	
Related Commands	:CHANnel<X>:PROBe:RATio	
Parameter	<X>	Channel 1, 2, 3, 4
	VOLTage	Voltage
	CURRent	Current
Return parameter	Returns the probe type.	
Example	:CHANnel1:PROBe:TYPe VOLtage	Sets the Channel 1 probe type to voltage.

3-4-11. :CHANnel<X>:SCALe

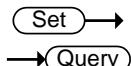


Description	Sets or returns the vertical scale. The scale depends on the probe attenuation factor. Note the probe attenuation factor should be set before the scale.	
Syntax	:CHANnel<X>:SCALe { <NRf> ?}	
Parameter	<X>	Channel 1, 2, 3, 4
	<NRf>	Vertical scale: 2e-3 to 1e+1 2mV to 10V (Probe x1)
Return parameter	<NR3>	Returns the vertical scale in volts or amps.
Example	:CHANnel1:SCALe 2.00E-2	Sets the Channel 1 vertical scale to 20mV/div

3-5. Math Commands

3-5-1. :MATH:DISP	25
3-5-2. :MATH:TYPe.....	25
3-5-3. :MATH:DUAL:SOURce<X>.....	26
3-5-4. :MATH:DUAL:OPERator	26
3-5-5. :MATH:DUAL:POSIon	26
3-5-6. :MATH:DUAL:SCALe	27
3-5-7. :MATH:FFT:SOURce	27
3-5-8. :MATH:FFT:MAG	27
3-5-9. :MATH:FFT:WINDow	28
3-5-10. :MATH:FFT:POSITION	28
3-5-11. :MATH:FFT:SCALe	28
3-5-12. :MATH:FFT:HORizontal:SCALe	29
3-5-13. :MATH:ADVanced:OPERator.....	29
3-5-14. :MATH:ADVanced:SOURce	29
3-5-15. :MATH:ADVanced:EDIT:SOURce<X>	30
3-5-16. :MATH:ADVanced:EDIT:OPERator.....	30
3-5-17. :MATH:ADVanced:POSIon	30
3-5-18. :MATH:ADVanced:SCALe.....	31


3-5-1. :MATH:DISP

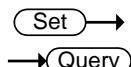

Description	Turns the math display on or off on the screen.	
Syntax	:MATH:DISP {OFF ON ?}	
Parameter/ Return parameter	OFF	Math is not displayed on screen
	ON	Math is displayed on screen


Example :MATH:DISP OFF
Math is off.

3-5-2. :MATH:TYPe

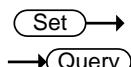


Description	Queries or sets the Math type to FFT, Advanced Math or to dual channel math operations	
Syntax	:MATH:TYPe { DUAL ADVanced FFT ? }	
Related Commands	:MATH:DISP	
Parameter	DUAL	Dual channel operations
	ADVanced	Advanced math operations
	FFT	FFT operations
Return parameter	Returns the math type.	
Example	:MATH:TYPe DUAL Sets the Math type to dual channel math operation.	

3-5-3. :MATH:DUAL:SOURce<X>

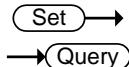


Description	Sets the dual math source for source 1 or 2.	
Syntax	:MATH:DUAL:SOURce<X> { CH1 CH2 CH3 CH4 REF1 REF2 REF3 REF4 ? }	
Parameter	<X>	Source number 1 or 2
	CH1~4	Channel 1 to 4
	REF1~4	Reference waveforms 1 to 4
Return parameter	Returns the source for the source 1 or 2.	
Example	:MATH:DUAL:SOURce1 CH1 Sets source1 as channel 1.	

3-5-4. :MATH:DUAL:OPERator

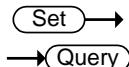


Description	Sets the math operator for dual math operations.	
Syntax	:MATH:DUAL:OPERator {PLUS MINUS MUL DIV ?}	
Parameter	PLUS	+ operator
	MINUS	- operator
	MUL	× operator
	DIV	÷ operator
Return parameter	Returns operator type.	
Example	:MATH:DUAL:OPERator PLUS Sets the math operator as plus (+).	

3-5-5. :MATH:DUAL:POSITION

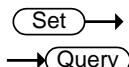


Description	Sets the vertical position of the displayed math result expressed by division.	
Syntax	:MATH:DUAL:POSITION {<NRf> ? }	
Parameter	<NRf>	Vertical position Depends on the vertical scale (Unit/Div)
Return parameter	<NR3> Returns the vertical position.	
Example	:MATH:DUAL:POSITION 1.0E+0 Sets the vertical position to 1.00 unit/div.	

3-5-6. :MATH:DUAL:SCALe

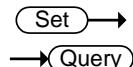


Description	Sets the vertical scale of the displayed math result.
Syntax	:MATH:DUAL:SCALe {<NRf> ?}
Parameter	<NRf> Vertical scale
Return parameter	<NR3> Returns the scale.
Example	:MATH:DUAL:SCALe 2.0E-3 Sets the vertical scale to 2mV/2mA.

3-5-7. :MATH:FFT:SOURce

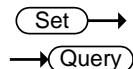


Description	Sets and queries the FFT math source.
Syntax	:MATH:FFT:SOURce { CH1 CH2 CH3 CH4 REF1 REF2 REF3 REF4 FUNCtion ? }
Related commands	:MATH:ADVanced:EDIT:SOURce<X> :MATH:ADVanced:EDIT:OPERator
Parameter	CH1~4 Channel 1 to 4 REF1~4 Reference waveform 1 to 4 FUNCtion F(X) waveform
Return parameter	Returns the FFT source.
Example	:MATH:FFT:SOURce CH1 Sets the FFT math source as channel 1.

3-5-8. :MATH:FFT:MAG

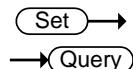


Description	Sets FFT vertical units as linear or decibels.
Syntax	:MATH:FFT:MAG {LINEAR DB ?}
Parameter	LINEAR Linear units (Vrms) DB Logarithmic units (dB)
Return parameter	Returns the FFT vertical units.
Example	:MATH:FFT:MAG DB Sets FFT vertical units to dB.

3-5-9. :MATH:FFT:WINDOW

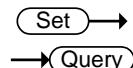


Description	Sets the windowing filter used for the FFT function.	
Syntax	:MATH:FFT:WINDOW {RECTangular HAMming HANning BLAckman ?}	
Parameter	RECTangular	Rectangular window
	HAMming	Hamming window
	HANning	Hanning window
	BLAckman	Blackman window
Return parameter	Returns the FFT window.	
Example	:MATH:FFT:WINDOW HAMming Sets the FFT window filter to hamming.	

3-5-10. :MATH:FFT:POSITION

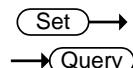


Description	Sets the vertical position of the displayed FFT result.	
Syntax	MATH:FFT:POSITION { <NRf> ? }	
Parameter	<NRf>	Vertical position: -12e+0 to +12e+0 (12 units/division to +12 units/division.)
Return parameter	<NR3>	Returns the vertical position.
Example	:MATH:FFT:POSITION -2e-1 Sets the FFT position to -0.2 divisions.	

3-5-11. :MATH:FFT:SCALE

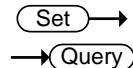


Description	Sets the vertical scale of the displayed FFT result.	
Syntax	:MATH:FFT:SCALE {<NRf> ? }	
Parameter	<NRf>	Vertical scale: Linear: 2e-3 to 1e+ (32mV~1kV) dB: 1e+0 to 2e+1 (1~20dB)
Return parameter	<NR3>	Returns vertical scale.
Example	:MATH:FFT:SCALE 1.0e+0 Sets the scale to 1dB.	

3-5-12. :MATH:FFT:HORizontal:SCALe

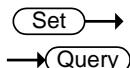


Description	Sets or queries the zoom scale for FFT math.
Syntax	:MATH:FFT:HORizontal:SCALe {<NRf> ?}
Parameter	<NRf> Zoom scale: 1 to 20 times
Return parameter	<NR3> Returns zoom scale.
Example	:MATH:FFT:HORizontal:SCALe 5 Sets the zoom scale to 5X.

3-5-13. :MATH:ADVanced:OPERator

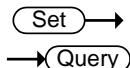


Description	Sets or queries the advanced math operator.
Syntax	:MATH:ADVanced:OPERator {DIFF INTG SQRT ?}
Parameter	DIFF $\frac{d}{dt}$ INT $\int dt$ SQRT $\sqrt{\cdot}$
Return parameter	Returns operator type.
Example	:MATH:ADVanced:OPERator DIFF Sets the advanced math operator as d/dt .

3-5-14. :MATH:ADVanced:SOURce

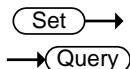


Description	Sets or queries the advanced math source.
Syntax	:MATH:ADVanced:SOURce { CH1 CH2 CH3 CH4 REF1 REF2 REF3 REF4 FUNCtion ? }
Related Commands	:MATH:ADVanced:EDIT:SOURce<X> :MATH:ADVanced:EDIT:OPERator
Parameter	CH1~4 Channel 1 to 4 REF1~4 Reference waveform 1 to 4 FUNCtion F(X) waveform
Return parameter	Returns the advanced source.
Example	:MATH:ADVanced:SOURce CH1 Sets the advanced math source as channel 1.

3-5-15. :MATH:ADVanced:EDIT:SOURce<X>

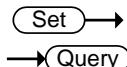


Description	Sets or queries the advanced math f(x) source.
Syntax	:MATH:ADVanced:EDIT:SOURce { CH1 CH2 CH3 CH4 ? }
Related Commands	:MATH:ADVanced:EDIT:OPERator
Parameter	CH1~4 Channel 1 to 4
Return parameter	Returns the source.
Example	:MATH:ADVanced:EDIT:SOURce CH1 Sets the advanced math source as channel 1.

3-5-16. :MATH:ADVanced:EDIT:OPERator

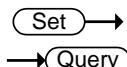


Description	Sets or queries the math operator for the advanced math f(x) function.								
Syntax	:MATH:ADVanced:EDIT:OPERator { PLUS MINUS MUL DIV ? }								
Parameter	<table> <tr> <td>PLUS</td> <td>+ operator</td> </tr> <tr> <td>MINUS</td> <td>- operator</td> </tr> <tr> <td>MUL</td> <td>× operator</td> </tr> <tr> <td>DIV</td> <td>÷ operator</td> </tr> </table>	PLUS	+ operator	MINUS	- operator	MUL	× operator	DIV	÷ operator
PLUS	+ operator								
MINUS	- operator								
MUL	× operator								
DIV	÷ operator								
Return parameter	Returns operator type.								
Example	:MATH:ADVanced:EDIT:OPERator PLUS Sets the math operator as plus (+).								

3-5-17. :MATH:ADVanced:POSition

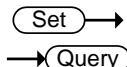

Description	Sets the vertical position of the advanced math result, expressed in unit/div.
Syntax	:MATH:ADVanced:POSition { <NRf> ? }
Parameter	<NRf> Vertical position: -12e+0 to +12e+0 (12 units/division to +12 units/division.)
Return parameter	<NR3> Returns the vertical position.
Example	:MATH:ADVanced:POSition 1.0e+0 Sets the position as 1.00 unit/div.

3-5-18. :MATH:ADVanced:SCALE

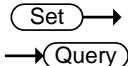


Description	Sets or queries the vertical scale the advanced math result.
Syntax	:MATH:ADVanced:SCALE {<NRf> ?}
Parameter	<NRf> Vertical scale
Return parameter	<NR3> Returns the vertical scale.
Example	:MATH:ADVanced:SCALE 2.0E-3 Sets the vertical scale to 2mV/S

3-6. Cursor Commands


3-6-1. :CURSor:MODe	32
3-6-2. :CURSor:SOURce	32
3-6-3. :CURSor:HUNI.....	33
3-6-4. :CURSor:HUSE.....	33
3-6-5. :CURSor:VUNI.....	33
3-6-6. :CURSor:VUSE.....	34
3-6-7. :CURSor:DDT	34
3-6-8. :CURSor:H1Position	34
3-6-9. :CURSor:H2Position	35
3-6-10. :CURSor:HDELta	35
3-6-11. :CURSor:V1Position	35
3-6-12. :CURSor:V2Position.....	36
3-6-13. :CURSor:VDELta	36
3-6-14. :CURSor:XY:RECTangular:X:POSition<X>	36
3-6-15. :CURSor:XY:RECTangular:X:DELta	36
3-6-16. :CURSor:XY:RECTangular:Y:POSition<X>	37
3-6-17. :CURSor:XY:RECTangular:Y:DELta	37
3-6-18. :CURSor:XY:POLar:RADIUS:POSition<X>	37
3-6-19. :CURSor:XY:POLar:RADIUS:DELta	37
3-6-20. :CURSor:XY:POLar:THETA:POSition<X>	38
3-6-21. :CURSor:XY:POLar:THETA:DELta	38
3-6-22. :CURSor:XY:PRODUCT:POSition<X>	38
3-6-23. :CURSor:XY:PRODUCT:DELta	38
3-6-24. :CURSor:XY:RATio:POSition<X>	39
3-6-25. :CURSor:XY:RATio:DELta	39

3-6-1. :CURSor:MODE

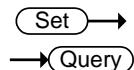

Description	Sets cursor mode to horizontal (H) or horizontal and vertical (HV). Note: When the cursor source is set to logic or bus, then only the horizontal cursor is available.							
Syntax	:CURSor:MODE {OFF H HV ? }							
Parameter	<table border="0"><tr><td>OFF</td><td>Turns the cursors off.</td></tr><tr><td>H</td><td>Turns the horizontal cursors on.</td></tr><tr><td>HV</td><td>Turns horizontal and vertical cursors on.</td></tr></table>		OFF	Turns the cursors off.	H	Turns the horizontal cursors on.	HV	Turns horizontal and vertical cursors on.
OFF	Turns the cursors off.							
H	Turns the horizontal cursors on.							
HV	Turns horizontal and vertical cursors on.							
Return parameter	Returns the state of the cursors (H, HV, OFF).							
Example	:CURSor:MODE OFF Turns the cursors off.							

3-6-2. :CURSor:SOURce

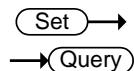

Description	Sets or queries the cursor source.											
Syntax	:CURSor:SOURce {CH1 CH2 CH3 CH4 REF1 REF2 REF3 REF4 MATH LOGic BUS1 ? }											
Parameter	<table border="0"><tr><td>CH1~CH4</td><td>Channel 1 to 4</td></tr><tr><td>REF1~4</td><td>Reference waveform 1 to 4</td></tr><tr><td>MATH</td><td>Math source</td></tr><tr><td>LOGic</td><td>Logic source</td></tr><tr><td>BUS1</td><td>Bus source</td></tr></table>		CH1~CH4	Channel 1 to 4	REF1~4	Reference waveform 1 to 4	MATH	Math source	LOGic	Logic source	BUS1	Bus source
CH1~CH4	Channel 1 to 4											
REF1~4	Reference waveform 1 to 4											
MATH	Math source											
LOGic	Logic source											
BUS1	Bus source											
Return parameter	Returns the cursor source.											
Example	:CURSor:SOURce CH1 Turns the cursor source as channel 1.											

3-6-3. :CURSor:HUNI

Set →
→ Query

Description	Sets or queries the units for the horizontal bar cursors.	
Syntax	:CURSor:HUNI {SEConds HERtz DEGrees PERcent ?}	
Related Commands	:CURSor:MODe	
Parameter	SEConds Sets the cursor units to time in seconds. HERtz Sets the cursor units to frequency. DEGrees Sets the cursor units to degrees. PERcent Sets the cursor units to percent.	
Return parameter	Returns the unit type.	
Example	:CURSor:HUNI SEConds Sets the units to time in seconds.	

3-6-4. :CURSor:HUSE

Set →

Description	Sets the current cursor position as the phase or ratio reference for the Percent or Degrees (horizontal) cursors.	
Note	This command can only be used when :CURSor:HUNI is set to DEGrees or PERcent.	
Syntax	:CURSor:HUSE {CURREnt}	
Related Commands	:CURSor:MODe :CURSor:HUNI	
Parameter	CURREnt Uses the current horizontal position	
Example	:CURSor:HUSE CURREnt.	

3-6-5. :CURSor:VUNI

Set →
→ Query

Description	Sets or queries the units for the vertical bar cursors.	
Syntax	:CURSor:VUNI {BASE PERcent ?}	
Related Commands	:CURSor:MODe	
Parameter	BASE Sets the vertical cursor units the same as the scope units (V or A). PERcent Sets the displayed units to percent.	
Return parameter	Returns the unit type.	
Example	:CURSor:VUNI BASE Sets the units to the base units.	

3-6-6. :CURSor:VUSE

 Set →

Description	Sets the current cursor position as the ratio reference for the Percent (vertical) cursors.
Note	This command can only be used when :CURSor:VUNI is set to PERcent.
Syntax	:CURSor:VUSE {CURRent}
Related Commands	:CURSor:MODE :CURSor:VUNI
Parameter	CURRent Uses the current vertical position
Example	:CURSor:VUSE CURRent.

3-6-7. :CURSor:DDT

→  Query

Description	Returns the deltaY/deltaT (dy/dT) readout.
Syntax	:CURSor:DDT {?} {?}
Related Commands	:CURSor:MODE
Return Parameter	<NR3> Returns the readout in <NR3> format.
Example	:CURSor:DDT? 4.00E-05


3-6-8. :CURSor:H1Position

 Set →

→  Query

Description	Sets or returns the first horizontal cursor (H1) position.
Syntax	:CURSor:H1Position {<NRf>} {?} {?}
Related Commands	:CURSor:H2Position
Parameter	<NRf> Horizontal position
Return parameter	Returns the cursor position.
Example	:CURSor:H1Position? -1.34E-3 Returns the H1 cursor position as -1.34ms.

3-6-9. :CURSOR:H2Position

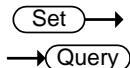


Description	Sets or returns the second horizontal cursor (H2) position.
Syntax	:CURSOR:H2Position {<NRf> ?}
Related Commands	:CURSOR:H1Position
Parameter	<NRf> Horizontal Position
Return parameter	Returns the cursor position.
Example	:CURSOR:H2Position 1.5E-3 Sets the H2 cursor position to 1.5ms.

3-6-10. :CURSOR:HDELta



Description	Returns the delta of H1 and H2.
Syntax	:CURSOR:HDELta {?}
Return Parameter	<NR3> Returns the distance between two horizontal cursors.
Example	:CURSOR:HDELta? 5.0E-9 Returns the horizontal delta as 5ns.

3-6-11. :CURSOR:V1Position

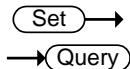

Description	Sets the first vertical cursor (V1) position.
Syntax	:CURSOR:V1Position {<NRf> ?}
Parameter	<NRf> Vertical position. Depends on the vertical scale.
Return parameter	<NR3> Returns the cursor position.
Example	:CURSOR:V1Position 1.6E -1 Sets the V1 cursor position to 160mA.

3-6-12. :CURSOR:V2Position

Set →
→ Query

Description	Sets the first vertical cursor (V2) position.	
Syntax	:CURSOR:V2Position {<NRf> ?}	
Parameter	<NRf>	Vertical position. Depends on the vertical scale.
Return parameter	<NR3>	Returns the cursor position.
Example	:CURSOR:V2Position 1.1E-1 Sets the V2 cursor position to 110mA.	

3-6-13. :CURSOR:VDELta

→ Query

Description	Returns the delta of V1 and V2.	
Syntax	:CURSOR:VDELta {?}	
Return Parameter	<NR3>	Returns the difference between two vertical cursors.
Example	:CURSOR:VDELta? 4.00E+0 Returns the vertical delta as 4 volts.	

3-6-14. :CURSOR:XY:RECTangular:X:POSIon<X>

Set →
→ Query

Description	Sets or queries the horizontal position in XY mode for the X rectangular coordinates for cursor 1 or 2.	
Syntax	:CURSOR:XY:RECTangular:X:POSIon<X> {NRf ?}	
Parameter	<X>	Cursor 1, 2
	<NRf>	Horizontal position co-ordinates
Return parameter	<NR3>	Returns the cursor position.
Example	:CURSOR:XY:RECTangular:X:POSIon1 4.0E-3 Sets the X-coordinate cursor 1 position to 40mV/mV.	

3-6-15. :CURSOR:XY:RECTangular:X:DELta

→ Query

Description	Returns the delta value of cursor 1 and 2 on the X coordinate.	
Syntax	:CURSOR:XY:RECTangular:X:DELta {?}	
Return Parameter	<NR3>	Returns the delta value of cursor 1 and 2 as <NR3>.
Example	:CURSOR:XY:RECTangular:X:DELta? 80.0E-3 Returns the horizontal delta as 80mV.	

3-6-16. :CURSOR:XY:RECTangular:Y:POSition<X>

→ Set → Query

Description	Sets or queries the vertical position in XY mode for the Y rectangular coordinates for cursor 1 or 2.
Syntax	:CURSOR:XY:RECTangular:Y:POSition<X> {NRf ?}
Parameter	<X> Cursor 1, 2 <NRf> Vertical position co-ordinates
Return parameter	<NR3> Returns the cursor position.
Example	:CURSOR:XY:RECTangular:Y:POSition1 4.0E-3 Sets the Y-coordinate cursor 1 position to 40mV/mV.

3-6-17. :CURSOR:XY:RECTangular:Y:DELta

→ Query

Description	Returns the delta value of cursor 1 and 2 on the Y coordinate.
Syntax	:CURSOR:XY:RECTangular:Y:DELta {?}
Return Parameter	<NR3> Returns the delta value of cursor 1 and 2 as <NR3>.
Example	:CURSOR:XY:RECTangular:Y:DELta? 80.0E-3 Returns the horizontal delta as 80mV.

3-6-18. :CURSOR:XY:POLar:RADIUS:POSition<X>

→ Query

Description	Queries the polar radius position for the specified cursor in XY mode, where X can be either cursor 1 or 2.
Syntax	:CURSOR:XY:POLar:RADIUS:POSition <X>{?}
Parameter	<X> 1, 2 (cursor 1, cursor 2)
Return Parameter	<NR3> Returns the polar radius position.
Example	:CURSOR:XY:POLar:RADIUS:POSition? 80.0E-3 Returns the polar radius position as 80.0mV.

3-6-19. :CURSOR:XY:POLar:RADIUS:DELta

→ Query

Description	Returns the radius delta value of cursor 1 and 2.
Syntax	:CURSOR:XY:POLar:RADIUS:DELta {?}
Return Parameter	<NR3> Returns the radius delta.
Example	:CURSOR:XY:POLar:RADIUS:DELta? 31.4E-3 Returns the radius delta as 31.4mV.

3-6-20. :CURSOR:XY:POLar:THETA:POsition<X>

→(Query)

Description	Queries the polar angle for the specified cursor in XY mode, where X can be either 1 or 2.
Syntax	:CURSOR:XY:POLar:THETA:POsition<X> {?}
Parameter	<X> 1, 2 (Cursor 1, Cursor 2)
Return parameter	<NR3> Returns the polar angle.
Example	:CURSOR:XY:POLar:RADIUS:POsition1? 8.91E+1 Returns the polar angle for cursor1 as 89.1°.

3-6-21. :CURSOR:XY:POLar:THETA:DELta

→(Query)

Description	Queries the polar angle delta between cursor1 and cursor2.
Syntax	:CURSOR:XY:POLar:THETA:DELta {?}
Return parameter	<NR3> Returns the theta delta between cursor1 and cursor2.
Example	:CURSOR:XY:POLar:THETA:DELta? 9.10E+0 Returns the delta as 9.1°.

3-6-22. :CURSOR:XY:PRODuct:POsition<X>

→(Query)

Description	Queries the product in XY mode for the specified cursor, where x can be either 1 or 2.
Syntax	:CURSOR:XY:PRODuct:POsition<X> {?}
Parameter	<X> 1, 2 (Cursor 1, Cursor 2)
Return parameter	<NR3> Returns the product value of the Cursor1 or Cursor2.
Example	:CURSOR:XY:PRODuct:POsition1? 9.44E-5 Returns the product of cursor1 as 94.4uVV.

3-6-23. :CURSOR:XY:PRODuct:DELta

→(Query)

Description	Queries the product delta in XY mode.
Syntax	:CURSOR:XY:PRODuct:DELta {?}
Return parameter	<NR3> Returns the product delta.
Example	:CURSOR:XY:PRODuct:DELta? 1.22E-5 Returns the product delta as 12.2uVV.

3-6-24. :CURSor:XY:RATio:POSIon<X>

→(Query)

Description	Queries the ratio in XY mode for the specified cursor, where x can be either cursor 1 or 2.
Syntax	:CURSor:XY:RATio:POSIon<X> {?}
Parameter	<X> 1, 2 (Cursor 1, Cursor 2)
Return parameter	<NR3> Returns the ratio.
Example	:CURSor:XY:RATio:POSIon? 6.717E+1 Returns the ratio value as 6.717V/V.

3-6-25. :CURSor:XY:RATio:DELta

→(Query)

Description	Queries the ratio delta in XY mode.
Syntax	:CURSor:XY:RATio:DELta {?}
Return parameter	<NR3> Returns the ratio delta.
Example	:CURSor:XY:RATio:DELta? 5.39E+1 Returns the ratio delta as 53.9V/V.

3-7. Display Commands

3-7-1. :DISPlay:INTensity:WAVEform.....	39
3-7-2. :DISPlay:INTensity:GRATicule.....	40
3-7-3. :DISPlay:PERsistence	40
3-7-4. :DISPlay:GRATicule.....	40
3-7-5. :DISPlay:WAVEform	41
3-7-6. :DISPlay:OUTPut.....	41


3-7-1. :DISPlay:INTensity:WAVEform

(Set) →

→(Query)


Description	Sets or queries the waveform intensity level.
Syntax	:DISPlay:INTensity:WAVEform {<NRf> ?}
Parameter	<NRf> 0.0E+0 to 1.0E+2 (0% to 100%)
Return Parameter	<NR3> Returns the display intensity.
Example	:DISPlay:INTensity:WAVEform 5.0E+1 Sets the waveform intensity to 50%.

3-7-2. :DISPlay:INTensity:GRATicule

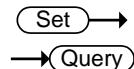


Description	Sets or queries the graticule intensity level.
Syntax	:DISPlay:INTensity:GRATicule {<NRf> ?}
Parameter	<NRf> 1.0E+0 to 1.0E+2 (10% to 100%)
Return Parameter	<NR3> Returns the graticule intensity.
Example	:DISPlay:INTensity:GRATicule 5.0E+1 Sets the graticule intensity to 50%.

3-7-3. :DISPlay:PERSistence

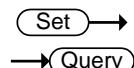


Description	Sets or queries the waveform persistence level.
Syntax	:DISPlay:PERSistence { INFInite OFF <NRf> ? }
Parameter	<NRf> 16E-3, 30E-3, 60E-3, 120E-3, 240E-3, 500E-3, 750E-3, 1, 1.5, 2, ..., 9.5, 10 (16mS to 10S) INFInite Infinite persistence OFF No persistence
Return Parameter	<NR3> Returns the persistence time. INFInite Infinite persistence OFF No persistence
Example	:DISPlay:PERSistence 2.0E+0 Sets the persistence to 2 seconds.

3-7-4. :DISPlay:GRATicule

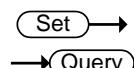

Description	Sets or queries graticule display type.
Syntax	:DISPlay:GRATicule {FULL GRID CROSs FRAMe ?}
Parameter	FULL CROSs FRAMe GRID
Return parameter	Returns the graticule type.
Example	:DISPlay:GRATicule FULL Sets the graticule to .

3-7-5. :DISPlay:WAVEform

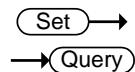

Description	Sets or queries whether the waveforms are drawn as vectors or dots.
Syntax	:DISPlay:WAVEform {VECTOr DOT ?}
Parameter	VECTOr Vectors DOT Dots
Return parameter	Returns VECTOR or DOT.
Example	:DISPlay:WAVEform VECTOr Sets the waveform to vectors.

3-7-6. :DISPlay:OUTPut



Description	Returns the screen image as a 16 bit RGB run length encoded image.
Syntax	:DISPlay:OUTPut ?
Return parameter	Returns: header + data + LF
Example	For example assuming the image data size is 31649 bytes then the following would be returned: #531649<[count] [color] [count] [color].....><LF> Where #531649 is the header, each [count] and [color] data are 2 bytes and <LF> is a line feed character.

3-8. Hardcopy Commands

3-8-1. :HARDcopy:START.....	41
3-8-2. :HARDcopy:MODE.....	42
3-8-3. :HARDcopy:PRINTINKSaver	42
3-8-4. :HARDcopy:SAVEINKSaver	42
3-8-5. :HARDcopy:SAVEFORMAT	43
3-8-6. :HARDcopy:ASSIGN.....	43

3-8-1. :HARDcopy:START



Description	Executing the HARDcopy:START command is the equivalent of pressing the Hardcopy key on the front panel.
Syntax	:HARDcopy:START
Related Commands	:HARDcopy:MODE :HARDcopy:PRINTINKSaver :HARDcopy:SAVEINKSaver :HARDcopy:SAVEFORMAT :HARDcopy:ASSIGN

3-8-2. :HARDcopy:MODE

Set →

→ Query

Description	Sets or queries whether hardcopy is set to print or save.	
Syntax	:HARDcopy:MODE { PRINT SAVE ? }	
Related Commands	:HARDcopy:START	
Parameter	PRINT	Print mode
	SAVE	Save mode
Return parameter	Returns the mode.(PRINT/SAVE)	
Example	:HARDcopy:MODE PRINT Sets hardcopy to print.	

3-8-3. :HARDcopy:PRINTINKSaver

Set →

→ Query

Description	Sets Inksaver On or Off for printing.	
Syntax	:HARDcopy:PRINTINKSaver { OFF ON ? }	
Related Commands	:HARDcopy:START :HARDcopy:MODE	
Parameter	ON	Inksaver ON
	OFF	Inksaver OFF
Return parameter	Returns the print Ink Saver mode.(ON/OFF)	
Example	:HARDcopy:PRINTINKSaver ON Sets Ink Saver to ON for printing.	


3-8-4. :HARDcopy:SAVEINKSaver

Set →

→ Query


Description	Sets Inksaver On or Off for saving screen images.	
Syntax	:HARDcopy:SAVEINKSaver { OFF ON ? }	
Related Commands	:HARDcopy:START :HARDcopy:MODE	
Parameter	ON	Inksaver ON
	OFF	Inksaver OFF
Return parameter	Returns the screen image Ink Saver mode (ON/OFF).	
Example	:HARDcopy:SAVEINKSaver ON Sets Inksaver to ON for saving screen images.	

3-8-5. :HARDcopy:SAVEFORMAT

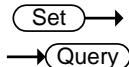

Description	Sets or queries the image save file type.	
Syntax	:HARDcopy:SAVEFORMAT { PNG BMP ? }	
Related Commands	:HARDcopy:START :HARDcopy:MODE	
Parameter	PNG	PNG file format
	BMP	BMP file format
Return parameter	Returns the image file format (PNG/BMP).	
Example	:HARDcopy:SAVEFORMAT PNG Sets the file format to PNG.	

3-8-6. :HARDcopy:ASSIGN

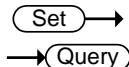


Description	Sets or queries what file type the hardcopy key has been assigned to save.	
Syntax	:HARDcopy:ASSIGN {IMAGe WAVEform SETUp ALL ?}	
Related Commands	:HARDcopy:START :HARDcopy:MODE	
Parameter	IMAGe	Save image files.
	WAVEform	Save waveforms.
	SETUp	Save the panel setup.
	ALL	Save All (image, waveform,setup)
Return parameter	Returns the file type. (IMAGE/WAVEFORM/SETUP/ALL)	
Example	:HARDcopy:ASSIGN IMAGE. Set the hardcopy key to save image files.	

3-9. Measure Commands


3-9-1. :MEASure:GATing	45
3-9-2. :MEASure:SOURCE.....	45
3-9-3. :MEASure:METHod.....	45
3-9-4. :MEASure:FALL	46
3-9-5. :MEASure:FPReShoot.....	47
3-9-6. :MEASure:FREQuency	47
3-9-7. :MEASure:NWIDth	48
3-9-8. :MEASure:PDUTy	48
3-9-9. :MEASure:PERiod	49
3-9-10. :MEASure:PWIth	49
3-9-11. :MEASure:RISe	50
3-9-12. :MEASure:ROVShoot.....	50
3-9-13. :MEASure:RPReShoot	51
3-9-14. :MEASure:PPULSE	51
3-9-15. :MEASure:NPULSE	52
3-9-16. :MEASure:PEDGE	52
3-9-17. :MEASure:NEDGE	53
3-9-18. :MEASure:AMPLitude	53
3-9-19. :MEASure:MEAN	54
3-9-20. :MEASure:CMEan	54
3-9-21. :MEASure:HIGH	55
3-9-22. :MEASure:LOW	55
3-9-23. :MEASure:MAX	56
3-9-24. :MEASure:MIN	56
3-9-25. :MEASure:PK2PK	57
3-9-26. :MEASure:RMS.....	57
3-9-27. :MEASure:AREA	58
3-9-28. :MEASure:CARea	58
3-9-29. :MEASure:FRRDelay	59
3-9-30. :MEASure:FRFDelay.....	59
3-9-31. :MEASure:FFRDelay.....	60
3-9-32. :MEASure:FFFDelay	60
3-9-33. :MEASure:LRRDelay	61
3-9-34. :MEASure:LRFDelay	61
3-9-35. :MEASure:LFRDelay	62
3-9-36. :MEASure:LFFDelay	62
3-9-37. :MEASure:PHAse	63

3-9-1. :MEASure:GATing

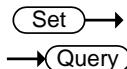


Description	Sets or queries the measurement gating.	
Syntax	:MEASure:GATing { OFF SCREen CURSor ? }	
Parameter	OFF	Full record
	SCREen	Gating set to screen width
	CURSor	Gating between cursors
Return parameter	Returns the gating. (OFF, SCREEN, CURSOR)	
Example	:MEASure:GATing OFF Turns gating off (full record).	

3-9-2. :MEASure:SOURce

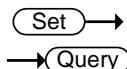

Description	Sets or queries the measurement source for source1 or source2.	
Syntax	:MEASure:SOURce<X> { CH1 CH2 CH3 CH4 MATH ? }	
Parameter	<X>	Source1 or source2
	CH1~CH4	Channel 1 to 4
	MATH	Math
Return parameter	Returns the source (CH1, CH2, CH3, CH4, MATH)	
Example	:MEASure:SOURce1 CH1 Sets source1 to channel 1.	

3-9-3. :MEASure:METHod

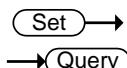

Description	Sets or queries the method used to determine the High-Low measurement values.	
Syntax	:MEASure:METHod { AUTO HIStogram MINMax ? }	
Parameter	AUTO	Set to auto.
	HIStogram	Set to the Histogram method.
	MINMax	Set to the Min-Max method.
Return parameter	Returns the measurement method (AUTO, HISTOGRAM, MINMAX)	
Example	:MEASure:METHod: AUTO Set the measurement method to auto.	

3-9-4. :MEASure:FALL



Description	Returns the fall time measurement result.	
Syntax	:MEASure:FALL{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:FALL? Selects Channel 1 as the source, and then measures the fall time.	

:MEASure:FOVShoot



Description	Returns the fall overshoot amplitude.	
Syntax	:MEASure:FOVShoot{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the fall overshoot as a percentage
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:FOVShoot? 1.27E+0 Selects Channel 1, and then measures the fall overshoot.	

3-9-5. :MEASure:FPReshoot

→(Query)

Description	Returns fall preshoot amplitude.	
Syntax	:MEASure:FPReshoot{?}	
Related Commands	:MEASure:SOURce<X>	
Returns	Returns the fall preshoot as <NR3>.	
Return parameter	<NR3>	Returns the fall preshoot as a percentage.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:FPReshoot? Selects Channel 1, and then measures the fall preshoot.	

3-9-6. :MEASure:FREQuency

→(Query)

Description	Returns the frequency value.	
Syntax	:MEASure:FREQuency{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the frequency in Hz.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:FREQuency? 1.0E+3 Selects Channel 1, and then measures the frequency.	

3-9-7. :MEASure:NWIDth

→(Query)

Description	Returns the first negative pulse width timing.	
Syntax	:MEASure:NWIDth{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the negative pulse width in seconds.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:NWIDth? 4.995E-04 Selects Channel 1, and then measures the negative pulse width.	

3-9-8. :MEASure:PDUTy

→(Query)

Description	Returns the positive duty cycle ratio as percentage.	
Syntax	:MEASure:PDUTy{?}	
Related commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the positive duty ratio.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PDUTy? 5.000E+01 Selects Channel 1, and then measures the positive duty cycle.	

3-9-9. :MEASure:PERiod

→(Query)

Description	Returns the period.
Syntax	:MEASure:PERiod{?}
Related Commands	:MEASure:SOURce<X>
Return parameter	<NR3> Returns the period. Chan Off Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:PERiod? 1.0E-3 Selects Channel 1, and then measures the period.

3-9-10. :MEASure:PWIDth

→(Query)

Description	Returns the first positive pulse width.
Syntax	:MEASure:PWIDth{?}
Related Commands	:MEASure:SOURce<X>
Return parameter	<NR3> Returns the positive pulse width. Chan Off Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:PWIDth? 5.0E-6 Selects Channel 1, and then measures the positive pulse width.

3-9-11. :MEASure:RISe

→(Query)

Description	Returns the first pulse rise time.
Syntax	:MEASure:RISe{?}
Related Commands	:MEASure:SOURce<X>
Return parameter	<NR3> Returns the rise time. Chan Off Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:RISe? 8.5E-6 Selects Channel 1, and then measures the rise time.

3-9-12. :MEASure:ROVShoot

→(Query)

Description	Returns the rising overshoot over the entire waveform in percentage.
Syntax	:MEASure:ROVShoot{?}
Related Commands	:MEASure:SOURce<X>
Return parameter	<NR3> Returns the overshoot. Chan Off Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:ROVShoot? 5.00E+00 Selects Channel 1, and then measures the rise overshoot.

3-9-13. :MEASure:RPReshoot

→ **Query**

Description	Returns rising preshoot over the entire waveform in percentage.	
Syntax	:MEASure:RPReshoot{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the rising preshoot.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:RPReshoot? 2.13E-2 Selects Channel 1, and then measures the rise preshoot.	

3-9-14. :MEASure:PPULSE

→ **Query**

Description	Returns the number of positive pulses.	
Syntax	:MEASure:PPULSE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of positive pulses.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PPULSE? 6.000E+00 Selects Channel 1, and then measures the number of positive pulses.	

3-9-15. :MEASure:NPULSE

→(Query)

Description	Returns the number of negative pulses.	
Syntax	:MEASure:NPULSE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of negative pulses.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:NPULSE? 4.000E+00 Selects Channel 1, and then measures the number of negative pulses.	

3-9-16. :MEASure:PEDGE

→(Query)

Description	Returns the number of positive edges.	
Syntax	:MEASure:PEDGE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of positive edges.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:PEDGE? 1.100E+01 Selects Channel 1, and then measures the number of positive edges.	

3-9-17. :MEASure:NEDGE

→(Query)

Description	Returns the number of negative edges.	
Syntax	:MEASure:NEDGE{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the number of negative edges.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:NEDGE? 1.100E+01 Selects Channel 1, and then measures the number of negative edges.	

3-9-18. :MEASure:AMPLitude

→(Query)

Description	Returns the amplitude difference between the Vhigh-Vlow.	
Syntax	:MEASure:AMPLitude{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the amplitude.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:AMPLitude? 3.76E-3 Selects Channel 1, and then measures the amplitude.	

3-9-19. :MEASure:MEAN

→(Query)

Description	Returns the mean voltage/current of one or more full periods.	
Syntax	:MEASure:MEAN{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the mean.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:MEAN? 1.82E-3 Selects Channel 1, and then measures the mean value.</pre>	

3-9-20. :MEASure:CMEan

→(Query)

Description	Returns the mean voltage/current of one full period.	
Syntax	:MEASure:CMEan{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the cyclic mean.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:CMEan? 9.480E-01 Selects Channel 1, and then measures the mean value of the first period.</pre>	

3-9-21. :MEASure:HIGH

→(Query)

Description	Returns the high voltage/current.
Syntax	:MEASure:HIGH{?}
Related Commands	:MEASure:SOURce<X>
Return parameter	<NR3> Returns the high value. Chan Off Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:HIGH? 3.68E-3 Selects Channel 1, and then measures the high voltage/current.

3-9-22. :MEASure:LOW

→(Query)

Description	Returns the low voltage/current.
Syntax	:MEASure:LOW{?}
Related Commands	:MEASure:SOURce<X>
Return parameter	<NR3> Returns the global low value. Chan Off Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.
Example	:MEASure:SOURce1 CH1 :MEASure:LOW? 1.00E-0 Selects Channel 1, and then measures the low current/voltage.

3-9-23. :MEASure:MAX

→(Query)

Description	Returns the maximum amplitude.	
Syntax	:MEASure:MAX{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the maximum amplitude.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:MAX? 1.90E-3 Selects Channel 1, and then measures the maximum amplitude.	

3-9-24. :MEASure:MIN

→(Query)

Description	Returns the minimum amplitude.	
Syntax	:MEASure:MIN{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the minimum amplitude.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:MIN? -8.00E-3 Selects Channel 1, and then measures the minimum amplitude.	

3-9-25. :MEASure:PK2PK

→(Query)

Description	Returns the peak-to-peak amplitude (difference between maximum and minimum amplitude).	
Syntax	:MEASure:PK2Pk{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the voltage or current peak to peak measurement.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:PK2Pk? 2.04E-1</pre> Selects Channel 1, and then measures the peak-to-peak amplitude.	

3-9-26. :MEASure:RMS

→(Query)

Description	Returns the root-mean-square voltage/current of one or more full periods.	
Syntax	:MEASure:RMS{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the RMS value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:RMS? 1.31E-3</pre> Selects Channel 1, and then measures the RMS voltage/current.	

3-9-27. :MEASure:AREa

→(Query)

Description	Returns the voltage/current area over one or more full periods.	
Syntax	:MEASure:AREa{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the area value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:AREa? 1.958E-03 Selects Channel 1, and then measures the area.	

3-9-28. :MEASure:CARea

→(Query)

Description	Returns the voltage/current area over one full period.	
Syntax	:MEASure:CARea{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the area value.
	Chan Off	Indicates the source channel is not activated.
Note	Before using this command, select the measurement channel. See the example below.	
Example	:MEASure:SOURce1 CH1 :MEASure:CARea? 1.958E-03 Selects Channel 1, and then measures the area.	

3-9-29. :MEASure:FRRDelay

→(Query)

Description	Returns the delay between the first rising edge of source1 and the first rising edge of source2.	
Syntax	:MEASure:FRRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FRRDelay? -4.68E-6 Select channel 1 and 2 as source1/2, and then measure FRR.</pre>	

3-9-30. :MEASure:FRFDelay

→(Query)

Description	Returns the delay between the first rising edge of source1 and the first falling edge of source2.	
Syntax	:MEASure:FRFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FRFDelay? 3.43E-6 Select channel 1 and 2 as source1/2, and then measure FRF.</pre>	

3-9-31. :MEASure:FFRDelay

→(Query)

Description	Returns the delay between the first falling edge of source1 and the first rising edge of source2.	
Syntax	:MEASure:FFRDelay {?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FFRDelay? -8.56E-6 Select channel 1 and 2 as delay source1/2, and then measure FFR.</pre>	

3-9-32. :MEASure:FFFDelay

→(Query)

Description	Returns the delay between the first falling edge of source1 and the first falling edge of source2.	
Syntax	:MEASure:FFFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:FFFDelay? -8.89E-6 Select channel 1 and 2 as delay source1/2, and then measure FFF.</pre>	

3-9-33. :MEASure:LRRDelay

→(Query)

Description	Returns the delay between the first rising edge of source1 and the last rising edge of source2.	
Syntax	:MEASure:LRRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LRRDelay? -8.89E-6</pre> Select channel 1 and 2 as delay source1/2, and then measure LRR.	

3-9-34. :MEASure:LRFDelay

→(Query)

Description	Returns the delay between the first rising edge of source1 and the last rising edge of source2.	
Syntax	:MEASure:LRFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LRFDelay? -4.99E-6</pre> Select channel 1 and 2 as delay source1/2, and then measure LRF.	

3-9-35. :MEASure:LFRDelay

→(Query)

Description	Returns the delay between the first falling edge of source1 and the last rising edge of source2.	
Syntax	:MEASure:LFRDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LFRDelay? -9.99E-6</pre> Select channel 1 and 2 as delay source1/2, and then measure LFR.	

3-9-36. :MEASure:LFFDelay

→(Query)

Description	Returns the delay between the first falling edge of source1 and the last falling edge of source2.	
Syntax	:MEASure:LFFDelay{?}	
Related Commands	:MEASure:SOURce<X>	
Return parameter	<NR3>	Returns the delay.
	Chan Off	Indicates the source channel is not activated.
Note	Select the two source channels before entering this command.	
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:LFFDelay? -9.99E-6</pre> Select channel 1 and 2 as delay source1/2, and then measure LFF.	

3-9-37. :MEASure:PHAse




Description	Returns the phase between source 1 and source 2.				
Syntax	:MEASure:PHAse{?}				
Related Commands	:MEASure:SOURce<X>				
Return parameter	<table border="0"> <tr> <td><NR3></td> <td>Returns the phase difference.</td> </tr> <tr> <td>Chan Off</td> <td>Indicates the source channel is not activated.</td> </tr> </table>	<NR3>	Returns the phase difference.	Chan Off	Indicates the source channel is not activated.
<NR3>	Returns the phase difference.				
Chan Off	Indicates the source channel is not activated.				
Note	Select the two source channels before entering this command.				
Example	<pre>:MEASure:SOURce1 CH1 :MEASure:SOURce2 CH2 :MEASure:PHAse? 4.50E+01</pre> <p>Select channel 1 and 2 as phase source1/2, and then measure the phase in degrees.</p>				

3-10. Measurement Commands


3-10-1. :MEASUREMENT:MEAS<X>:SOURCE<X>	64
3-10-2. :MEASUREMENT:MEAS<X>:TYPe	65
3-10-3. :MEASUREMENT:MEAS<X>:STATE	65
3-10-4. :MEASUREMENT:MEAS<X>:VALue	66
3-10-5. :MEASUREMENT:MEAS<X>:MAXimum	66
3-10-6. :MEASUREMENT:MEAS<X>:MEAN	67
3-10-7. :MEASUREMENT:MEAS<X>:MINimum	67
3-10-8. :MEASUREMENT:MEAS<X>:STDdev	68
3-10-9. :MEASUREMENT:STATISTICS:MODE	68
3-10-10. :MEASUREMENT:STATISTICS:WEighting	68
3-10-11. :MEASUREMENT:STATISTICS	69

3-10-1. :MEASUREMENT:MEAS<X>:SOURCE<X>

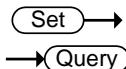


Description	Sets or queries the measurement source for a selected automatic measurement. This is a statistics related command.	
Syntax	:MEASUREMENT:MEAS<X>:SOURCE<X> { CH1 CH2 CH3 CH4 MATH D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Related commands	:MEASUREMENT:MEAS<X>:TYPE	
Parameter	MEAS<X>	The automatic measurement number from 1 to 8.
	SOURCE<X>	SOURCE1: the source for all single channel measurements.
	SOURCE<X>	SOURCE2: the source for all delay or phase measurements.
	CH1 to CH4	Channel 1, 2, 3, 4
	MATH	Math source
	D0 to D15	Digital channel sources D0 to D15
Return parameter	CH1 to CH4	Channel 1, 2, 3, 4
	MATH	Math source
	D0 to D15	Digital channel sources D0 to D15
Example	:MEASUREMENT:MEAS1:SOURCE1 CH1 Returns the (first) source for measurement 1.	

3-10-2. :MEASUREMENT:MEAS<X>:TYPE

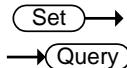

Description	Sets or queries the measurement type for a selected automatic measurement. This is a statistics related command.
Syntax	:MEASUREMENT:MEAS<X>:TYPE {PK2pk MAXimum MINimum AMPlitude HIGH LOW MEAN CMEan RMS CRMs AREa CAREa ROVShoot FOVShoot RPReShoot FPReShoot FREQuency PERIod RISe FALL PWlDth NWlDth PDUTy PPULSE NPULSE PEDGE NEDGE FRRDelay FRFDelay FFRDelay FFFDelay LRRDelay LRFDelay LFRDelay LFFDelay PHAsE ?}
Related commands	:MEASUREMENT:MEAS<X>:SOURCE<X>
Parameter	MEAS<X> The automatic measurement number from 1 to 8.
Return parameter	Returns the measurement type
Example	:MEASUREMENT:MEAS1:TYPE RMS Sets measurement 1 to RMS measurement.

3-10-3. :MEASUREMENT:MEAS<X>:STATE

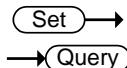

Description	Sets or queries the state of a selected measurement. This is a statistics related command.
Syntax	:MEASUREMENT:MEAS<X>:STATE { ON OFF 1 0 ? }
Related commands	:MEASUREMENT:MEAS<X>:SOURCE<X> :MEASUREMENT:MEAS<X>:TYPE
Parameter	MEAS<X> The automatic measurement number from 1 to 8. ON/1 Turn the measurement on. OFF/0 Turn the measurement off.
Return parameter	0 Measurement is off. 1 Measurement is on.
Example	:MEASUREMENT:MEAS1:STATE 1 Turns measurement 1 on.

3-10-4. :MEASUREMENT:MEAS<X>:VALUE

→Query

Description	Returns the measurement results for the selected measurement. This is a statistics related command.
Syntax	:MEASUREMENT:MEAS<X>:VALUE?
Related Commands	:MEASure:SOURce<X>
Return parameter	MEAS<X> The automatic measurement number from 1 to 8.
Note	The measurement source(s), measurement number, measurement type and measurement state must first be set before a measurement result can be returned.
Example	:MEASUREMENT:MEAS1:SOURce1 CH1 :MEASUREMENT:MEAS1:TYPE PK2PK :MEASUREMENT:MEAS1:STATE ON :MEASUREMENT:MEAS1:VALUE? 5.000E+0 Selects channel 1 as the source for measurement 1, sets measurement 1 to peak to peak measurement and then turns on the measurement. The result returns the peak to peak measurement.

3-10-5. :MEASUREMENT:MEAS<X>:MAXimum

→Query

Description	Returns the maximum measurement results for the selected measurement from the last time the statistics were reset. This is a statistics related command.
Syntax	:MEASUREMENT:MEAS<X>:MAXimum?
Related Commands	:MEASUREMENT:STATIstics:MODe
Parameter	MEAS<X> The automatic measurement number from 1 to 8.
Example	:MEASUREMENT:MEAS3:SOURce1 CH1 :MEASUREMENT:MEAS3:TYPE PK2PK :MEASUREMENT:MEAS3:STATE ON :MEASUREMENT:STATIstics:MODe ON :MEASUREMENT:MEAS3:MAXimum? 2.800E-02 Returns the maximum measurement result for measurement number 3.

3-10-6. :MEASurement:MEAS<X>:MEAN

→(Query)

Description	Returns the mean measurement results for the selected measurement from the last time the statistics were reset. This is a statistics related command.
Syntax	:MEASurement:MEAS<X>:MEAN?
Related Commands	:MEASurement:STATIstics:MODe
Parameter	MEAS<X> The automatic measurement number from 1 to 8.
Example	:MEASurement:MEAS3:SOURce1 CH1 :MEASurement:MEAS3:TYPE PK2PK :MEASurement:MEAS3:STATE ON :MEASurement:STATIstics:MODe ON :MEASurement:MEAS3:MEAN? 2.090E-02 Returns the mean measurement result for measurement number 3.

3-10-7. :MEASurement:MEAS<X>:MINImum

→(Query)

Description	Returns the minimum measurement results for the selected measurement from the last time the statistics were reset. This is a statistics related command.
Syntax	:MEASurement:MEAS<X>:MINImum?
Related Commands	:MEASurement:STATIstics:MODe
Parameter	MEAS<X> The automatic measurement number from 1 to 8.
Example	:MEASurement:MEAS3:SOURce1 CH1 :MEASurement:MEAS3:TYPE PK2PK :MEASurement:MEAS3:STATE ON :MEASurement:STATIstics:MODe ON :MEASurement:MEAS3:MINImum? 1.600E-02 Returns the minimum measurement result for measurement number 3.

3-10-8. :MEASurement:MEAS<X>:STDdev

→(Query)

Description	Returns the standard deviation for the selected measurement from the last time the statistics were reset. This is a statistics related command.
Syntax	:MEASurement:MEAS<X>:STDdev?
Related Commands	:MEASurement:STATIstics:MODe
Parameter	MEAS<X> The automatic measurement number from 1 to 8.
Example	:MEASurement:MEAS3:SOURce1 CH1 :MEASurement:MEAS3:TYPe PK2PK :MEASurement:MEAS3:STATE ON :MEASurement:STATIstics:MODe ON :MEASurement:MEAS3:STDdev? 1.530E-03 Returns the standard deviation for measurement number 3.

3-10-9. :MEASurement:STATIstics:MODe

(Set) →
→(Query)

Description	Puts the statics measurement results on the display or queries whether the statics are displayed.
Syntax	:MEASurement:STATIstics:MODe {OFF ON ?}
Related commands	:MEASurement:STATIstics
Parameter/ Return parameter	ON Display the statics on the screen. OFF Remove the statics from the screen
Example	:MEASurement:STATIstics:MODe ON Displays statics on the screen.

3-10-10. :MEASurement:STATIstics:WElghting

(Set) →
→(Query)

Description	Sets and queries the number of samples used for the statics calculations.
Syntax	:MEASurement:STATIstics:WElghting { <NR1> ? }
Parameter/ Return parameter	<NR1> Number of samples (2~1000)
Example	:MEASurement:STATIstics:WElghting 5 Sets the number of samples to 5.

3-10-11. :MEASurement:STATIstics

(Set →)

Description	Resets the statics calculations. This command will clear all the currently accumulated measurements.
Syntax	:MEASurement:STATIstics RESET

3-11. Reference Commands

3-11-1. :REF<X>:DISPlay	69
3-11-2. :REF<X>:TIMEbase:POSIon.....	69
3-11-3. :REF<X>:TIMEbase:SCALe	70
3-11-4. :REF<X>:OFFSet.....	70
3-11-5. :REF<x>:SCALe	70

3-11-1. :REF<X>:DISPlay

(Set →)

→ (Query)

Description	Sets or queries a reference waveform to be shown on the display. A reference waveform must first be saved before this command can be used.						
Syntax	:REF<x>:DISPlay { OFF ON ? }						
Parameter	<table><tr><td><X></td><td>Reference waveform 1, 2, 3 ,4.</td></tr><tr><td>OFF</td><td>Turns the selected reference waveform off</td></tr><tr><td>ON</td><td>Turns the selected reference waveform on</td></tr></table>	<X>	Reference waveform 1, 2, 3 ,4.	OFF	Turns the selected reference waveform off	ON	Turns the selected reference waveform on
<X>	Reference waveform 1, 2, 3 ,4.						
OFF	Turns the selected reference waveform off						
ON	Turns the selected reference waveform on						
Return parameter	Returns the status of the selected reference waveform. (OFF, ON)						
Example	:REF1:DISPlay ON Turns on reference1 (REF 1) on the display.						


3-11-2. :REF<X>:TIMEbase:POSIon

(Set →)

→ (Query)


Description	Sets or returns the selected reference waveform time base position.				
Syntax	:REF<X>:TIMEbase:POSIon { <NRf> ?}				
Related commands	:REF<x>:DISPlay				
Parameter	<table><tr><td><X></td><td>Reference waveform 1, 2, 3 ,4.</td></tr><tr><td><NRf></td><td>Horizontal co-ordinates</td></tr></table>	<X>	Reference waveform 1, 2, 3 ,4.	<NRf>	Horizontal co-ordinates
<X>	Reference waveform 1, 2, 3 ,4.				
<NRf>	Horizontal co-ordinates				
Return parameter	<NR3> Returns the reference waveform position				
Example	:REF1:TIMEbase:POSIon -5.000E-5 Selects reference 1, and then sets the horizontal position to -50us.				

3-11-3. :REF<X>:TIMEbase:SCALE

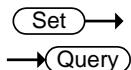


Description	Sets or returns the selected reference waveform time base scale.
Syntax	:REF<X>:TIMEbase:SCALE { <NRf> ?}
Related commands	:REF<X>:DISPLAY
Parameter	<X> Reference waveform 1, 2, 3 ,4. <NRf> Horizontal scale
Return parameter	<NR3> Returns the reference waveform scale.
Example	:REF1:TIMEbase:SCALE 5.00E-4 Selects reference 1, and then sets the horizontal scale to 500us/div.

3-11-4. :REF<X>:OFFSet

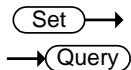

Description	Sets or returns the selected reference waveform vertical position (offset).
Syntax	:REF<X>:OFFSet { <NRf> ?}
Related commands	:REF<X>:DISPLAY
Parameter	<X> Reference waveform 1, 2, 3 ,4. <NRf> Vertical offset
Return parameter	<NR3> Returns the reference waveform vertical position.
Example	:REF1:OFFSet -5.000E-2 Selects reference 1, and then sets the vertical position to -50mV/mA.

3-11-5. :REF<x>:SCALE

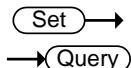

Description	Sets or returns the selected reference waveform vertical scale.
Syntax	:REF<x>:SCALE { <NRf> ?}
Related commands	:REF<x>:DISPLAY
Parameter	<X> Reference waveform 1, 2, 3 ,4. <NRf> Vertical scale
Return parameter	<NR3> Returns the reference waveform vertical scale.
Example	:REF1:SCALE 5.000E-2 Selects reference 1, and then sets the vertical scale to 50mV mA/div.

3-12. Run Command

3-12-1. :RUN	71
3-12-2. :STOP	71
3-12-3. :SINGLe	71
3-12-4. :FORCe	71

3-12-1. :RUN

 Set →

Description	The run command allows the oscilloscope to continuously make acquisitions (equivalent to pressing the Run key on the front panel).
Syntax	:RUN

3-12-2. :STOP

 Set →

Description	The stop command stops the oscilloscope making further acquisitions (equivalent to pressing the Stop key on the front panel).
Syntax	:STOP

3-12-3. :SINGLe

 Set →

Description	The single command allows the oscilloscope to capture a single acquisition when trigger conditions have been fulfilled (equivalent to pressing the Single key on the front panel).
Syntax	:SINGLe

3-12-4. :FORCe


 Set →

Description	The Force command forces an acquisition (equivalent to pressing the Force-Trig key on the front panel).
Syntax	:FORCe

3-13. Timebase Commands


3-13-1. :TIMEbase:EXPand	72
3-13-2. :TIMEbase:POSIon	72
3-13-3. :TIMEbase:SCALe	72
3-13-4. :TIMEbase:MODE	73
3-13-5. :TIMEbase:WINDOW:POSIon	73
3-13-6. :TIMEbase:WINDOW:SCALe	73

3-13-1. :TIMEbase:EXPand

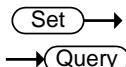


Description	Sets or queries the horizontal expansion mode. Requires the Horizontal Expansion app.	
Syntax	:TIMEbase:EXPand {CENTer TRIGger ?}	
Parameter/	CENTer	Expand from the center of the display.
Return parameter	TRIGger	Expand from the trigger point.
Example	:TIMEbase:EXPand TRIGger Sets the expansion point to the trigger point.	

3-13-2. :TIMEbase:POSIon

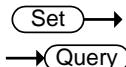


Description	Sets or queries the horizontal position.	
Syntax	:TIMEbase:POSIon {<NRf> ?}	
Parameter	<NRf>	Horizontal position
Return parameter	<NR3>	Returns the horizontal position.
Example	:TIMEbase:POSITION 5.00E-4 Sets the horizontal position as 500us.	

3-13-3. :TIMEbase:SCALe

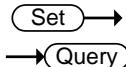


Description	Sets or queries the horizontal scale.	
Syntax	:TIMEbase:SCALe {<NRf> ?}	
Parameter	<NRf>	Horizontal scale
Return parameter	<NR3>	Returns the horizontal scale.
Example	:TIMEbase:SCALe 5.00E-2 Sets the horizontal scale to 50ms/div.	

3-13-4. :TIMEbase:MODE

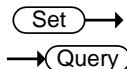


Description	Sets or queries the time base mode. The time base mode determines the display view window on the scope.	
Syntax	:TIMEbase:MODE {MAIN WINDOW XY ?}	
Parameter	MAIN	Sets the time base mode to the main screen.
	WINDOW	Sets the time base mode to the zoom window.
	XY	Sets the time base mode to the XY display.
Return parameter	Returns the time base mode (MAIN, WINDOW, XY)	
Example	:TIMEbase:MODE MAIN Sets the time base mode to the main mode.	

3-13-5. :TIMEbase:WINDOW:POSITION

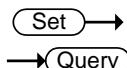

Description	Sets or queries the zoom horizontal position.	
Syntax	:TIMEbase:WINDOW:POSITION {<NRf> ?}	
Related commands	:TIMEbase:MODe	
Parameter	<NRf>	Horizontal position for zoom window
Return parameter	<NR3>	Returns the zoom horizontal position.
Example	:TIMEbase:WINDOW:POSITION 2.0E-3 Sets the zoom horizontal position as 20ms.	

3-13-6. :TIMEbase:WINDOW:SCALE

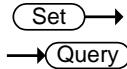

Description	Sets or queries the zoom horizontal scale.	
Note	If the oscilloscope is under "ZOOM" mode, the main timebase function will be disabled and cannot be modified.	
Syntax	:TIMEbase:WINDOW:SCALE {<NRf> ?}	
Related commands	:TIMEbase:MODe	
Parameter	<NRf>	Zoom horizontal scale. The range will depend on the time base.
Return parameter	<NR3>	Returns the zoom horizontal scale.
Example	:TIMEbase:WINDOW:SCALE 2.0E-3 Sets the zoom horizontal scale to 2ms.	

3-14. Trigger Commands

3-14-1. :TRIGger:FREQuency	75
3-14-2. :TRIGger:TYPE	76
3-14-3. :TRIGger:SOURce	76
3-14-4. :TRIGger:COUPLE	77
3-14-5. :TRIGger:NREJ	77
3-14-6. :TRIGger:REJect	77
3-14-7. :TRIGger:MODE	78
3-14-8. :TRIGger:HOLDoff	78
3-14-9. :TRIGger:LEVEL	78
3-14-10. :TRIGger:HLevel	79
3-14-11. :TRIGger:LLevel	79
3-14-12. :TRIGger:EDGE:SLOP	80
3-14-13. :TRIGger:DELay:SLOP	80
3-14-14. :TRIGger:DELay:TYPE	80
3-14-15. :TRIGger:DELay:TIME	81
3-14-16. :TRIGger:DELay:EVENT	81
3-14-17. :TRIGger:DELay:LEVEL	81
3-14-18. :TRIGger:PULSEWidth:POLarity	82
3-14-19. :TRIGger:RUNT:POLarity	82
3-14-20. :TRIGger:RUNT:WHEn	82
3-14-21. :TRIGger:RUNT:TIME	83
3-14-22. :TRIGger:RISEFall:SLOP	83
3-14-23. :TRIGger:RISEFall:WHEn	83
3-14-24. :TRIGger:RISEFall:TIME	84
3-14-25. :TRIGger:VIDeo:TYPE	84
3-14-26. :TRIGger:VIDeo:FIELD	84
3-14-27. :TRIGger:VIDeo:LINE	85
3-14-28. :TRIGger:VIDeo:POLarity	85
3-14-29. :TRIGger:PULSe:WHEn	85
3-14-30. :TRIGger:PULSE:TIME	86
3-14-31. :TRIGger:ALTernate	86
3-14-32. :TRIGger:STATE	86
3-14-33. :TRIGger:EXTERnal:PROBe:TYPE	87
3-14-34. :TRIGger:EXTERnal:PROBe:RATIO	87
3-14-35. :TRIGger:BUS:TYPE	87
3-14-36. :TRIGger:BUS:B1:I2C:CONDITION	88
3-14-37. :TRIGger:BUS:B1:I2C:ADDRESS:MODE	88
3-14-38. :TRIGger:BUS:B1:I2C:ADDRESS:TYPE	89
3-14-39. :TRIGger:BUS:B1:I2C:ADDRESS:VALue	89
3-14-40. :TRIGger:BUS:B1:I2C:ADDRESS:DIRECTION	90
3-14-41. :TRIGger:BUS:B1:I2C:DATA:SIZE	90
3-14-42. :TRIGger:BUS:B1:I2C:DATA:VALue	91
3-14-43. :TRIGger:BUS:B1:UART:CONDITION	91
3-14-44. :TRIGger:BUS:B1:UART:RX:DATA:SIZE	92
3-14-45. :TRIGger:BUS:B1:UART:RX:DATA:VALue	92
3-14-46. :TRIGger:BUS:B1:UART:TX:DATA:SIZE	93
3-14-47. :TRIGger:BUS:B1:UART:TX:DATA:VALue	93
3-14-48. :TRIGger:BUS:B1:SPI:CONDITION	94
3-14-49. :TRIGger:BUS:B1:SPI:DATA:SIZE	94
3-14-50. :TRIGger:BUS:B1:SPI:DATA:MISO:VALue	95
3-14-51. :TRIGger:BUS:B1:SPI:DATA:莫斯:VALue	96


3-14-52. :TRIGger:BUS:B1:PARallel:VALue.....	96
3-14-53. :TRIGger:LOGic:FUNCTION.....	97
3-14-54. :TRIGger:LOGic:INPut:CLOCK:SOURce	97
3-14-55. :TRIGger:LOGic:PATTern	98
3-14-56. :TRIGger:LOGic:PATTern:INPut:D<X>.....	98
3-14-57. :TRIGger:LOGic:PATTern:DELTatime.....	99
3-14-58. :TRIGger:LOGic:PATTern:WHEn	99
3-14-59. :TRIGger:TIMEOut:WHEn	100
3-14-60. :TRIGger:TIMEOut:TIMER	100
3-14-61. :TRIGger:BUS:B1:CAN:CONDITION	101
3-14-62. :TRIGger:BUS:B1:CAN:FRAMETYPE	101
3-14-63. :TRIGger:BUS:B1:CAN:IDentifier:MODE	102
3-14-64. :TRIGger:BUS:B1:CAN:IDentifier:VALue.....	102
3-14-65. :TRIGger:BUS:B1:CAN:IDentifier:DIRection.....	103
3-14-66. :TRIGger:BUS:B1:CAN:DATA:QUALifier	103
3-14-67. :TRIGger:BUS:B1:CAN:DATA:SIZE	104
3-14-68. :TRIGger:BUS:B1:CAN:DATA:VALue.....	104
3-14-69. :TRIGger:BUS:B1:LIN:CONDITION	105
3-14-70. :TRIGger:BUS:B1:LIN:DATA:QUALifier	106
3-14-71. :TRIGger:BUS:B1:LIN:DATA:SIZE	107
3-14-72. :TRIGger:BUS:B1:LIN:DATA:VALue.....	107
3-14-73. :TRIGger:BUS:B1:LIN:ERRTYPE	108
3-14-74. :TRIGger:BUS:B1:LIN:IDentifier:VALue.....	108

3-14-1. :TRIGger:FREQuency

→ **Query**


Description	Queries the trigger frequency.
Syntax	:TRIGger:FREQuency{?}
Return parameter	<NR3> Returns the trigger frequency.
Example	:TRIGger:FREQuency? 1.032E+3 Returns the trigger frequency.

3-14-2. :TRIGger:TYPE

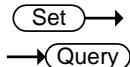


Description	Sets or queries the trigger type.	
Syntax	:TRIGger:TYPE {EDGE DELay PULSEWidth VIDeo RUNT RISEFall LOGic BUS TIMEOut ? }	
Parameter	EDGE DELay PULSEWidth VIDeo RUNT RISEFall LOGic BUS TIMEOut	Edge trigger Delay trigger Pulse width trigger Video trigger Runt trigger Rise and fall trigger Logic trigger Bus trigger Timeout trigger
Return parameter	Returns the trigger type.	
Example	:TRIGger:TYPE EDGE Sets the trigger type to edge.	

3-14-3. :TRIGger:SOURce

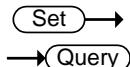


Description	Sets or queries the trigger source.	
Syntax	:TRIGger:SOURce { CH1 CH2 CH3 CH4 EXT LINe D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter	CH1 to CH4 EXT LINe D0 to D15	Channel 1 to channel 4 External source AC Line Digital channels 1 to 15
Return parameter	Returns the trigger source.	
Example	:TRIGger:SOURce CH1 Sets the trigger source to channel 1.	

3-14-4. :TRIGger:COUPLE

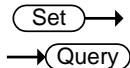


Description	Sets or queries the trigger coupling.
Note	Applicable for edge and delay triggers only.
Syntax	:TRIGger:COUPLE {AC DC ?}
Parameter	AC DC
Return parameter	Returns the trigger coupling.
Example	:TRIGger:COUPLE AC Sets the trigger coupling to AC.

3-14-5. :TRIGger:NREJ

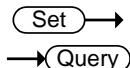


Description	Sets or queries noise rejection status.
Syntax	:TRIGger:NREJ {OFF ON ?}
Parameter	OFF Turns noise rejection off ON Turns noise rejection on
Return parameter	Returns the noise rejection status (ON, OFF).
Example	:TRIGger:NREJ ON Turns noise rejection on.

3-14-6. :TRIGger:REJect

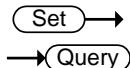


Description	Sets or queries the frequency rejection status.
Syntax	:TRIGger:REJect {OFF HF LF ?}
Parameter	OFF Frequency rejection off. HF High frequency filter on LF Low frequency filter on
Return parameter	Returns the status of the frequency filter.
Example	:TRIGger:REJect OFF Turns the frequency filter off.

3-14-7. :TRIGger:MODE

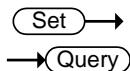


Description	Sets or queries the trigger mode.	
Syntax	:TRIGger:MODE {AUTo NORMAL ?}	
Parameter	AUTo	Auto trigger (Untriggered roll)
	NORMAL	Normal trigger
Return parameter	Returns the trigger mode.	
Example	:TRIGger:MODE NORMAL Sets the trigger mode to normal.	

3-14-8. :TRIGger:HOLDOff

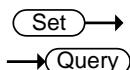


Description	Sets or queries the holdoff time.	
Syntax	:TRIGger:HOLDOff {<NRf> ?}	
Parameter	<NRf>	Holdoff time
Return parameter	<NR3>	Returns the trigger holdoff time.
Example	:TRIGger:HOLDOff 1.00E-8 Sets the trigger holdoff time to 10ns.	

3-14-9. :TRIGger:LEVel

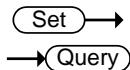


Description	Sets or queries the level.	
Syntax	:TRIGger:LEVel {TTL ECL SETTO50 <NRf> ?}	
Related commands	:TRIGger:TYPE	
Parameter	<NRf>	Trigger level value
	TTL	Sets the trigger level to TTL.
	ECL	Sets the trigger level to ECL.
	SETTO50	Sets the trigger level to the User level (50% by default).
Return parameter	<NR3>	Returns the trigger level.
Example1	:TRIGger:LEVel TTL Sets the trigger to TTL.	
Example2	:TRIGger:LEVel 3.30E-1 Sets the trigger level to 330mV/mA.	

3-14-10. :TRIGger:HLEVel

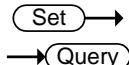


Description	Sets or queries the high trigger level.	
Note	Applicable for Rise and Fall/Pulse Runt triggers.	
Syntax	:TRIGger:HLEVel {TTL ECL} <NRf> ?	
Related commands	:TRIGger:TYPe	
Parameter	<NRf>	High level value. TTL Sets the high trigger level to TTL. ECL Sets the high trigger level to ECL.
Return parameter	<NR3>	Returns the trigger high level.
Example1	:TRIGger:HLEVel TTL Sets the trigger high level to TTL.	
Example2	:TRIGger:HLEVel 3.30E-1 Sets the trigger high level to 330mV/mA.	

3-14-11. :TRIGger:LLEVel

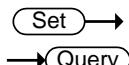


Description	Sets or queries the low trigger level.	
Note	Applicable for Rise and Fall/Pulse Runt triggers.	
Syntax	:TRIGger:LLEVel {TTL ECL} <NRf> ?	
Related commands	:TRIGger:TYPe	
Parameter	<NRf>	Low level value. TTL Sets the low trigger level to TTL. ECL Sets the log trigger level to ECL.
Return parameter	<NR3>	Returns the trigger low level.
Example1	:TRIGger:LLEVel TTL Sets the trigger low level to TTL.	
Example2	:TRIGger:LLEVel -3.30E-3 Sets the trigger low level to -330mV/mA.	

3-14-12. :TRIGger:EDGE:SLOP

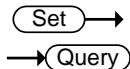


Description	Sets or queries the trigger slope.	
Syntax	:TRIGger:EDGE:SLOP {RISe FALL EITher ? }	
Related commands	:TRIGger:TYPE	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the trigger slope.	
Example	:TRIGger:EDGE:SLOP FALL Sets the trigger slope to falling.	

3-14-13. :TRIGger:DElay:SLOP

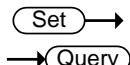


Description	Sets or queries the trigger slope for the delay trigger.	
Syntax	:TRIGger:DElay:SLOP {RISe FALL EITher ? }	
Related commands	:TRIGger:TYPE	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the trigger slope.	
Example	:TRIGger:DElay:SLOP FALL Sets the trigger slope to falling.	

3-14-14. :TRIGger:DElay:TYPE

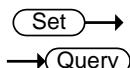


Description	Sets or queries the trigger delay type.	
Syntax	:TRIGger:DElay:TYPE {TIME EVENT ? }	
Related commands	:TRIGger:TYPE	
Parameter	TIME	Sets the delay type to time.
	EVENT	Sets the delay type to event.
Return parameter	Returns the trigger delay type.	
Example	:TRIGger:DElay:TYPE TIME Sets the delay type to time delay.	

3-14-15. :TRIGger:DELay:TIME

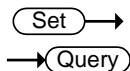


Description	Sets or queries the delay time value.
Syntax	:TRIGger:DELay:TIME {<NRf> ?}
Related commands	:TRIGger:DELay:TYPE
Parameter	<NRf> Delay time (1.00E-8~1.00E+1)
Return parameter	<NR3> Returns the delay time.
Example	:TRIGger:DELay:TIME 1.00E-6 Sets the delay time to 1us.

3-14-16. :TRIGger:DELay:EVENT

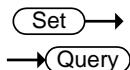


Description	Sets or queries the number of events for the event delay trigger.
Syntax	:TRIGger:DELay:EVENT {<NR1> ?}
Related commands	:TRIGger:DELay:TYPE
Parameter	<NR1> 1~65535 events
Return parameter	<NR1> Returns the number of events.
Example	:TRIGger:DELay:EVENT 2 Sets the number of events to 2.

3-14-17. :TRIGger:DELay:LEVel

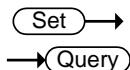


Description	Sets or queries the trigger delay level.
Syntax	:TRIGger:DELay:LEVel {<NRf> ?}
Parameter	<NRf> Delay trigger level
Return parameter	<NR3> Returns the delay trigger.
Example	:TRIGger:DELay:LEVel 5.00E-3 Sets the delay trigger to 5mV/mA.

3-14-18. :TRIGger:PULSEWidth:POLarity

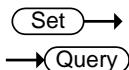


Description	Sets or queries the pulse width trigger polarity.	
Syntax	:TRIGger:PULSEWidth:POLarity { POSitive NEGative ? }	
Related commands	:TRIGger:TYPe	
Parameter	POSitive Positive polarity NEGative Negative polarity	
Return parameter	Returns the pulse width polarity.	
Example	:TRIGger:PULSEWidth:POLarity POSitive Sets the pulse width polarity to positive.	

3-14-19. :TRIGger:RUNT:POLarity

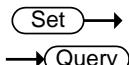


Description	Sets or queries the Pulse Runt trigger polarity.	
Syntax	:TRIGger:RUNT:POLarity { POSitive NEGative EITHER ? }	
Related commands	:TRIGger:TYPe	
Parameter	POSitive Positive polarity NEGative Negative polarity EITHER Positive or negative polarity	
Return parameter	Returns the pulse runt trigger polarity.	
Example	:TRIGger:RUNT:POLarity POSitive Sets the Pulse Runt trigger polarity to positive.	

3-14-20. :TRIGger:RUNT:WHEn

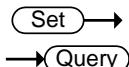


Description	Sets or queries the Pulse Runt trigger conditions.	
Syntax	:TRIGger:RUNT:WHEn { THAN LESSthan EQUAL UNEQual ? }	
Related commands	:TRIGger:TYPe :TRIGger:RUNT:TIME	
Parameter	THAN > LESSthan < EQUAL = UNEQual ≠	
Return parameter	Returns the pulse runt trigger condition.	
Example	:TRIGger:RUNT:WHEn UNEQual Sets the Pulse Runt trigger condition to unequal (≠).	

3-14-21. :TRIGger:RUNT:TIME

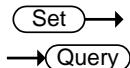


Description	Sets or queries the Pulse Runt trigger time.	
Syntax	:TRIGger:RUNT:TIME {<NRf> ? }	
Related commands	:TRIGger:TYPE :TRIGger:RUNT:WHEn	
Parameter	<NRf>	Pulse runt time (4nS to 10S)
Return Parameter	<NR3>	Returns the runt time in seconds.
Example	:TRIGger:RUNT:TIME 4.00E-5 Sets the runt time to 40.0uS.	

3-14-22. :TRIGger:RISEFall:SLOP

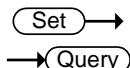


Description	Sets or queries the Rise & Fall slope.	
Syntax	:TRIGger:RISEFall:SLOP {RISe FALL EITher ? }	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITher	Either rising or falling slope
Return parameter	Returns the rise & fall slope.	
Example	:TRIGger:RISEFall:SLOP RISe Sets the Rise & Fall slope to rising.	

3-14-23. :TRIGger:RISEFall:WHEn

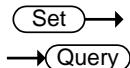


Description	Sets or queries the rise/fall trigger conditions	
Syntax	:TRIGger:RISEFall:WHEn { THAN LESSthan EQUAL UNEQual ? }	
Related commands	:TRIGger:TYPE :TRIGger:RISEFall:TIME	
Parameter	THAN	>
	LESSthan	<
	Equal	=
	UNEQual	≠
Return parameter	Returns the rise/fall trigger condition.	
Example	:TRIGger:RISEFall:WHEn UNEQual Sets the Rise and Fall trigger condition to unequal (#).	

3-14-24. :TRIGger:RISEFall:TIME

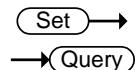


Description	Sets or queries the Rise and Fall time.	
Syntax	:TRIGger:RISEFall:TIME {<NRf> ? }	
Related commands	:TRIGger:TYPE :TRIGger:RISEFall:WHEn	
Parameter	<NRf>	Rise and Fall time (4nS to 10S)
Return Parameter	<NR3>	Returns the rise and fall time in seconds.
Example	:TRIGger:RISEFall:TIME 4.00E-5 Sets the trigger rise & fall to 40.0us.	

3-14-25. :TRIGger:VIDeo:TYPE

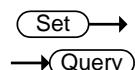


Description	Sets or queries the video trigger type.	
Syntax	:TRIGger:VIDeo:TYPE {NTSC PAL SECam ? }	
Related commands	:TRIGger:TYPE	
Parameter	NTSC	NTSC
	PAL	PAL
	SECam	SECAM
Return parameter	Returns the video trigger type.	
Example	:TRIGger:VIDeo:TYPE NTSC Sets the video trigger to NTSC.	

3-14-26. :TRIGger:VIDeo:FIELd

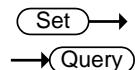


Description	Sets or queries the video trigger field.	
Syntax	:TRIGger:VIDeo:FIELd { FIELD1 FIELD2 ALLFields ALLLines ? }	
Related commands	:TRIGger:TYPE	
Parameter	FIELD1	Trigger on field 1
	FIELD2	Trigger on field 2
	ALLFields	Trigger on all fields
	ALLLines	Trigger on all lines
Return parameter	Returns the video trigger field.	
Example	:TRIGger:VIDeo:FIELd ALLFields Sets the video trigger to trigger on all fields.	

3-14-27. :TRIGger:VIDeo:LINE

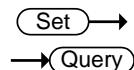


Description	Sets or queries the video trigger line.
Syntax	:TRIGger:VIDeo:LINE {<NR1> ?}
Related commands	:TRIGger:TYPE
Parameter	<NR1> Video line
Return parameter	<NR3> Returns the video trigger line.
Example	:TRIGger:VIDeo:LINE 1 Sets the video trigger to line 1.

3-14-28. :TRIGger:VIDeo:POLarity

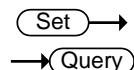


Description	Sets or queries the video trigger polarity.
Syntax	:TRIGger:VIDeo:POLarity { POSitive NEGative ? }
Related commands	:TRIGger:TYPE
Parameter	POSitive Positive polarity NEGative Negative polarity
Return parameter	Returns the video trigger polarity.
Example	:TRIGger:VIDeo:POLarity POSitive Sets the video trigger polarity to positive.

3-14-29. :TRIGger:PULSe:WHEn

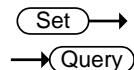


Description	Sets or queries the pulse width trigger conditions.
Syntax	:TRIGger:PULSe:WHEn { THAN LESSthan EQual UNEQual ? }
Related commands	:TRIGger:TYPE :TRIGger:PULSe:TIME
Parameter	THAN > LESSthan < EQual = UNEQual ≠
Return parameter	Returns the pulse width trigger conditions.
Example	:TRIGger:PULSe:WHEn UNEQual Sets the trigger pulse width conditions to not equal to (≠).

3-14-30. :TRIGger:PULSe:TIME

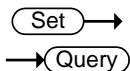

Description	Sets or queries the pulse width time.	
Syntax	:TRIGger:PULSe:TIME {<NRf> ?}	
Related commands	:TRIGger:TYPE :TRIGger:PULSe:WHEn	
Parameter	<NRf>	Pulse width time (4ns~10s)
Return parameter	<NR3>	Returns the pulse width time in seconds.
Example	:TRIGger:PULSe:TIME 4.00E-5 Sets the trigger pulse width to 40.0us.	

3-14-31. :TRIGger:ALTerNate

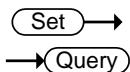


Description	Sets alternating between source triggers on or off or queries its state.	
Syntax	:TRIGger:ALTerNate {OFF ON ?}	
Parameter	OFF	Alternate off
	ON	Alternate on
Return parameter	Returns the Alternate trigger status (ON, OFF).	
Example	:TRIGger:ALTerNate ON Turns on alternating between source triggers.	

3-14-32. :TRIGger:STATe




Description	Returns the current state of the triggering system.	
Syntax	:TRIGger:STATe?	
Return parameter	*ARMED	Indicates that the oscilloscope is acquiring pretrigger information.
	*AUTO	Indicates that the oscilloscope is in the automatic mode and acquires data even in the absence of a trigger.
	*READY	Indicates that all pretrigger information has been acquired and that the oscilloscope is ready to accept a trigger.
	*SAVE	Indicates that the oscilloscope is in save mode and is not acquiring data.
	*TRIGGE R	Indicates that the oscilloscope triggered and is acquiring the post trigger information.
Example	:TRIGger:STATe? AUTO The trigger is in auto mode.	

3-14-33. :TRIGger:EXTERnal:PROBe:TYPE

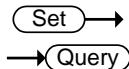

Description	Sets or queries the external probe type.	
Syntax	:TRIGger:EXTERnal:PROBe:TYPE { VOLtage CURRent ? }	
Related commands	:TRIGger:EXTERnal:PROBe:RATio	
Parameter	VOLtage	Voltage
	CURRent	Current
Return parameter	Returns the probe type.	
Example	:TRIGger:EXTERnal:PROBe:TYPE? CURRENT	

3-14-34. :TRIGger:EXTERnal:PROBe:RATio

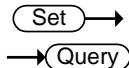


Description	Sets or queries the external probe ratio (attenuation).	
Syntax	:TRIGger:EXTERnal:PROBe:RATio { <NRf> ? }	
Related commands	:TRIGger:EXTERnal:PROBe:TYPE	
Parameter	<NRf>	External probe attenuation factor.
Return parameter	<NR3>	Returns the probe attenuation factor.
Example	:TRIGger:EXTERnal:PROBe:RATio? 5.00000e+01	

3-14-35. :TRIGger:BUS:TYPE




Description	Returns the current bus type.	
Syntax	:TRIGger:BUS:TYPE?	
Return parameter	I2C	I2C mode
	SPI	SPI mode
	UART	UART mode
	PARALLEL	Parallel mode
Example	:TRIGger:BUS:TYPE? UART	

3-14-36. :TRIGger:BUS:B1:I2C:CONDition

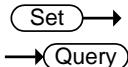


Description	Sets or queries the I ² C trigger conditions.	
Syntax	:TRIGger:BUS:B1:I2C:CONDition {START STOP REPEATstart ACKMISS ADDRess DATA ADDRANDDATA ? }	
Parameter	STARt	Set Start as the I ² C trigger condition.
	STOP	Set Stop as the I ² C trigger condition.
	REPEATstart	Set Repeat of Start as the I ² C trigger condition.
	ACKMISS	Set Missing Acknowledgement as the I ² C trigger condition.
	ADDRess	Set Address as the I ² C trigger condition.
	DATA	Set Data as the I ² C trigger condition.
Return parameter	ADDRANDDATA	Set Address and Data as the I ² C trigger condition.
Example	:TRIGger:BUS:B1:I2C:CONDition ADDRess Set Address as the I2C trigger condition.	

3-14-37. :TRIGger:BUS:B1:I2C:ADDRess:MODE

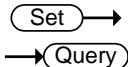


Description	Sets or queries the I ² C addressing mode (7 or 10 bits).	
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:MODE {ADDR7 ADDR10 ? }	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	ADDR7	7 bit addressing
	ADDR10	10 bit addressing
Return Parameter	0	7 bit addressing
	1	10 bit addressing
Example	:TRIGger:BUS:B1:I2C:ADDRess:MODE? 0 The addressing mode is current set to 7 bits.	

3-14-38. :TRIGger:BUS:B1:I2C:ADDRess:TYPE

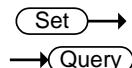


Description	Sets the I ² C bus address type, or queries what the setting is.	
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:TYPE {GENeralcall STARtbyte HSmode EEPROM CBUS ?}	
Related commands	:TRIGger:BUS:B1:I2C:CONDITION	
Parameter	GENeralcal l STARtbyte HSmode EEPROM CBUS	Set a general call address (0000 000 0). Set a start byte address. (0000 000 1) Set a high-speed mode address. (0000 1xx x) Set an EEPROM address. (1010 xxx x) Set a CBUS address. (0000 001 x)
Return Parameter	Returns the address type	
Example	:TRIGger:BUS:B1:I2C:ADDRess:TYPE? CBUS	

3-14-39. :TRIGger:BUS:B1:I2C:ADDRess:VALue

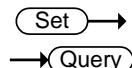


Description	Sets or queries the I ² C bus address value when the I ² C bus is set to trigger on Address or Address/Data.	
Syntax	:TRIGger:BUS:B1:I2C:ADDRess:VALue {string ?}	
Related commands	:TRIGger:BUS:B1:I2C:ADDRess:MODe	
Parameter	<string>	7/10 characters, must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the address value.	
Example1	:TRIGger:BUS:B1:I2C:ADDRess:VALue "xxx0101" Sets the address to XXX0101	
Example 2	:TRIGger:BUS:B1:I2C:ADDRess:VALue? XXX0101	

3-14-40. :TRIGger:BUS:B1:I2C:ADDRes:DIRection

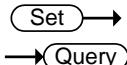


Description	Sets or queries the address bit as read write or don't care.	
Note	This setting only applies when the I ² C trigger is set to trigger on Address or Address/Data	
Syntax	:TRIGger:BUS:B1:I2C:ADDRes:DIRection { READ WRITE NOCARE ? }	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	READ	Set read as the data direction.
	WRITE	Set write as the data direction.
	NOCARE	Set either as the data direction.
Return Parameter	Returns the direction (READ, WRITE, NOCARE).	
Example	:TRIGger:BUS:B1:I2C:ADDRes:DIRection READ Sets the direction to READ.	

3-14-41. :TRIGger:BUS:B1:I2C:DATa:SIze

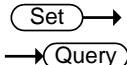


Description	Sets or queries the data size in bytes for the I ² C bus.	
Note	This setting only applies when the I ² C trigger is set to trigger on Data or Address/Data	
Syntax	:TRIGger:BUS:B1:I2C:DATa:SIze {<NR1> ? }	
Related commands	:TRIGger:BUS:B1:I2C:CONDition	
Parameter	<NR1>	Number of data bytes (1 to 5).
Return parameter	<NR1>	Returns the number of bytes.
Example	:TRIGger:BUS:B1:I2C:DATa:SIze 3 Sets the number of bytes to 3.	

3-14-42. :TRIGger:BUS:B1:I2C:DATa:VALue

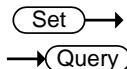


Description	Sets or queries the triggering data value for the I ² C bus when the I ² C bus is set to trigger on Data or Address/Data.	
Syntax	:TRIGger:BUS:B1:I2C:DATa:VALue {string ? }	
Related commands	:TRIGger:BUS:B1:I2C:DATa:SIZe	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example 1	:TRIGger:BUS:B1:I2C:DATa:SIZe 1 :TRIGger:BUS:B1:I2C:DATa:VALue "1x1x0101" Sets the value to XXX0101	
Example 2	:TRIGger:BUS:B1:I2C:DATa:VALue? 1X1X0101	

3-14-43. :TRIGger:BUS:B1:UART:CONDition

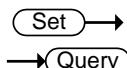


Description	Sets or queries the UART triggering condition.	
Syntax	:TRIGger:BUS:B1:UART:CONDition { RXSTArt RXDATA RXENDPacket TXSTArt TXDATA TXENDPacket TXPARItyerr RXPARItyerr ? }	
Parameter	RXSTArt RXDATA RXENDPacket RXPARItyerr TXSTArt TXDATA TXENDPacket TXPARItyerr	Set trigger on the RX Start Bit. Set trigger on RX Data. Set trigger on the RX End of Packet condition. Set trigger on RX Parity error condition. Set trigger on the TX Start Bit. Set trigger on TX Data. Set trigger on the TX End of Packet condition. Set trigger on TX Parity error condition.
Return Parameter	Returns the triggering condition.	
Example	:TRIGger:BUS:B1:UART:CONDition TXDATA Sets the UART bus to trigger on Tx Data.	

3-14-44. :TRIGger:BUS:B1:UART:RX:DATa:SIZE

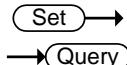


Description	Sets or queries the number of bytes for UART data.
Note	This setting only applies when the UART trigger is set to trigger on Rx Data
Syntax	:TRIGger:BUS:B1:UART:RX:DATa:SIZE {<NR1> ?}
Related commands	:TRIGger:BUS:B1:UART:CONDITION
Parameter	<NR1> Number of bytes (1 to 10).
Return parameter	<NR1> Returns the number of bytes.
Example	:TRIGger:BUS:B1:UART:RX:DATa:SIZE 5 Sets the number of bytes to 5.

3-14-45. :TRIGger:BUS:B1:UART:RX:DATa:VALUe

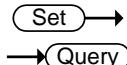


Description	Sets or queries the triggering data value for the UART bus when the bus is set to trigger on Rx Data.
Syntax	:TRIGger:BUS:B1:UART:RX:DATa:VALUe {string ? }
Related commands	:TRIGger:BUS:B1:UART:RX:DATa:SIZE
Parameter	<string> The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.
Example1	:TRIGger:BUS:B1:UART:CONDITION RXDATA :TRIGger:BUS:B1:UART:RX:DATa:SIZE 1 :TRIGger:BUS:B1:UART:RX:DATa:VALUe "1x1x0101" Sets the value to 1x1x0101
Example 2	:TRIGger:BUS:B1:UART:RX:DATa:VALUe? 1X1X0101

3-14-46. :TRIGger:BUS:B1:UART:TX:DATa:SIZE

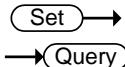


Description	Sets or queries the number of bytes for UART data.
Note	This setting only applies when the UART trigger is set to trigger on Tx Data
Syntax	:TRIGger:BUS:B1:UART:TX:DATa:SIZE {<NR1> ?}
Related commands	:TRIGger:BUS:B1:UART:CONDITION
Parameter	<NR1> Number of bytes (1 to 10).
Return parameter	<NR1> Returns the number of bytes.
Example	:TRIGger:BUS:B1:UART:TX:DATa:SIZE 5 Sets the number of bytes to 5.

3-14-47. :TRIGger:BUS:B1:UART:TX:DATa:VALUe

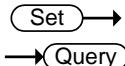


Description	Sets or queries the triggering data value for the UART bus when the bus is set to trigger on Tx Data.
Syntax	:TRIGger:BUS:B1:UART:TX:DATa:VALUe {string ?}
Related commands	:TRIGger:BUS:B1:UART:TX:DATa:SIZE
Parameter	<p><string></p> <p>The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string".</p> <p>x = don't care</p> <p>1 = binary 1</p> <p>0 = binary 0</p>
Return Parameter	Returns the data value.
Example1	<pre>:TRIGger:BUS:B1:UART:CONDITION TXDATA :TRIGger:BUS:B1:UART:TX:DATa:SIZE 1 :TRIGger:BUS:B1:UART:TX:DATa:VALUe "1x1x0101" Sets the value to 1x1x0101</pre>
Example 2	<pre>:TRIGger:BUS:B1:UART:TX:DATa:VALUe? 1X1X0101</pre>

3-14-48. :TRIGger:BUS:B1:SPI:CONDition

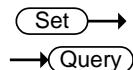


Description	Sets or queries the SPI triggering condition.	
Syntax	:TRIGger:BUS:B1:SPI:CONDition {SS MISO MOSI MISOMOSI ? }	
Parameter	SS	Set to trigger on the Slave Selection condition.
	MISO	Set to trigger on the Master-In Slave-Out condition.
	MOSI	Set to trigger on the Master-Out Slave-In condition.
	MISOMOSI	Set to trigger on the Master-In Slave-Out and Master-Out Slave-In conditions.
Return Parameter	Returns the triggering condition.	
Example	:TRIGger:BUS:B1:SPI:CONDition MISO Sets the SPI bus to trigger on MISO.	

3-14-49. :TRIGger:BUS:B1:SPI:DATa:SIze

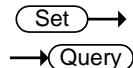


Description	Sets or queries the number of words for SPI data.	
Note	This setting only applies when the SPI trigger is set to trigger on MISO, MOSI or MISO/MOSI	
Syntax	:TRIGger:BUS:B1:SPI:DATa:SIze {<NR1> ? }	
Related commands	:TRIGger:BUS:B1:SPI:CONDition	
Parameter	<NR1>	Number of words (1 to 32).
Return parameter	<NR1>	Returns the number of words.
Example	:TRIGger:BUS:B1:SPI:DATa:SIze 10 Sets the number of words to 10.	

3-14-50. :TRIGger:BUS:B1:SPI:DATa:MISO:VALue

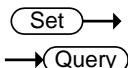


Description	Sets or queries the triggering data value for the SPI bus when the bus is set to trigger on MISO or MISO/MOSI.	
Syntax	:TRIGger:BUS:B1:SPI:DATa:MISO:VALue {string ? }	
Related commands	:TRIGger:BUS:B1:SPI:DATa:SIZe	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:SPI:CONDition MISO :TRIGger:BUS:B1:SPI:DATa:SIZe 2 :TRIGger:BUS:B1:SPI:DATa:MISO:VALue "1x1x0101" Sets the value to 1x1x0101	
Example 2	:TRIGger:BUS:B1:SPI:DATa:MISO:VALue? 1X1X0101	

3-14-51. :TRIGger:BUS:B1:SPi:DATa:MOSi:VALUe

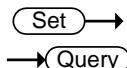


Description	Sets or queries the triggering data value for the SPI bus when the bus is set to trigger on MOSI or MISO/MOSI.	
Syntax	:TRIGger:BUS:B1:SPi:DATa:MOSi:VALUe {string ? }	
Related commands	:TRIGger:BUS:B1:SPi:DATa:SIZE	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:TRIGger:BUS:B1:SPi:CONDition MOSI :TRIGger:BUS:B1:SPi:DATa:SIZE 2 :TRIGger:BUS:B1:SPi:DATa:MOSi:VALUe "1x1x0101" Sets the value to 1x1x0101	
Example2	:TRIGger:BUS:B1:SPi:DATa:MOSi:VALUe? 1X1X0101	

3-14-52. :TRIGger:BUS:B1:PARallel:VALUe

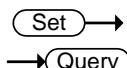


Description	Sets or queries the triggering data value for the Parallel bus.	
Syntax	:TRIGger:BUS:B1:PARallel:VALUe {string ? }	
Related commands	:BUS1:PARallel:WIDth	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	:BUS1:PARallel:WIDth 8 :TRIGger:BUS:B1:PARallel:VALUe "1x1x0101" Sets the value to 1x1x0101	
Example 2	:TRIGger:BUS:B1:PARallel:VALUe? 1X1X0101	

3-14-53. :TRIGger:LOGic:FUNCtion

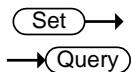

Description	Sets or queries the Boolean logical for the logic trigger. Requires the Advanced Logic app.								
Syntax	:TRIGger:LOGic:FUNCtion {AND NAND NOR OR ?}								
Related commands	:TRIGger:LOGic:PATtern:INPut:D<X>								
Parameter/Return parameter	<table> <tr> <td>AND</td> <td>AND logic trigger</td> </tr> <tr> <td>NAND</td> <td>NAND logic trigger</td> </tr> <tr> <td>NOR</td> <td>NOR logic trigger</td> </tr> <tr> <td>OR</td> <td>OR logic trigger</td> </tr> </table>	AND	AND logic trigger	NAND	NAND logic trigger	NOR	NOR logic trigger	OR	OR logic trigger
AND	AND logic trigger								
NAND	NAND logic trigger								
NOR	NOR logic trigger								
OR	OR logic trigger								
Example1	TRIGger:LOGic:FUNCtion AND Sets the logic function to AND.								

3-14-54. :TRIGger:LOGic:INPut:CLOCK:SOURce

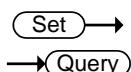


Description	Sets or queries which channel is used as the clock source.				
Note	When "NONE" is selected as the clock source the trigger will use the Pattern trigger type. (This is the equivalent of the Data trigger on the scope panel)				
Syntax	:TRIGger:LOGic:INPut:CLOCK:SOURce {NONE D0 D1 D2 D3 D4 D5 D6 D7 D8 D 9 D10 D11 D12 D13 D14 D15 ? }				
Related commands	:TRIGger:LOGic:INPut:CLOCK:SOURce :TRIGger:LOGic:INPut:CLOCK:EDGe				
Parameter/Return parameter	<table> <tr> <td>NONe</td> <td>No clock source, Set to pattern (data) trigger.</td> </tr> <tr> <td>D0 to D15</td> <td>Digital channels D0 to D15</td> </tr> </table>	NONe	No clock source, Set to pattern (data) trigger.	D0 to D15	Digital channels D0 to D15
NONe	No clock source, Set to pattern (data) trigger.				
D0 to D15	Digital channels D0 to D15				
Example1	:TRIGger:LOGic:INPut:CLOCK:SOURce D0 :TRIGger:LOGic:INPut:CLOCK:EDGe FALL				

3-14-55. :TRIGger:LOGic:PATtern




Description	Returns the conditions that are used to generate a logic pattern trigger with respect to the defined input pattern and identifies the time at which the selected pattern may be true and still generate a trigger.
Syntax	:TRIGger:LOGic:PATtern?
Return parameter	Returns a string containing the conditions for a logic pattern trigger.
Example	<pre>:TRIGger:LOGic:PATtern? :TRIGGER:LOGIC: PATTERN:INPUT:D0 X;D1 X;D2 X;D3 X;D4 X;D5 X;D6 X;D7 X;D8 X;D9 X; D10 X;D11 X;D12 X;D13 X;D14 X;D15 X;:TRIGGER:LOGIC: PATTERN:WHEN TRUE; :TRIGGER:LOGIC: PATTERN:DELTATIME 1.000e-08;</pre>

3-14-56. :TRIGger:LOGic:PATtern:INPut:D<X>

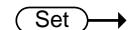


Description	Sets or queries the trigger logic for the selected digital input.	
Syntax	:TRIGger:LOGic:PATtern:INPut:D<X> { HIGH LOW X ? }	
Related commands	:TRIGger:LOGic:INPut:CLOCK:SOURce :TRIGger:LOGic:INPut:CLOCK:EDGE	
Parameter	<X>	X is the digital channel number D(0~15)
	HIGH	Set to a high logic state
	LOW	Set to a low logic state
	X	Set to a "don't care" state.
Return parameter	Returns the logic state of the selected channel (HIGH, LOW, X).	
Example1	<pre>:TRIGger:LOGic:PATtern:INPut:D0? X</pre>	

3-14-57. :TRIGger:LOGic:PATTern:DELTatime

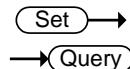

Description Sets or returns the pattern trigger delta time value.


Syntax :TRIGger:LOGic:PATTern:DELTatime {<NR3> | ? }

Related commands :TRIGger:LOGic:PATTern:WHEn

Parameter/Return parameter <NR3> Pattern trigger delta time in seconds.
(10nS to 10S)

Example :TRIGger:LOGic:PATTern:DELTatime?
8.960e-05

3-14-58. :TRIGger:LOGic:PATTern:WHEn

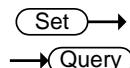

Description Sets or returns the pattern logic condition on which to trigger the oscilloscope.

Syntax :TRIGger:LOGic:PATTern:WHEn { TRUE | FALSE | LESSthan | THAN | Equal | UNEQual | ? }


Related commands :TRIGger:LOGic:PATTern:DELTatime

Parameter/ Return parameter	TRUE	Set true mode.
	FALSE	Set false mode.
	LESSTHAN	Set less than mode Is True < time period* *Set from :TRIGger:LOGic:PATTern:DELTatime
	MORETHAN	Set less than mode Is True > time period* *Set from :TRIGger:LOGic:PATTern:DELTatime
	EQUAL	Set less than mode Is True = time period* *Set from :TRIGger:LOGic:PATTern:DELTatime
UNEQUAL	UNEQUAL	Set less than mode Is True ≠ time period* *Set from :TRIGger:LOGic:PATTern:DELTatime
		Set less than mode Is True ≠ time period* *Set from :TRIGger:LOGic:PATTern:DELTatime

Example1 :TRIGger:LOGic:PATTern:WHEn FALSE
Set the logic to false.

Example2 :TRIGger:LOGic:PATTern:WHEn?
FALSE

3-14-59. :TRIGger:TIMEOut:WHEn

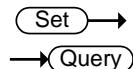

Description Sets or queries the timeout trigger condition.

Syntax :TRIGger:TIMEOut:WHEn {HIGH|LOW|EITHER|?}


Related commands :TRIGger:TIMEOut:TIMER

Parameter	HIGH	Signal is high.
	LOW	Signal is low.
	EITHER	Signal is high or low.

Return parameter Returns the timeout condition (HIGH, LOW, EITHER).

Example1 :TRIGger:TIMEOut:WHEn LOW
Sets the timeout condition to low.

3-14-60. :TRIGger:TIMEOut:TIMER

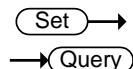

Description Sets or returns timeout trigger time.


Syntax :TRIGger:TIMEOut:TIMER {value | ?}

Related commands :TRIGger:TIMEOut:WHEn

Parameter/Return parameter <value> <NR3> Timeout time. (10nS to 10S).


Example :TRIGger:TIMEOut:TIMER?
8.960e-05

3-14-61. :TRIGger:BUS:B1:CAN:CONDition

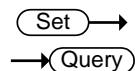


Description	Sets or returns the CAN trigger condition. Requirements:CAN LIN Bus Decoder App.	
Syntax	:TRIGger:BUS:B1:CAN:CONDition {SOF FRAMEmode Identifier DATA IDANDDATA EOF ACKMISS STUFFERR ?}	
Parameter/ Return parameter	SOF	Triggers on a start of frame
	FRAMEmode	Triggers on the type of frame
	Identifier	Triggers on a matching identifier
	DATA	Triggers on matching data
	IDANDDATA	Triggers on matching identifier and data field
	EOF	Triggers on the end of frame
	ACKMISS	Triggers on a missing acknowledge
	STUFFERR	Triggers on a bit stuffing error
Example1	:TRIGger:BUS:B1:CAN:CONDition SOF Triggers on a start of frame.	
Example2	:TRIGger:BUS:B1:CAN:CONDition? >SOF	

3-14-62. :TRIGger:BUS:B1:CAN:FRAMEmode

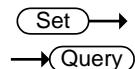


Description	Sets or returns the frame type for a CAN FRAMEmode trigger. Requirements:CAN LIN Bus Decoder App..	
Syntax	:TRIGger:BUS:B1:CAN:FRAMEmode {DATA REMote ERRor OVERLoad ?}	
Parameter/ Return parameter	DATA	Sets the frame type to data frame
	REMote	Sets the frame type to remote frame
	ERRor	Sets the frame type to error frame
	OVERLoad	Sets the frame type to overload
Example	:TRIGger:BUS:B1:CAN:FRAMEmode DATA Sets the frame type to DATA.	

3-14-63. :TRIGger:BUS:B1:CAN:IDentifier:MODe

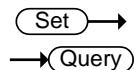


Description	Sets or returns the CAN addressing mode for the bus. Requirements:CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:CAN:IDentifier:MODe {STANDARD EXTended ?}
Parameter/ Return parameter	STANDARD Standard addressing mode EXTended Extended addressing mode
Example	:TRIGger:BUS:B1:CAN:IDentifier:MODe? >STANDARD Returns the addressing mode.

3-14-64. :TRIGger:BUS:B1:CAN:IDentifier:VALue

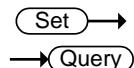


Description	Sets or returns the binary address string used for the CAN trigger. Note: Only applicable when the trigger condition is set to ID or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:CAN:IDentifier:VALue {<string> ?}
Related Commands	:TRIGger:BUS:B1:CAN:IDentifier:MODe
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:CAN:CONDition ID :TRIGger:BUS:B1:CAN:IDentifier:MODe STANDARD :TRIGger:BUS:B1:CAN:IDentifier:VALue "01100X1X01X" :TRIGger:BUS:B1:CAN:IDentifier:VALue? >01100X1X01X

3-14-65. :TRIGger:BUS:B1:CAN:IDentifier:DIRECTION

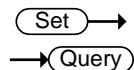


Description	Sets or queries the address bit as read, write or don't care. Requirements: CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:CAN:IDentifier:DIRECTION {READ WRITE NOCARE ?}
Parameter/ Return parameter	READ Sets read as the data direction WRITE Sets write as the data direction NOCARE Sets either as the data direction
Example1	:TRIGger:BUS:B1:CAN:IDentifier:DIRECTION? >WRITE
Example2	:TRIGger:BUS:B1:CAN:IDentifier:DIRECTION READ :TRIGger:BUS:B1:CAN:IDentifier:DIRECTION? > READ

3-14-66. :TRIGger:BUS:B1:CAN:DATa:QUALifier

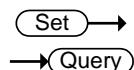


Description	Sets or returns the CAN data qualifier. Note: Only applicable when the triggering condition is set to DATA or IDANDDATA. Requirements: CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:CAN:DATa:QUALifier {LESSthan THAN EQual UNEQual LESSEQual MOREEqual ?}
Parameter/ Return parameter	LESSthan Triggers when the data is less than the qualifier value. THAN Triggers when the data is greater than the qualifier value. EQual Triggers when the data is equal to the qualifier value. UNEQual Triggers when the data is not equal to the qualifier value. LESSEQual Triggers when the data is less than or equal to the qualifier value. MOREEqual Triggers when the data is more than or equal to the qualifier value.
Example	:TRIGger:BUS:B1:CAN:DATa:QUALifier? >EQUAL :TRIGger:BUS:B1:CAN:DATa:QUALifier THAN :TRIGger:BUS:B1:CAN:DATa:QUALifier? >THAN

3-14-67. :TRIGger:BUS:B1:CAN:DATa:SIZe

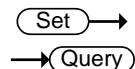


Description	Sets or returns the length of the data string in bytes for a CAN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:CAN:DATa:SIZe {<NR1> ?}
Parameter/ Return parameter	<NR1> 1~8 (bytes)
Example	:TRIGger:BUS:B1:CAN:DATa:SIZe? >1 :TRIGger:BUS:B1:CAN:DATa:SIZe 2 :TRIGger:BUS:B1:CAN:DATa:SIZe? >2

3-14-68. :TRIGger:BUS:B1:CAN:DATa:VALUe

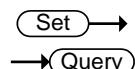


Description	Sets or returns the binary data string to be used for a CAN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Related Commands	:TRIGger:BUS:B1:CAN:DATa:SIZe
Syntax	:TRIGger:BUS:B1:CAN:DATa:VALUe {<string> ?}
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:CAN:DATa:SIZe 1 :TRIGger:BUS:B1:CAN:DATa:VALUe "01010X1X" :TRIGger:BUS:B1:CAN:DATa:VALUe? >01010X1X

3-14-69. :TRIGger:BUS:B1:LIN:CONDition

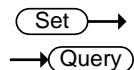


Description	Sets or returns the LIN trigger condition. Requirements: CAN LIN Bus Decoder App..	
Syntax	:TRIGger:BUS:B1:LIN:CONDition {SYNCField IDentifier DATA IDANDDATA WAKEup SLEEP ERRor ?}	
Parameter/ Return parameter	SYNCField	Sets the LIN trigger condition to the sync field.
	IDentifier	Sets the LIN trigger condition to identifier field.
	DATA	Sets the LIN trigger condition to the data field.
	IDANDDATA	Sets the LIN trigger condition to identifier and data field
	WAKEup	Sets the LIN trigger condition to wake up.
	SLEEP	Sets the LIN trigger condition to sleep.
	ERRor	Sets the LIN trigger condition to error.
Example	<pre>:TRIGger:BUS:B1:LIN:CONDition? >IDANDDATA :TRIGger:BUS:B1:LIN:CONDition DATA :TRIGger:BUS:B1:LIN:CONDition? >DATA</pre>	

3-14-70. :TRIGger:BUS:B1:LIN:DATa:QUALifier

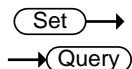


Description	<p>Sets or returns the LIN data qualifier.</p> <p>Note: Only applicable when the trigger condition is set to DATA or IDANDDATA.</p> <p>Requirements:CAN LIN Bus Decoder App..</p>																				
Syntax	<p>:TRIGger:BUS:B1:LIN:DATa:QUALifier {LESSthan THAN EQUAL UNEQual LESSEQual MOREEqual Qual?}</p>																				
Parameter/ Return parameter	<table> <tr> <td>LESSthan</td><td>Triggers when the data is less than the qualifier value.</td></tr> <tr> <td>THAN</td><td>Triggers when the data is greater than the qualifier value.</td></tr> <tr> <td>EQUAL</td><td>Triggers when the data is equal to the qualifier value.</td></tr> <tr> <td>UNEQual</td><td>Triggers when the data is not equal to the qualifier value.</td></tr> <tr> <td>LESSEQual</td><td>Triggers when the data is less than or equal to the qualifier value.</td></tr> <tr> <td>MOREEqual</td><td>Triggers when the data is more than or equal to the qualifier value.</td></tr> <tr> <td>LESSthan</td><td>Triggers when the data is less than the qualifier value.</td></tr> </table>							LESSthan	Triggers when the data is less than the qualifier value.	THAN	Triggers when the data is greater than the qualifier value.	EQUAL	Triggers when the data is equal to the qualifier value.	UNEQual	Triggers when the data is not equal to the qualifier value.	LESSEQual	Triggers when the data is less than or equal to the qualifier value.	MOREEqual	Triggers when the data is more than or equal to the qualifier value.	LESSthan	Triggers when the data is less than the qualifier value.
LESSthan	Triggers when the data is less than the qualifier value.																				
THAN	Triggers when the data is greater than the qualifier value.																				
EQUAL	Triggers when the data is equal to the qualifier value.																				
UNEQual	Triggers when the data is not equal to the qualifier value.																				
LESSEQual	Triggers when the data is less than or equal to the qualifier value.																				
MOREEqual	Triggers when the data is more than or equal to the qualifier value.																				
LESSthan	Triggers when the data is less than the qualifier value.																				
Example	<pre>:TRIGger:BUS:B1:LIN:DATa:QUALifier? >EQUAL :TRIGger:BUS:B1:LIN:DATa:QUALifier THAN :TRIGger:BUS:B1:LIN:DATa:QUALifier? >THAN</pre>																				

3-14-71. :TRIGger:BUS:B1:LIN:DATa:SIze

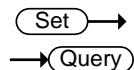


Description	Sets or returns the length of the data string in bytes for the LIN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:LIN:DATa:SIze {<NR1> ?}
Parameter/ Return parameter	<NR1> 1~8 (bytes)
Example	:TRIGger:BUS:B1:LIN:DATa:SIze? >1 :TRIGger:BUS:B1:LIN:DATa:SIze 2 :TRIGger:BUS:B1:LIN:DATa:SIze? >2

3-14-72. :TRIGger:BUS:B1:LIN:DATa:VALue

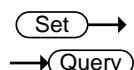


Description	Sets or returns the binary data string to be used for the LIN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Related Commands	:TRIGger:BUS:B1:LIN:DATa:SIze
Syntax	:TRIGger:BUS:B1:LIN:DATa:VALue {<string> ?}
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:LIN:DATa:SIze 1 :TRIGger:BUS:B1:LIN:DATa:VALue "01010X1X" :TRIGger:BUS:B1:LIN:DATa:VALue? >01010X1X

3-14-73. :TRIGger:BUS:B1:LIN:ERRTYPE

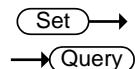

Description	Sets or returns the error type be used for the LIN trigger. Requirements:CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:LIN:ERRTYPE {SYNC PARIty CHECKsum ?}
Parameter/ Return parameter	SYNC Sets the LIN error type to SYNC. PARIty Sets the LIN error type to parity. CHECKsum Sets the LIN error type to checksum.
Example	:TRIGger:BUS:B1:LIN:ERRTYPE? >SYNC :TRIGger:BUS:B1:LIN:ERRTYPE CHECKSUM :TRIGger:BUS:B1:LIN:ERRTYPE? >CHECKSUM


3-14-74. :TRIGger:BUS:B1:LIN:IDentifier:VALue

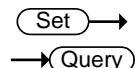

Description	Sets or returns the binary address string to be used for the LIN trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Syntax	:TRIGger:BUS:B1:LIN:IDentifier:VALue {<string> ?}
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:TRIGger:BUS:B1:LIN:CONDITION ID :TRIGger:BUS:B1:LIN:IDentifier:VALue "00X1X01X" :TRIGger:BUS:B1:LIN:IDentifier:VALue? >01100X1X01X


3-15. System Commands

3-15-1. :SYSTem:LOCK

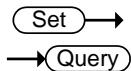

Description	Turns the panel lock on off.
Syntax	:SYSTem:LOCK {OFF ON ? }
Parameter	OFF System lock off ON System lock on
Return parameter	Returns the status of the panel lock (ON, OFF).
Example	:SYSTem:LOCK ON Turns the panel lock on.

3-15-2. :SYSTem:ERRor

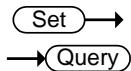

Description	Queries the error queue. See the appendix on page 188 for details.
Syntax	:SYSTem:ERRor?
Return parameter	Returns the last message in the error queue.
Example	:SYSTem:ERRor? +0, "No error."

3-16. Save/Recall Commands

3-16-1. :RECALL:SETUp.....	110
3-16-2. :RECALL:WAVEform.....	110
3-16-3. :SAVE:IMAGe.....	110
3-16-4. :SAVE:IMAGe:FILEFormat	111
3-16-5. :SAVE:IMAGe:INKSaver.....	111
3-16-6. :SAVE:SETUp	111
3-16-7. :SAVE:WAVEform	112
3-16-8. :SAVE:WAVEform:FILEFormat.....	113

3-16-1. :RECALL:SETUp

(Set →)

Description	Recalls setup settings from memory or USB.	
Syntax	:RECALL:SETUp {S1~S20 <file path>}("Disk:/xxx.SET", "USB:/xxx.SET")	
Parameter	S1~S20 <file path>	Recall Set1~Set20 Recall a file from the DSO internal files system or from a USB flash drive.
Example	<code>:RECALL:SETUp S1</code> Recalls setup setting S1 from memory. <code>:RECALL:SETUp "Disk:/DS0001.SET"</code> Recall setup setting DS0001.SET from system internal disk.	

3-16-2. :RECALL:WAVEform

(Set →)

Description	Recalls a waveform from wave1~wave20 or from file to REF1~4.	
Note	Only *.LSF files can be recalled using this command. .CSV files cannot be recalled.	
Syntax	:RECALL:WAVEform{W<n> <file path>}("Disk:/xxx.LSF", "USB:/xxx.LSF"),REF<X>	
Parameter	n xxx.LSF <X>	1~20 (Wave1~wave20) Filename in file path. 1,2,3,4 (REF1, REF2, REF3, REF4)
Example	<code>:RECALL:WAVEform W1, REF1</code> Recalls the waveform stored in Wave1 to reference 1.	

3-16-3. :SAVe:IMAGe

(Set →)

Description	Saves a screen image to the assigned file path with a specified filename.	
Syntax	:SAVe:IMAGe <file path> ("Disk:/xxx.PNG", "USB:/xxx.BMP")	
Related commands	:SAVe:IMAGe:FILEFormat :SAVe:IMAGe:INKSaver	
Parameter	xxx.PNG or File name (8 characters max) xxx.BMP	
Example	<code>:SAVe:IMAGe "Disk:/pic1.PNG"</code> Saves a screen image named pic1.png to the root directory (Disk:/) of the scope. <code>:SAVe:IMAGe "USB:/pic1.BMP"</code> Saves a screen image named pic1.bmp to the root directory of the external USB flash disk.	

3-16-4. :SAVe:IMAGe:FILEFormat

Set →
→ Query

Description	Sets the file format for image.	
Syntax	:SAVe:IMAGe:FILEFormat {PNG BMP ?}	
Related commands	:SAVe:IMAGe :SAVe:IMAGe:INKSaver	
Parameter	PNG	Sets the file format to PNG
	BMP	Sets the file format to BMP
Return parameter	Returns the file format (PNG, BMP).	
Example	:SAVe:IMAGe:FILEFormat PNG Sets the image file format to PNG.	

3-16-5. :SAVe:IMAGe:INKSaver

Set →
→ Query

Description	Turns Ink Saver on or off.	
Syntax	:SAVe:IMAGe:INKSaver {OFF ON ?}	
Related commands	:SAVe:IMAGe :SAVe:IMAGe:FILEFormat	
Parameter	OFF	Turns Inksaver off.
	ON	Turns Inksaver on.
Return parameter	Returns Ink Saver status (ON, OFF).	
Example	:SAVe:IMAGe:INKSaver ON Turns Ink Saver on.	

3-16-6. :SAVe:SETUp

Set →


Description	Saves the current setup to internal memory (Set1~Set20) or the designated file path.	
Syntax	:SAVe:SETUp {<file path> ("Disk:/xxx.SET", "USB:/xxx.SET") S1~S20}	
Parameter	S1~S20	Saves the setup to Set1~Set20
	File path	Saves the setup to disk to the specified file path.
Example	:SAVe:SETUp S1 Saves the current setup to Set1 in internal memory. :SAVe:SETUp "Disk:/DS0001.SET" Saves the current setup to DS0001.SET in the external USB flash disk.	

3-16-7. :SAVe:WAVEform

Description	Saves a waveform to internal memory or to a designated file path.										
Syntax	:SAVe:WAVEform {CH1~REF4, REF<X>} {CH1~REF4, W1~W20} {CH1~ALL, file path}										
Parameter	<table border="0"> <tr> <td>CH1~REF4,</td> <td>CH1~CH4, Math, REF1~4</td> </tr> <tr> <td><X></td> <td>1,2,3,4 (REF1, REF2, REF3, REF4)</td> </tr> <tr> <td>W1~W20</td> <td>Wave1~Wave20</td> </tr> <tr> <td>ALL</td> <td>All the displayed waveforms on screen.</td> </tr> <tr> <td>File path</td> <td>Saves the waveform(s) to disk or USB to the specified file path.</td> </tr> </table>	CH1~REF4,	CH1~CH4, Math, REF1~4	<X>	1,2,3,4 (REF1, REF2, REF3, REF4)	W1~W20	Wave1~Wave20	ALL	All the displayed waveforms on screen.	File path	Saves the waveform(s) to disk or USB to the specified file path.
CH1~REF4,	CH1~CH4, Math, REF1~4										
<X>	1,2,3,4 (REF1, REF2, REF3, REF4)										
W1~W20	Wave1~Wave20										
ALL	All the displayed waveforms on screen.										
File path	Saves the waveform(s) to disk or USB to the specified file path.										
Example	<p>:SAVe:WAVEform CH1, REF2 Saves the channel1 waveform to REF2.</p> <p>:SAVe:WAVEform ALL, "Disk:/ALL001" Creates a folder which named "ALL001" and saves all displayed waveforms to the "ALL001" directory in the LSF format.</p> <p>:SAVe:WAVEform ALL, "Disk:/ALL002" Save the all channels waveform to the root directory (Disk:/) of the internal flash disk in the CSV format.</p> <p>:SAVe:WAVEform CH2, "Disk:/DS0003.LSF" Save the channel 2's waveform to the root directory (Disk:/) of the internal flash disk in the LSF format.</p>										

Note: Only LSF file format can be recalled by scope using remote commands.


3-16-8. :SAVe:WAVEform:FILEFormat

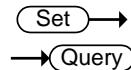

Description	Sets the waveform savefile format.		
Syntax	:SAVe:WAVEform:FILEFormat {LSF DCSV FCSV LMDCSV LMFCSV ?}		
Parameter	LSF	Sets the file format to the DCS-9700's internal file format, LSF. (xxx.LSF)(no support LA)	
	DCSV	Sets the file format to detail CSV. (xxx.CSV)	
	FCSV	Sets the file format to fast CSV. (xxx.CSV)	
	LMDCSV	Sets the file format to LM detail CSV. (xxx.CSV)	
	LMFCSV	Sets the file format to LM fast CSV. (xxx.CSV)	
Return parameter	Returns the file format (LSF , DCSV, FCSV , LMDCSV,LMFCSV).		
Example	:SAVe:WAVEform:FILEFormat LSF Sets the file format to LSF.		

3-17. Ethernet Commands

3-17-1. :ETHERnet:DHCP

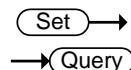

Description	Sets or queries the DHCP settings.		
Syntax	:ETHERnet:DHCP { OFF ON ? }		
Parameter	ON	Turns DHCP on.	
	OFF	Turns DHCP off.	
Example	:ETHERnet:DHCP ON Turns DHCP on.		

3-18. Time Commands

3-18-1. :DATE



Description	Sets the system date and time.		
Syntax	:DATE {string}		
Parameter	{string}	"YYYYMMDDhhmmss" YYYY: year,MM: month,DD: day hh: hour,mm: minute,ss: second	
Example	:date "20101202142830" Sets the time and date as: Year: 2010, Month: 12, Day: 02, Hour: 14 (2PM), Minute: 28, Second: 30.		

3-19. Bus Decode Commands

3-19-1. :BUS1	115
3-19-2. :BUS1:STATE	115
3-19-3. :BUS1:TYPe	115
3-19-4. :BUS1:I2C:ADDRess:RWINClude	116
3-19-5. :BUS1:I2C:SCLK:SOURce	116
3-19-6. :BUS1:I2C:SDA:SOURce	116
3-19-7. :BUS1:UART:BITRate	117
3-19-8. :BUS1:UART:PARIty	117
3-19-9. :BUS1:UART:PACKet	118
3-19-10. :BUS1:UART:EOFPACKet	118
3-19-11. :BUS1:UART:TX:SOURce	118
3-19-12. :BUS1:UART:RX:SOURce	119
3-19-13. :BUS1:SPI:SCLK:POLARity	119
3-19-14. :BUS1:SPI:SS:POLARity	119
3-19-15. :BUS1:SPI:WORDSize	120
3-19-16. :BUS1:SPI:BITORder	120
3-19-17. :BUS1:SPI:SCLK:SOURce	120
3-19-18. :BUS1:SPI:SS:SOURce	121
3-19-19. :BUS1:SPI:MOSI:SOURce	121
3-19-20. :BUS1:SPI:MISO:SOURce	121
3-19-21. :BUS1:PARallel:BIT<X>:SOURce	122
3-19-22. :BUS1:PARallel:CLOCK:EDGE	122
3-19-23. :BUS1:PARallel:CLOCK:SOURce	122
3-19-24. :BUS1:PARallel:WIDth	123
3-19-25. :BUS1:DISplay:FORMAT	123
3-19-26. :LISTER:DATA	123
3-19-27. :BUS1:CAN:SOURce	123
3-19-28. :BUS1:CAN:PROBe	124
3-19-29. :BUS1:CAN:SAMPLEpoint	124
3-19-30. :BUS1:CAN:BITRate	125
3-19-31. :BUS1:LIN:BITRate	125
3-19-32. :BUS1:LIN:IDFORmat	126
3-19-33. :BUS1:LIN:POLARity	126
3-19-34. :BUS1:LIN:SAMPLEpoint	126
3-19-35. :BUS1:LIN:SOURce	127
3-19-36. :BUS1:LIN:STANDARD	127

3-19-1. :BUS1

→Query

Description	Returns the supported BUS types.
Syntax	:BUS1?
Return Parameter	Returns the supported bus types.
Example	BUS1? I2C,SPI,UART,Parallel,CAN,LIN

3-19-2. :BUS1:STATE

Set →
→Query

Description	Sets or queries the state of the bus.	
Syntax	:BUS1:STATE { OFF ON ? }	
Related commands	:BUS1:TYPe	
Parameter/Return parameter	OFF	Turns the bus off.
	ON	Turns the bus on.
Example	:BUS1:STATE ON	Turns the bus on.

3-19-3. :BUS1:TYPe

Set →
→Query

Description	Sets or queries the type of bus.	
Syntax	:BUS1:TYPe { UART I2C SPI PARallel ? }	
Related commands	:BUS1:STATE	
Parameter/Return parameter	UART	Sets the bus to UART mode.
	I2C	Sets the bus to I ² C mode.
	SPI	Sets the bus to SPI mode.
	PARallel	Sets the bus to parallel mode.
	CAN	Sets the bus to CAN mode.
	LIN	Sets the bus to LIN mode.
Example	:BUS1:TYPe SPI	Sets the bus to SPI mode.

3-19-4. :BUS1:I2C:ADDRess:RWINclude

Set →
→ Query

Description	Sets or queries whether the read/write bit is included in the I ² C address.	
Syntax	:BUS1:I2C:ADDRess:RWINclude { OFF ON ? }	
Related commands	:BUS1:STATE	
Parameter	OFF	The R/W is not included.
	ON	The R/W is included.
Return parameter	0	The R/W is not included.
	1	The R/W is included.
Example	:BUS1:I2C:ADDRess:RWINclude ON Includes the R/W bit in the I ² C address.	

3-19-5. :BUS1:I2C:SCLK:SOURce

Set →
→ Query

Description	Sets or queries which channel is used for the I ² C SCLK source.	
Syntax	:BUS1:I2C:SCLK:SOURce { D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	D0 to D15	Digital channels D0 to D15
Example	:BUS1:I2C:SCLK:SOURce D0 Sets channel D0 as the SCLK source.	

3-19-6. :BUS1:I2C:SDA:SOURce

Set →
→ Query

Description	Sets or queries which channel is used for the I ² C SDA source.	
Syntax	:BUS1:I2C:SDA:SOURce { D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	D0 to D15	Digital channels D0 to D15
Example	:BUS1:I2C:SDA:SOURce D1 Sets channel D1 as the SDA source.	

3-19-7. :BUS1:UART:BITRate

Set →
→ Query

Description	Sets or queries the UART bit rate.				
Syntax	:BUS1:UART:BITRate {<NR1>} ?				
Parameter/Return parameter	<NR1>	UART bit rate (0~31)			
<NR1>	Rate (bps)	<NR1>	Rate (bps)		
0	50	16	15200		
1	75	17	19200		
2	110	18	28800		
3	134	19	31250		
4	150	20	38400		
5	300	21	56000		
6	600	22	57600		
7	1200	23	76800		
8	1800	24	115200		
9	2000	25	128000		
10	2400	26	230400		
11	3600	27	460800		
12	4800	28	921600		
13	7200	29	1382400		
14	9600	30	1843200		
15	14400	31	2764800		


Example	:BUS1:UART:BITRate 10
	Sets the bit rate to 2400.

3-19-8. :BUS1:UART:PARIty

Set →
→ Query


Description	Sets or queries the UART bus parity.	
Syntax	:BUS1:UART:PARIty { <NR1> ? }	
Parameter/Return parameter	<NR1>	
	0: None	
	1: Odd parity	
	2: Even parity	
Example	:BUS1:UART:PARIty 1	
	Sets the parity to odd.	

3-19-9. :BUS1:UART:PACKEt

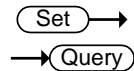


Description	Sets or queries the UART packet setting.
Syntax	:BUS1:UART:PACKEt {<NR1> ? }
Parameter/Return parameter	<NR1> 0: Off 1: On
Example	:BUS1:UART:PACKEt 1 Turns UART packets on.

3-19-10. :BUS1:UART:EOFPAcket

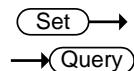


Description	Sets or queries the EOF character for the UART packet setting.
Syntax	:BUS1:UART:EOFPAcket <NR1>
Parameter/Return parameter	<NR1> 0: NULL 1: LF (line feed) 2: CR (carriage return) 3: SP (space character) 4: FF
Example	:BUS1:UART:EOFPAcket 2 Sets the OEF character to CR.

3-19-11. :BUS1:UART:TX:SOURce

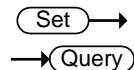


Description	Sets or queries which channel is used for the UART Tx source.
Syntax	:BUS1:UART:TX:SOURce { OFF D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }
Parameter/Return parameter	OFF Off, no Tx source D0 to D15 Digital channels D0 to D15
Example	:BUS1:UART:TX:SOURce D1 Sets channel D1 as the Tx source.

3-19-12. :BUS1:UART:RX:SOURce

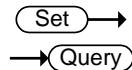


Description	Sets or queries which channel is used for the UART Rx source.	
Syntax	:BUS1:UART:RX:SOURce { OFF D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	OFF	Off, no Rx source
	D0 to D15	Digital channels D0 to D15
Example	:BUS1:UART:RX:SOURce D1 Sets channel D1 as the Rx source.	

3-19-13. :BUS1:SPI:SCLK:POLARity

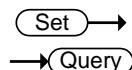


Description	Sets or queries the polarity of the SCLK line for the SPI bus.	
Syntax	:BUS1:SPI:SCLK:POLARity { FALL RISE ? }	
Parameter/Return parameter	FALL	Sets the polarity to falling edge.
	RISE	Sets the polarity to rising edge.
Example	:BUS1:SPI:SCLK:POLARity FALL Sets the polarity to falling edge.	

3-19-14. :BUS1:SPI:SS:POLARity

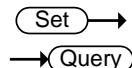


Description	Sets or queries the polarity of the SS line for the SPI bus.	
Syntax	:BUS1:SPI:SS:POLARity { LOW HIGH ? }	
Parameter/Return parameter	LOW	Active low polarity
	HIGH	Active high polarity
Example	:BUS1:SPI:SS:POLARity LOW Sets the SS line to active low.	

3-19-15. :BUS1:SPI:WORDSize

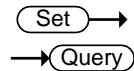


Description	Sets the number of bits per word for the SPI bus.
Syntax	:BUS1:SPI:WORDSize {<NR1> ? }
Parameter/Return parameter	<NR1> Bits per word (4~32)
Example	:BUS1:SPI:WORDSize 4 Sets the word size to 4 bits per word.

3-19-16. :BUS1:SPI:BITORder

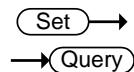


Description	Sets or queries the bit order for the SPI bus.
Syntax	:BUS1:SPI:BITORder {<NR1> ? }
Parameter/Return parameter	<NR1> 0: MSB bit first 1: LSB bit first
Example	:BUS1:SPI:BITORder? 0 The bit order is currently set as MSB bit first.

3-19-17. :BUS1:SPI:SCLK:SOURce

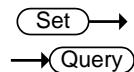


Description	Sets or queries which channel is used for the SPI SCLK source.
Syntax	:BUS1:SPI:SCLK:SOURce { D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }
Parameter/Return parameter	D0 to D15 Digital channels D0 to D15
Example	:BUS1:SPI:SCLK:SOURce D1 Sets channel D1 as the SPI SCLK source.

3-19-18. :BUS1:SPI:SS:SOURce

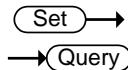


Description	Sets or queries which channel is used for the SPI SS source.	
Syntax	:BUS1:SPI:SS:SOURce { D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	D0 to D15	Digital channels D0 to D15
Example	:BUS1:SPI:SS:SOURce D0 Sets channel D0 as the SPI SS source.	

3-19-19. :BUS1:SPI:MOSI:SOURce

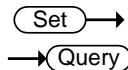


Description	Sets or queries which channel is used for the SPI MOSI source.	
Syntax	:BUS1:SPI:MOSI:SOURce { OFF D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	D0 to D15 OFF	Digital channels D0 to D15 No MOSI source.
Example	:BUS1:SPI:MOSI:SOURce D2 Sets channel D2 as the SPI MOSI source.	

3-19-20. :BUS1:SPI:MISO:SOURce

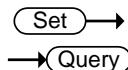


Description	Sets or queries which channel is used for the SPI MISO source.	
Syntax	:BUS1:SPI:MISO:SOURce { OFF D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	D0 to D15 OFF	Digital channels D0 to D15 No MISO source.
Example	:BUS1:SPI:MISO:SOURce D3 Sets channel D3 as the SPI MISO source.	

3-19-21. :BUS1:PARallel:BIT<X>:SOURce

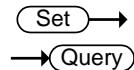


Description	Sets or queries which channels are assigned to what bits for the parallel bus.	
Syntax	:BUS1:PARallel:BIT<X>:SOURce{ D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	<X> D0 to D15	Bit number: 0~15 Digital channels D0 to D15
Example	:BUS1:PARallel:BIT0:SOURce D0 Assigns D0 to bit 0.	

3-19-22. :BUS1:PARallel:CLOCK:EDGE

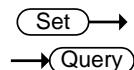


Description	Sets or queries the clock edge configuration for the parallel bus.	
Syntax	:BUS1:PARallel:CLOCK:EDGE { RISe FALL EITher OFF ? }	
Parameter/Return parameter	FALL RISe EITher OFF	Sets the clock edge to falling edge. Sets the clock edge to rising edge. Sets the clock edge to rising or falling. Disables the clock edge setting.
Example	:BUS1:PARallel:CLOCK:EDGE FALL Sets the clock edge to falling edge.	

3-19-23. :BUS1:PARallel:CLOCK:SOURce

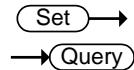


Description	Sets or queries which channels are assigned as the clock source.	
Syntax	:BUS1:PARallel:CLOCK:SOURce { D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	D0 to D15	Digital channels D0 to D15
Example	:BUS1:PARallel:CLOCK:SOURce D0 Assigns D0 as the clock source.	

3-19-24. :BUS1:PARallel:WIDth

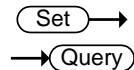

Description	Sets or queries the number of bits for the parallel bus.
Syntax	:BUS1:PARallel:WIDth {<NR1> ? }
Parameter/Return parameter	<NR1> 1~16
Example	:BUS1:PARallel:WIDth 16 Sets the width of the bus to 16 bits.

3-19-25. :BUS1:DISplay:FORMAT

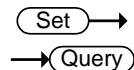


Description	Sets or queries the display format for the bus, either binary or hexadecimal.
Syntax	:BUS1:DISplay:FORMAT { BINary HEXadecimal ? }
Parameter/Return parameter	BINary Binary format HEXadecimal Hexadecimal format
Example	:BUS1:DISplay:FORMAT BINary Sets the display format to binary.

3-19-26. :LISTer:DATA




Description	Returns the Event Table data as a binary block data.
Syntax	:LISTer:DATA?
Return parameter	Returns the event table as binary block data. The binary block data contains comma separated data with new lines at the end of each row.

3-19-27. :BUS1:CAN:SOURce

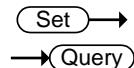

Description	Sets or returns the CAN input source. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:CAN:SOURce {D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }
Parameter/Return parameter	D0 ~ D15 Digital channel source.
Example	:BUS1:CAN:SOURCE? >D0 Returns the CAN source.

3-19-28. :BUS1:CAN:PROBe

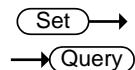


Description	Sets or returns the signal type of the CAN bus. Requirements:CAN LIN Bus Decoder App..	
Syntax	:BUS1:CAN:PROBe {CANH CANL TX RX ? }	
Parameter/Return parameter	CANH	CAN-High
	CANL	CAN-Low
	TX	Transmit
	RX	Receive
Example	<pre>:BUS1:CAN:PROBe? >CANH :BUS1:CAN:PROBe CANL :BUS1:CAN:PROBe? >CANL</pre>	

3-19-29. :BUS1:CAN:SAMPLEpoint




Description	Returns the sample point of the CAN bus. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:CAN:SAMPLEpoint?
Return Parameter	Returns the sample point of the CAN bus as a percentage of the bit time.
Example	<pre>:BUS1:CAN:SAMPLEpoint? 50 Returns the sample point as a percentage.</pre>

3-19-30. :BUS1:CAN:BITRate

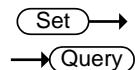


Description	Sets or returns the bit rate of the CAN bus. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:CAN:BITRate {RATE10K RATE20K RATE50K RATE125K RATE250K RATE500K RATE800K RATE1M ?}
Parameter/Return parameter	RATE10K 10 kbps RATE20K 20 kbps RATE50K 50 kbps RATE125K 125 kbps RATE250K 250 kbps RATE500K 500 kbps RATE800K 800 kbps RATE1M 1 Mbps
Example	:BUS1:CAN:BITRate? >RATE250K :BUS1:CAN:BITRate rate10k :BUS1:CAN:BITRate? >RATE10K

3-19-31. :BUS1:LIN:BITRate

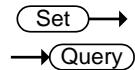


Description	Sets or returns the bit rate of the LIN bus. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:LIN:BITRate {<NR1> ?}
Parameter/Return parameter	<NR1> 1200, 2400, 4800, 9600, 10417, 19200
Example	:BUS1:LIN:BITRate 9600 Sets the LIN bit rate to 9600 bps.

3-19-32. :BUS1:LIN:IDFORmat

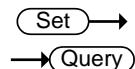

Description	Sets or returns the LIN ID format. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:LIN:IDFORmat {NOPARity PARIty ?}
Parameter/Return parameter	NOPARity No parity PARIty Parity
Example	:BUS1:LIN:IDFORmat? NOPARTY Returns the ID format.

3-19-33. :BUS1:LIN:POLARity

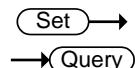

Description	Sets or returns the LIN polarity. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:LIN:POLARity {NORMAl INVerted ?}
Parameter/Return parameter	NORMAl Normal LIN polarity INVerted Inverted LIN polarity
Example	:BUS1:LIN:POLARity? NORMAL Returns the LIN polarity.

3-19-34. :BUS1:LIN:SAMPLEpoint



Description	Returns the sample point of the LIN bus. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:LIN:SAMPLEpoint?
Return Parameter	Returns the sample point of the LIN bus as a percentage of the bit rate.
Example	:BUS1:LIN:SAMPLEpoint? 50 Returns the sample point as a percentage.

3-19-35. :BUS1:LIN:SOURce

Set →
→ Query

Description	Sets or returns the LIN data source. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:LIN:SOURce {D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }
Parameter/Return parameter	D0 ~ D15 Digital channel source.
Example	:BUS1:LIN:SOURCE? >D0 Returns the LIN source.

3-19-36. :BUS1:LIN:STANDARD

Set →
→ Query

Description	Sets or returns the LIN standard. Requirements:CAN LIN Bus Decoder App..
Syntax	:BUS1:LIN:STANDARD {V1X V2X BOTH ? }
Parameter/Return parameter	V1X Lin standard version 1.x V2X Lin standard version 2.x BOTH Both standards
Example	:BUS1:LIN:STANDARD? >BOTH Returns the LIN standard.

3-20. Mark Commands

3-20-1. :MARK	128
3-20-2. :MARK:CREATE	128
3-20-3. :MARK:DELEte	128

3-20-1. :MARK

(Set →)

Description	Move to next or previous event mark.	
Syntax	:MARK { NEXT PREVIOUS }	
Related commands	:MARK:CREATE :MARK:DELEte	
Parameter	NEXT Move to next mark PREVIOUS Move to previous mark	
Example	:MARK NEXT Moves to the next event mark.	

3-20-2. :MARK:CREATE

(Set →)

Description	Creates a mark on the waveform at the current position or creates a mark for all the events for the current waveform.	
Syntax	:MARK:CREATE { CURREnt ALL }	
Related commands	:MARK :MARK:DELEte	
Parameter	CURREnt Creates a mark at the current position ALL Creates a mark for all the events.	
Example	:MARK:CREATE CURREnt Creates a mark at the current position.	

3-20-3. :MARK:DELEte

(Set →)

Description	Deletes the current mark or all the marks on a waveform.	
Syntax	:MARK:DELEte { CURREnt ALL }	
Related commands	:MARK :MARK:CREATE	
Parameter	CURREnt Deletes the current mark ALL Deletes all the marks.	
Example	:MARK:DELEte CURREnt Deletes the current mark.	

3-21. Search Commands

3-21-1. :SEARCH:COPY	130
3-21-2. :SEARCH:STATE	130
3-21-3. :SEARCH:TOTAL	130
3-21-4. :SEARCH:TRIGger:TYPE	131
3-21-5. :SEARCH:TRIGger:SOURce	131
3-21-6. :SEARCH:TRIGger:EDGE:SLOP	131
3-21-7. :SEARCH:TRIGger:LEVel	132
3-21-8. :SEARCH:TRIGger:HLEVel	132
3-21-9. :SEARCH:TRIGger:LLEVel	133
3-21-10. :SEARCH:TRIGger:PULSEWidth:POLarity	133
3-21-11. :SEARCH:TRIGger:RUNT:POLarity	133
3-21-12. :SEARCH:TRIGger:RISEFall:SLOP	134
3-21-13. :SEARCH:TRIGger:PULSe:WHEn	134
3-21-14. :SEARCH:TRIGger:PULSe:TIME	135
3-21-15. :SEARCH:TRIGger:RUNT:WHEn	135
3-21-16. :SEARCH:TRIGger:RUNT:TIME	135
3-21-17. :SEARCH:TRIGger:RISEFall:WHEn	136
3-21-18. :SEARCH:TRIGger:RISEFall:TIME	136
3-21-19. :SEARCH:TRIGger:LOGic:INPUT:CLOCK:SOURce	137
3-21-20. :SEARCH:TRIGger:LOGic:PATtern	137
3-21-21. :SEARCH:TRIGger:LOGic:PATtern:INPUT:D	138
3-21-22. :SEARCH:TRIGger:LOGic:PATtern:DELTatime	138
3-21-23. :SEARCH:TRIGger:LOGic:PATtern:WHEn	139
3-21-24. :SEARCH:TRIGger:BUS:TYPE	139
3-21-25. :SEARCH:TRIGger:BUS:B1:I2C:CONDITION	140
3-21-26. :SEARCH:TRIGger:BUS:B1:I2C:ADDRESS:MODE	140
3-21-27. :SEARCH:TRIGger:BUS:B1:I2C:ADDRESS:TYPE	141
3-21-28. :SEARCH:TRIGger:BUS:B1:I2C:ADDRESS:VALue	141
3-21-29. :SEARCH:TRIGger:BUS:B1:I2C:ADDRESS:DIRection	142
3-21-30. :SEARCH:TRIGger:BUS:B1:I2C:DATA:SIZE	142
3-21-31. :SEARCH:TRIGger:BUS:B1:I2C:DATA:VALue	143
3-21-32. :SEARCH:TRIGger:BUS:B1:UART:CONDITION	144
3-21-33. :SEARCH:TRIGger:BUS:B1:UART:RX:DATA:SIZE	144
3-21-34. :SEARCH:TRIGger:BUS:B1:UART:RX:DATA:VALue	145
3-21-35. :SEARCH:TRIGger:BUS:B1:UART:TX:DATA:SIZE	145
3-21-36. :SEARCH:TRIGger:BUS:B1:UART:TX:DATA:VALue	146
3-21-37. :SEARCH:TRIGger:BUS:B1:SPI:CONDITION	146
3-21-38. :SEARCH:TRIGger:BUS:B1:SPI:DATA:SIZE	147
3-21-39. :SEARCH:TRIGger:BUS:B1:SPI:DATA:MISO:VALue	147
3-21-40. :SEARCH:TRIGger:BUS:B1:SPI:DATA:莫斯I:VALue	148
3-21-41. :SEARCH:TRIGger:BUS:B1:PARallel:VALue	149
3-21-42. :SEARCH:TRIGger:BUS:B1:CAN:CONDition	150
3-21-43. :SEARCH:TRIGger:BUS:B1:CAN:FRAMEType	150
3-21-44. :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE	151
3-21-45. :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue	151
3-21-46. :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection	152
3-21-47. :SEARCH:TRIGger:BUS:B1:CAN:DATA:QUALifier	153
3-21-48. :SEARCH:TRIGger:BUS:B1:CAN:DATA:SIZE	153
3-21-49. :SEARCH:TRIGger:BUS:B1:CAN:DATA:VALue	154
3-21-50. :SEARCH:TRIGger:BUS:B1:LIN:CONDITION	155
3-21-51. :SEARCH:TRIGger:BUS:B1:LIN:DATA:QUALifier	156

3-21-52. :SEARCH:TRIGger:BUS:B1:LIN:DATA:sIze	157
3-21-53. :SEARCH:TRIGger:BUS:B1:LIN:DATA:vALue	158
3-21-54. :SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE	158
3-21-55. :SEARCH:TRIGger:BUS:B1:LIN:IDentifier:vALue	159

3-21-1. :SEARCH:COPY

 Set →

Description	Copies the search settings to the trigger settings or copies the trigger settings to the search settings.	
Syntax	:SEARCH:COPY {SEARCHtotrigger TRIGgertosearch}	
Parameter	SEARCHtotrigger	Copy the search setting to the trigger settings.
	TRIGgertosearch	Copy the trigger settings to the search settings.
Example	:SEARCH:COPY SEARCHtotrigger Copies the search settings to the trigger settings.	

3-21-2. :SEARCH:STATE

 Set →

 → Query


Description	Sets or queries whether the Search function is on or off.	
Syntax	:SEARCH:STATE { OFF ON ? }	
Parameter/ Return parameter	OFF	Turn the Search function on.
	ON	Turn the Search function off.
Example	:SEARCH:STATE ON Turn Search on.	

3-21-3. :SEARCH:TOTAL

 → Query


Description	Returns the total number of events found from the search function.	
Syntax	:SEARCH:TOTAL?	
Parameter	<NR1>	Number of events.
	Example	:SEARCH:TOTAL? 5

3-21-4. :SEARCH:TRIGger:TYPE

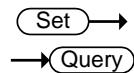


Description	Sets or queries the search trigger type.	
Syntax	:SEARCH:TRIGger:TYPE { EDGe PULSEWidth RUNT RISEFall LOGic BUS ? }	
Parameter/Return parameter	EDGe	Edge trigger
	PULSEWidth	Pulse width trigger
	RUNT	Runt trigger
	RISEFall	Rise and Fall trigger
	LOGic	Logic trigger
BUS	Bus trigger	
Example	:SEARCH:TRIGger:TYPE EDGE Sets the search trigger to the edge type.	

3-21-5. :SEARCH:TRIGger:SOURce

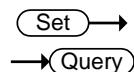


Description	Sets or queries the search trigger source.	
Syntax	:SEARCH:TRIGger:SOURce {CH1 CH2 CH3 CH4 D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 ? }	
Parameter/Return parameter	CH1 to CH4	Channel 1 to Channel 4
	D0 to D15	Digital channels D0 to D15
Example	:SEARCH:TRIGger:SOURce CH1 Sets the search trigger source as CH1.	

3-21-6. :SEARCH:TRIGger:EDGE:SLOP

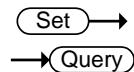


Description	Sets or queries the search trigger slope.	
Syntax	:SEARCH:TRIGger:EDGE:SLOP { RISe FALL EITHER ? }	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	RISe	Rising slope
	FALL	Falling slope
	EITHER	Either rising or falling slope
Return parameter	Returns the trigger slope.	
Example	:SEARCH:TRIGger:EDGE:SLOP FALL Sets the search trigger slope to falling.	

3-21-7. :SEARCH:TRIGger:LEVel

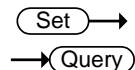


Description	Sets or queries the search trigger level.	
Syntax	:SEARCH:TRIGger:LEVel {TTL ECL SETTO50 <NRf> ?}	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	<NRf>	Trigger level value
	TTL	Sets the search trigger level to TTL.
	ECL	Sets the search trigger level to ECL.
	SETTO50	Sets the search trigger level to the User level (50% by default).
Return parameter	<NR3>	Returns the trigger.
Example1	:SEARCH:TRIGger:LEVel TTL Sets the search trigger level to TTL.	
Example2	:SEARCH:TRIGger:LEVel 3.30E-1 Sets the search trigger level to 330mV/mA.	

3-21-8. :SEARCH:TRIGger:HLEVel

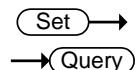


Description	Sets or queries the high level search trigger.	
Note	Applicable for Rise and Fall/Pulse Runt search triggers.	
Syntax	:SEARCH:TRIGger:HLEVel {TTL ECL <NRf> ?}	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	<NRf>	High level value.
	TTL	Sets the high level search trigger to TTL.
	ECL	Sets the high level search trigger to ECL.
Return parameter	<NR3>	Returns the high level search trigger.
Example1	:SEARCH:TRIGger:HLEVel TTL Sets the high level search trigger to TTL	
Example2	:SEARCH:TRIGger:HLEVel 3.30E-1 Sets the high level search trigger to 330mV/mA.	

3-21-9. :SEARCH:TRIGger:LLEVel

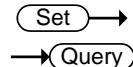


Description	Sets or queries the low level search trigger.	
Note	Applicable for Rise and Fall/Pulse Runt triggers.	
Syntax	:SEARCH:TRIGger:LLEVel {TTL ECL <NRf> ?}	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	<NRf>	Low level value.
	TTL	Sets the low trigger level to TTL.
	ECL	Sets the low trigger level to ECL.
Return parameter	<NR3>	Returns the low level.
Example	:SEARCH:TRIGger:LLEVel TTL Sets the low level search trigger to TTL.	
Example	:SEARCH:TRIGger:LLEVel -3.30E-3 Sets the low level search trigger to 330mV/mA.	

3-21-10. :SEARCH:TRIGger:PULSEWidth:POLarity

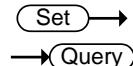


Description	Sets or queries the pulse width search trigger polarity.	
Syntax	:SEARCH:TRIGger:PULSEWidth:POLarity {POSitive NEGative ?}	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
Return parameter	Returns the pulse width polarity.	
Example	:SEARCH:TRIGger:PULSEWidth:POLarity POSitive Sets the pulse width polarity to positive.	

3-21-11. :SEARCH:TRIGger:RUNT:POLarity

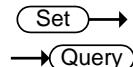


Description	Sets or queries the Pulse Runt search trigger polarity.	
Syntax	:SEARCH:TRIGger:RUNT:POLarity {POSitive NEGative EITHER ?}	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	POSitive	Positive polarity
	NEGative	Negative polarity
	EITHER	Positive or negative polarity
Return parameter	Returns the pulse runt search trigger polarity.	
Example	:SEARCH:TRIGger:RUNT:POLarity POSitive Sets the Pulse Runt search trigger polarity to positive.	

3-21-12. :SEARCH:TRIGger:RISEFall:SLOP

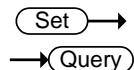


Description	Sets or queries the slope of the Rise and Fall search trigger.	
Syntax	:SEARCH:TRIGger:RISEFall:SLOP { RISe FALL EITHER ? }	
Related commands	:SEARCH:TRIGger:TYPE	
Parameter	RISe Rising slope FALL Falling slope EITHER Either rising or falling slope	
Return parameter	Returns the rise & fall slope.	
Example	:SEARCH:TRIGger:RISEFall :SLOP RISe Sets the Rise & Fall search trigger slope to rising.	

3-21-13. :SEARCH:TRIGger:PULSe:WHEn

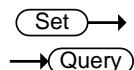


Description	Sets or queries the pulse width search trigger conditions.	
Syntax	:SEARCH:TRIGger:PULSe:WHEn { THAN LESSthan EQUAL UNEQual ? }	
Related commands	:SEARCH:TRIGger:TYPE :SEARCH:TRIGger:PULSe:TIME	
Parameter	THAN > LESSthan < EQUAL = UNEQual ≠	
Return parameter	Returns the pulse width search trigger conditions.	
Example	:SEARCH:TRIGger:PULSe:WHEn UNEQual Sets the pulse width search trigger conditions to not equal to (≠).	

3-21-14. :SEARCH:TRIGger:PULSe:TIME

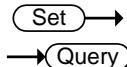


Description	Sets or queries the pulse width search trigger time.	
Syntax	:SEARCH:TRIGger:PULSe:TIME {<NRf> ?}	
Related commands	:SEARCH:TRIGger:TYPE :SEARCH:TRIGger:PULSe:WHEn	
Parameter	<NRf>	Pulse width time (4ns~10s)
Return parameter	<NR3>	Returns the pulse width time in seconds.
Example	:SEARCH:TRIGger:PULSe:TIME 4.00E-5 Sets the pulse width search trigger to 40.0us.	

3-21-15. :SEARCH:TRIGger:RUNT:WHEn

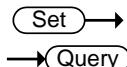


Description	Sets or queries the pulse runt search trigger conditions.	
Syntax	:SEARCH:TRIGger:RUNT:WHEn {THAN LESSthan EQUAL UNEQual ? }	
Related commands	:SEARCH:TRIGger:TYPE :SEARCH:TRIGger:RUNT:TIME	
Parameter	THAN	>
	LESSthan	<
	Equal	=
	UNEQual	#
Return parameter	Returns the pulse runt search trigger conditions.	
Example	:SEARCH:TRIGger:RUNT:WHEn UNEQual Sets the pulse runt search trigger condition to unequal (#).	

3-21-16. :SEARCH:TRIGger:RUNT:TIME

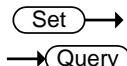


Description	Sets or queries the pulse runt search trigger time.	
Syntax	:SEARCH:TRIGger:RUNT:TIME {<NRf> ? }	
Related commands	:SEARCH:TRIGger:TYPE :SEARCH:TRIGger:RUNT:WHEn	
Parameter	<NRf>	Pulse runt time (4nS to 10S)
Return Parameter	<NR3>	Returns the runt time in seconds.
Example	:SEARCH:TRIGger:RUNT:TIME 4.00E-5 Sets the pulse runt time to 40.0uS.	

3-21-17. :SEARCH:TRIGger:RISEFall:WHEn

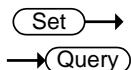


Description	Sets or queries the rise and fall search trigger conditions.
Syntax	:SEARCH:TRIGger:RISEFall:WHEn {THAn LESSthan EQUAL UNEQual ? }
Related commands	:SEARCH:TRIGger:TYPE :SEARCH:TRIGger:RISEFall:TIME
Parameter	THAn > LESSthan < EQUAL = UNEQual ≠
Return parameter	Returns the rise and fall search trigger condition.
Example	:SEARCH:TRIGger:RISEFall:WHEn UNEQual Sets the rise and fall search trigger condition to unequal (#).

3-21-18. :SEARCH:TRIGger:RISEFall:TIME

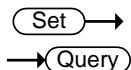

Description	Sets or queries the rise and fall time.
Syntax	:SEARCH:TRIGger:RISEFall:TIME {<NRf> ? }
Related commands	:SEARCH:TRIGger:TYPE :SEARCH:TRIGger:RISEFall:WHEn
Parameter	<NRf> Rise and Fall time (4nS to 10S)
Return Parameter	<NR3> Returns the rise and fall time in seconds.
Example	:SEARCH:TRIGger:RISEFall:TIME 4.00E-5 Sets the trigger rise and fall time to 40.0us.

3-21-19. :SEARCH:TRIGger:LOGic:INPut:CLOCK:SOURce

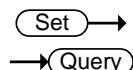


Description	Sets or queries which channel is used as the clock source for the logic search trigger.	
Note	When "NONE" is selected as the clock source, the trigger will use the Pattern search trigger type.	
Syntax	:SEARCH:TRIGger:LOGic:INPut:CLOCK:SOURce {NONE D0 D1 D2 D3 D4 D5 D6 D7 D8 D 9 D10 D11 D12 D13 D14 D15 ? }	
Related commands	:SEARCH:TRIGger:LOGic:INPut:CLOCK:SOURce	:SEARCH:TRIGger:LOGic:INPut:CLOCK:EDGE
Parameter/Return parameter	NONe	No clock source, Set to Pattern search trigger. D0 to D15 Digital channels D0 to D15
Example1	:SEARCH:TRIGger:LOGic:INPut:CLOCK:SOURce D0 :SEARCH:TRIGger:LOGic:INPut:CLOCK:EDGE FALL	

3-21-20. :SEARCH:TRIGger:LOGic:PATTern




Description	Returns the conditions that are used to generate a logic pattern search trigger with respect to the defined input pattern and identifies the time at which the selected pattern may be true and still generate a search trigger.
Syntax	:SEARCH:TRIGger:LOGic:PATTern?
Return parameter	Returns a string containing the conditions for a logic pattern search trigger.
Example	:SEARCH:TRIGger:LOGic:PATTern? :INPUT:D0 X;D1 X;D2 X;D3 X;D4 X;D5 X;D6 X;D7 X;D8 X;D9 X; D10 X;D11 X;D12 X;D13 X;D14 X;D15 X;;TRIGGER:LOGIC:PATTERN:WHEN TRUE; :TRIGGER:LOGIC:PATTERN:DELTATIME 1.000e-08;

3-21-21. :SEARCH:TRIGger:LOGic:PATTern:INPut:D

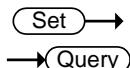


Description	Sets or queries the search trigger logic for the selected digital input.								
Syntax	:SEARCH:TRIGger:LOGic:PATTern:INPut:D<X> { HIGH LOW X ? }								
Parameter	<table> <tr> <td><X></td><td>X is the digital channel number D(0~15)</td></tr> <tr> <td>HIGH</td><td>Set to a high logic state</td></tr> <tr> <td>LOW</td><td>Set to a low logic state</td></tr> <tr> <td>X</td><td>Set to a "don't care" state.</td></tr> </table>	<X>	X is the digital channel number D(0~15)	HIGH	Set to a high logic state	LOW	Set to a low logic state	X	Set to a "don't care" state.
<X>	X is the digital channel number D(0~15)								
HIGH	Set to a high logic state								
LOW	Set to a low logic state								
X	Set to a "don't care" state.								
Return parameter	Returns the logic state of the selected channel (HIGH, LOW, X).								
Example1	:SEARCH:TRIGger:LOGic:PATTern:INPut:D0? X								

3-21-22. :SEARCH:TRIGger:LOGic:PATTern:DELTatime

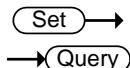

Description	Sets or returns the pattern search trigger delta time value.
Syntax	:SEARCH:TRIGger:LOGic:PATTern:DELTatime {<NR3> ? }
Related commands	:SEARCH:TRIGger:LOGic:PATTern:WHEn
Parameter/Return parameter	<NR3> Pattern search trigger delta time in seconds. (10nS to 10S)
Example	:SEARCH:TRIGger:LOGic:PATTern:DELTatime? 8.960e-05

3-21-23. :SEARCH:TRIGger:LOGic:PATTern:WHEn

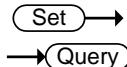


Description	Sets or returns the pattern logic condition on which to trigger the search.												
Syntax	:SEARCH:TRIGger:LOGic:PATTern:WHEn { TRUE FALSE LESSThan THAN Equal UNEQual ? }												
Related commands	:SEARCH:TRIGger:LOGic:PATTern:DELTatime												
Parameter/ Return parameter	<table border="1"> <tr> <td>TRUE</td> <td>Set true mode.</td> </tr> <tr> <td>FALSE</td> <td>Set false mode.</td> </tr> <tr> <td>LESSThan</td> <td>Set less than mode Is True < time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime</td> </tr> <tr> <td>MOREThan</td> <td>Set less than mode Is True > time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime</td> </tr> <tr> <td>EQUAL</td> <td>Set less than mode Is True = time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime</td> </tr> <tr> <td>UNEQUAL</td> <td>Set less than mode Is True ≠ time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime</td> </tr> </table>	TRUE	Set true mode.	FALSE	Set false mode.	LESSThan	Set less than mode Is True < time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime	MOREThan	Set less than mode Is True > time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime	EQUAL	Set less than mode Is True = time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime	UNEQUAL	Set less than mode Is True ≠ time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime
TRUE	Set true mode.												
FALSE	Set false mode.												
LESSThan	Set less than mode Is True < time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime												
MOREThan	Set less than mode Is True > time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime												
EQUAL	Set less than mode Is True = time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime												
UNEQUAL	Set less than mode Is True ≠ time period* *Set from :SEARCH:TRIGger:LOGic:PATTern :DELTatime												
Example1	:SEARCH:TRIGger:LOGic:PATTern:WHEn FALSE Set the logic to false.												
Example2	:SEARCH:TRIGger:LOGic:PATTern:WHEn? FALSE												

3-21-24. :SEARCH:TRIGger:BUS:TYPe




Description	Returns the current bus type.								
Syntax	:SEARCH:TRIGger:BUS:TYPe?								
Return parameter	<table border="1"> <tr> <td>I2C</td> <td>I2C mode</td> </tr> <tr> <td>SPI</td> <td>SPI mode</td> </tr> <tr> <td>UART</td> <td>UART mode</td> </tr> <tr> <td>PARALLEL</td> <td>Parallel mode</td> </tr> </table>	I2C	I2C mode	SPI	SPI mode	UART	UART mode	PARALLEL	Parallel mode
I2C	I2C mode								
SPI	SPI mode								
UART	UART mode								
PARALLEL	Parallel mode								
Example	:SEARCH:TRIGger:BUS:TYPe? UART								

3-21-25. :SEARCH:TRIGger:BUS:B1:I2C:CONDition

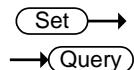


Description	Sets or queries the I ² C search trigger conditions.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:CONDition {START STOP REPEATstart ACKMISS ADDRess DATA ADDRANDDATA ? }	
Parameter	START	Set Start as the I ² C search trigger condition.
	STOP	Set Stop as the I ² C search trigger condition.
	REPEATstart	Set Repeat of Start as the I ² C search trigger condition.
	ACKMISS	Set Missing Acknowledgement as the I ² C search trigger condition.
	ADDRess	Set Address as the I ² C search trigger condition.
	DATA	Set Data as the I ² C search trigger condition.
	ADDRANDDATA	Set Address and Data as the I ² C search trigger condition.
Return parameter	Returns the I ² C bus search trigger condition.	
Example	:SEARCH:TRIGger:BUS:B1:I2C:CONDition ADDRess Set Address as the I ² C search trigger condition.	

3-21-26. :SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODE

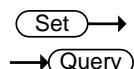


Description	Sets or queries the I ² C addressing mode (7 or 10 bits) for the search trigger.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODE {ADDR7 ADDR10 ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	ADDR7	7 bit addressing
	ADDR10	10 bit addressing
Return Parameter	0	7 bit addressing
	1	10 bit addressing
Example	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODE?	0
	The addressing mode is current set to 7 bits.	

3-21-27. :SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe

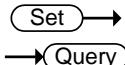


Description	Sets the I ² C bus address type, or queries what the setting is for the search trigger.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe {GENeralcall STARtbyte HSmode EEPROM CBUS ?}	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	GENeralcal	Set a general call address (0000 000 0).
	STARtbyte	Set a start byte address. (0000 000 1)
	HSmode	Set a high-speed mode address. (0000 1xx x)
	EEPROM	Set an EEPROM address. (1010 xxx x)
	CBUS	Set a CBUS address. (0000 001 x)
Return Parameter	Returns the address type	
Example	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:TYPe? CBUS	

3-21-28. :SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue

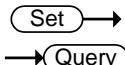


Description	Sets or queries the I ² C bus address value when the I ² C search trigger is set to trigger on Address or Address/Data.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue {string ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODE	
Parameter	<string>	7/10 characters, must be enclosed in double quotes "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the address value in binary.	
Example1	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:MODE ADDR7 :SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue "xxx0101" Sets the address to XXX0101	
Example 2	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:VALue? XXX0101	

3-21-29. :SEARCH:TRIGger:BUS:B1:I2C:ADDRess:DIRECTION

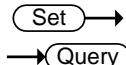


Description	Sets or queries the address bit as read write or don't care for the search function.	
Note	This setting only applies when the I ² C search trigger is set to trigger on Address or Address/Data	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:DIRECTION { READ WRITE NOCARE ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	READ Set read as the data direction. WRITE Set write as the data direction. NOCARE Set either as the data direction.	
Return Parameter	Returns the direction (READ, WRITE, NOCARE).	
Example	:SEARCH:TRIGger:BUS:B1:I2C:ADDRess:DIRECTION READ Sets the direction to READ.	

3-21-30. :SEARCH:TRIGger:BUS:B1:I2C:DATA:SIZE

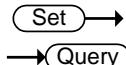


Description	Sets or queries the data size in bytes for the I ² C bus.	
Note	This setting only applies when the I ² C search trigger is set to trigger on Data or Address/Data	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:DATA:SIZE {<NR1> ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:CONDition	
Parameter	<NR1> Number of data bytes (1 to 5).	
Return parameter	<NR1> Returns the number of bytes.	
Example	:SEARCH:TRIGger:BUS:B1:I2C:DATA:SIZE 3 Sets the number of bytes to 3.	

3-21-31. :SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue

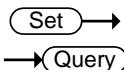


Description	Sets or queries the triggering data value for the I ² C bus when the I ² C search trigger is set to trigger on Data or Address/Data.	
Syntax	:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue {string ? }	
Related commands	:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIze	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	<pre>:SEARCH:TRIGger:BUS:B1:I2C:DATa:SIze 1 :SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue "1x1x0101"</pre> <p>Sets the value to XXX0101</p>	
Example 2	<pre>:SEARCH:TRIGger:BUS:B1:I2C:DATa:VALue? 1X1X0101</pre>	

3-21-32. :SEARCH:TRIGger:BUS:B1:UART:CONDition

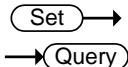


Description	Sets or queries the UART search triggering condition.	
Syntax	:SEARCH:TRIGger:BUS:B1:UART:CONDition { RXSTArt RXDATA RXENDPacket TXSTArt TXDATA TXENDPacket TXPARItyerr RXPARItyerr ? }	
Parameter	RXSTArt	Set search trigger on the RX Start Bit.
	RXDATA	Set search trigger on RX Data.
	RXENDPacket	Set search trigger on the RX End of Packet condition.
	RXPARItyerr	Set search trigger on RX Parity error condition.
	TXSTArt	Set search trigger on the TX Start Bit.
	TXDATA	Set search trigger on TX Data.
	TXENDPacket	Set search trigger on the TX End of Packet condition.
	TXPARItyerr	Set search trigger on TX Parity error condition.
Return Parameter	Returns the search triggering condition.	
Example	:SEARCH:TRIGger:BUS:B1:UART:CONDition TXDATA Sets the UART bus to trigger on Tx Data for the search function.	

3-21-33. :SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZE

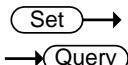


Description	Sets or queries the number of bytes for UART data.	
Note	This setting only applies when the UART search trigger is set to trigger on Rx Data	
Syntax	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZE {<NR1> ?}	
Related commands	:SEARCH:TRIGger:BUS:B1:UART:CONDition	
Parameter	<NR1>	Number of bytes (1 to 10).
Return parameter	<NR1>	Returns the number of bytes.
Example	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZE 5 Sets the number of bytes to 5.	

3-21-34. :SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue

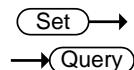


Description	Sets or queries the search triggering data value for the UART bus when the bus is set to trigger on Rx Data.
Syntax	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue {string ? }
Related commands	:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZE
Parameter	<p><string></p> <p>The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string".</p> <p>x = don't care 1 = binary 1 0 = binary 0</p>
Return Parameter	Returns the data value.
Example1	<pre>:SEARCH:TRIGger:BUS:B1:UART:CONDition RXDATA :SEARCH:TRIGger:BUS:B1:UART:RX:DATa:SIZE 1 :SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue "1x1x0101"</pre> <p>Sets the value to 1x1x0101</p>
Example 2	<pre>:SEARCH:TRIGger:BUS:B1:UART:RX:DATa:VALue? 1X1X0101</pre>

3-21-35. :SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIze

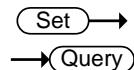


Description	Sets or queries the number of bytes for UART data.
Note	This setting only applies when the UART search trigger is set to trigger on Tx Data
Syntax	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZE {<NR1> ? }
Related commands	:SEARCH:TRIGger:BUS:B1:UART:CONDition
Parameter	<NR1> Number of bytes (1 to 10).
Return parameter	<NR1> Returns the number of bytes.
Example	<pre>:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZE 5</pre> <p>Sets the number of bytes to 5.</p>

3-21-36. :SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue

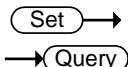


Description	Sets or queries the search triggering data value for the UART bus when the bus is set to trigger on Tx Data.
Syntax	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue {string ? }
Related commands	:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZE
Parameter	<p><string></p> <p>The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string".</p> <p>x = don't care 1 = binary 1 0 = binary 0</p>
Return Parameter	Returns the data value.
Example1	<pre>:SEARCH:TRIGger:BUS:B1:UART:CONDition TXDATA :SEARCH:TRIGger:BUS:B1:UART:TX:DATa:SIZE 1 :SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue "1x1x0101"</pre> <p>Sets the value to 1x1x0101</p>
Example 2	<pre>:SEARCH:TRIGger:BUS:B1:UART:TX:DATa:VALue? 1X1X0101</pre>

3-21-37. :SEARCH:TRIGger:BUS:B1:SPI:CONDition

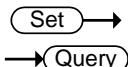


Description	Sets or queries the SPI search triggering condition.
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:CONDition {SS MISO MOSI MISOMOSI ? }
Parameter	<p>SS</p> <p>Set to trigger on the Slave Selection condition.</p> <p>MISO</p> <p>Set to trigger on the Master-In Slave-Out condition.</p> <p>MOSI</p> <p>Set to trigger on the Master-Out Slave-In condition.</p> <p>MISOMOSI</p> <p>Set to trigger on the Master-In Slave-Out and Master-Out Slave-In conditions.</p>
Return Parameter	Returns the triggering condition.
Example	<pre>:SEARCH:TRIGger:BUS:B1:SPI:CONDition MISO</pre> <p>Sets the SPI bus to trigger on MISO.</p>

3-21-38. :SEARCH:TRIGger:BUS:B1:SPI:DATA:SIZE

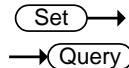

Description	Sets or queries the number of words for SPI data for the search function.
Note	This setting only applies when the SPI search trigger is set to trigger on MISO, MOSI or MISO/MOSI
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:DATA:SIZE {<NR1> ?}
Related commands	:SEARCH:TRIGger:BUS:B1:SPI:CONDition
Parameter	<NR1> Number of words (1 to 32).
Return parameter	<NR1> Returns the number of words.
Example	:SEARCH:TRIGger:BUS:B1:SPI:DATA:SIZE 10 Sets the number of words to 10.

3-21-39. :SEARCH:TRIGger:BUS:B1:SPI:DATA:MISO:VALue

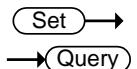


Description	Sets or queries the search triggering data value for the SPI bus when the bus is set to trigger on MISO or MISO/MOSI.
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:DATA:MISO:VALue {string ? }
Related commands	:SEARCH:TRIGger:BUS:B1:SPI:DATA:SIZE
Parameter	<string> The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.
Example1	:SEARCH:TRIGger:BUS:B1:SPI:CONDition MISO :SEARCH:TRIGger:BUS:B1:SPI:DATA:SIZE 2 :SEARCH:TRIGger:BUS:B1:SPI:DATA:MISO:VALue "1x1x0101" Sets the value to 1x1x0101
Example 2	:SEARCH:TRIGger:BUS:B1:SPI:DATA:MISO:VALue? 1X1X0101

3-21-40. :SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue


Description	Sets or queries the search triggering data value for the SPI bus when the bus is set to trigger on MOSI or MISO/MOSI.
Syntax	:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue {string ? }
Related commands	:SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZE
Parameter	<p><string></p> <p>The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes, "string".</p> <p>x = don't care</p> <p>1 = binary 1</p> <p>0 = binary 0</p>
Return Parameter	Returns the data value.
Example1	<pre>:SEARCH:TRIGger:BUS:B1:SPI:CONDition MOSI :SEARCH:TRIGger:BUS:B1:SPI:DATa:SIZE 2 :SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue "1x1x0101"</pre> <p>Sets the value to 1x1x0101</p>
Example2	<pre>:SEARCH:TRIGger:BUS:B1:SPI:DATa:MOSI:VALue? 1X1X0101</pre>

3-21-41. :SEARCH:TRIGger:BUS:B1:PARallel:VALue

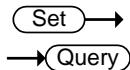


Description	Sets or queries the search triggering data value for the Parallel bus.	
Syntax	:SEARCH:TRIGger:BUS:B1:PARallel:VALue {string ? }	
Related commands	:BUS1:PARallel:WIDth	
Parameter	<string>	The number of characters in the string depends on the data size setting. The string must be enclosed in double quotes "string". x = don't care 1 = binary 1 0 = binary 0
Return Parameter	Returns the data value.	
Example1	<pre>:BUS1:PARallel:WIDth 8 :SEARCH:TRIGger:BUS:B1:PARallel:VALue "1x1x0101" Sets the value to 1x1x0101</pre>	
Example 2	<pre>:SEARCH:TRIGger:BUS:B1:PARallel:VALue? 1X1X0101</pre>	

3-21-42. :SEARCH:TRIGger:BUS:B1:CAN:CONDition

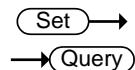


Description	Sets or returns the CAN search trigger condition. Requirements:CAN LIN Bus Decoder App..	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:CONDition {SOF FRAMEmType IDentifier DATA IDANDDATA EOF ACKMISS STUFFERR ?}	
Parameter/ Return parameter	SOF	Sets search to trigger on a start of frame
	FRAMEmType	Sets search to trigger on the type of frame
	Identifier	Sets search to trigger on a matching identifier
	DATA	Sets search to trigger on matching data
	IDANDDATA	Sets search to trigger on matching identifier and data field
	EOF	Sets search to trigger on the end of frame
	ACKMISS	Sets search to trigger on a missing acknowledge
	STUFFERR	Sets search to trigger on a bit stuffing error
Example1	:SEARCH:TRIGger:BUS:B1:CAN:CONDition SOF Triggers search on a start of frame.	
Example2	:SEARCH:TRIGger:BUS:B1:CAN:CONDition? >SOF	

3-21-43. :SEARCH:TRIGger:BUS:B1:CAN:FRAMEmType

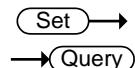


Description	Sets or returns the frame type for the CAN FRAMEmType search trigger. Requirements:CAN LIN Bus Decoder App..	
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:FRAMEmType {DATA REMote ERRor OVERLoad ?}	
Parameter/ Return parameter	DATA	Sets the frame type to data frame
	REMote	Sets the frame type to remote frame
	ERRor	Sets the frame type to error frame
	OVERLoad	Sets the frame type to overload
Example	:SEARCH:TRIGger:BUS:B1:CAN:FRAMEmType DATA Sets the frame type to DATA.	

3-21-44. :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE

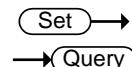

Description	Sets or returns the CAN addressing mode for the bus. Requirements:CAN LIN Bus Decoder App..
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE {STANDARD EXTended ?}
Parameter/ Return parameter	STANDARD Standard addressing mode EXTended Extended addressing mode
Example	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE? >STANDARD :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE EXTENDED :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE? >EXTENDED

3-21-45. :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue

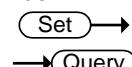

Description	Sets or returns the binary address string used for the CAN search trigger. Note: Only applicable when the search trigger condition is set to ID or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue {<string> ?}
Related Commands	:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:CAN:CONDITION ID :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:MODE STANDARD :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue "01100X1X01X" :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:VALue? >01100X1X01X

3-21-46. :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection

 Set

 Query

Description Sets or queries the address bit as read, write or don't care.

Requirements: CAN LIN Bus Decoder App..

Syntax :SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection
{READ|WRITE|NOCARE|?}


Parameter/ Return parameter

READ	Sets read as the data direction
WRITE	Sets write as the data direction
NOCARE	Sets either as the data direction

Example2


```
:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection?  
>WRITE  
:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection  
READ  
:SEARCH:TRIGger:BUS:B1:CAN:IDentifier:DIRection?>  
READ
```

3-21-47. :SEARCH:TRIGger:BUS:B1:CAN:DATA:QUALifier

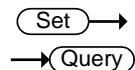


Description	Sets or returns the CAN data qualifier. Note: Only applicable when the search triggering condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..												
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:DATA:QUALifier {LESSthan THAN EQUAL UNEQual LESSEQual MOREEqual Qual?}												
Parameter/ Return parameter	<table border="1"> <tr> <td>LESSthan</td><td>Sets search to trigger when the data is less than the qualifier value.</td></tr> <tr> <td>THAN</td><td>Sets search to trigger when the data is greater than the qualifier value.</td></tr> <tr> <td>EQUAL</td><td>Sets search to trigger when the data is equal to the qualifier value.</td></tr> <tr> <td>UNEQual</td><td>Sets search to trigger when the data is not equal to the qualifier value.</td></tr> <tr> <td>LESSEQual</td><td>Sets search to trigger when the data is less than or equal to the qualifier value.</td></tr> <tr> <td>MOREEqual</td><td>Sets search to trigger when the data is more than or equal to the qualifier value.</td></tr> </table>	LESSthan	Sets search to trigger when the data is less than the qualifier value.	THAN	Sets search to trigger when the data is greater than the qualifier value.	EQUAL	Sets search to trigger when the data is equal to the qualifier value.	UNEQual	Sets search to trigger when the data is not equal to the qualifier value.	LESSEQual	Sets search to trigger when the data is less than or equal to the qualifier value.	MOREEqual	Sets search to trigger when the data is more than or equal to the qualifier value.
LESSthan	Sets search to trigger when the data is less than the qualifier value.												
THAN	Sets search to trigger when the data is greater than the qualifier value.												
EQUAL	Sets search to trigger when the data is equal to the qualifier value.												
UNEQual	Sets search to trigger when the data is not equal to the qualifier value.												
LESSEQual	Sets search to trigger when the data is less than or equal to the qualifier value.												
MOREEqual	Sets search to trigger when the data is more than or equal to the qualifier value.												
Example	<pre>:SEARCH:TRIGger:BUS:B1:CAN:DATA:QUALifier? >EQUAL :SEARCH:TRIGger:BUS:B1:CAN:DATA:QUALifier THAN :SEARCH:TRIGger:BUS:B1:CAN:DATA:QUALifier? >THAN</pre>												

3-21-48. :SEARCH:TRIGger:BUS:B1:CAN:DATA:SIZE

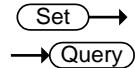


Description	Sets or returns the length of the data string in bytes for the CAN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:DATA:SIZE {<NR1> ?}
Parameter/ Return parameter	<NR1> 1~8 (bytes)
Example	<pre>:SEARCH:TRIGger:BUS:B1:CAN:DATA:SIZE? >1 :SEARCH:TRIGger:BUS:B1:CAN:DATA:SIZE 2 :SEARCH:TRIGger:BUS:B1:CAN:DATA:SIZE? >2</pre>

3-21-49. :SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue

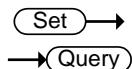


Description	Sets or returns the binary data string to be used for the CAN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Related Commands	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIze
Syntax	:SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue {<string> ?}
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:CAN:DATa:SIze 1 :SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue "01010X1X" :SEARCH:TRIGger:BUS:B1:CAN:DATa:VALue? >01010X1X

3-21-50. :SEARCH:TRIGger:BUS:B1:LIN:CONDition

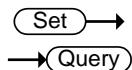


Description	Sets or returns the LIN search trigger condition. Requirements:CAN LIN Bus Decoder App..	
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:CONDition {SYNCField IDentifier DATA IDANDDATA WAKEup SLEEP ERRor ?}	
Parameter/ Return parameter	SYNCField	Sets the LIN search trigger condition to the sync field.
	IDentifier	Sets the LIN search trigger condition to identifier field.
	DATA	Sets the LIN search trigger condition to the data field.
	IDANDDATA	Sets the LIN search trigger condition to identifier and data field
	WAKEup	Sets the LIN search trigger condition to wake up.
	SLEEP	Sets the LIN search trigger condition to sleep.
	ERRor	Sets the LIN search trigger condition to error.
Example	<pre>:SEARCH:TRIGger:BUS:B1:LIN:CONDition? >IDANDDATA :SEARCH:TRIGger:BUS:B1:LIN:CONDition DATA :SEARCH:TRIGger:BUS:B1:LIN:CONDition? >DATA</pre>	

3-21-51. :SEARCH:TRIGger:BUS:B1:LIN:DATA:QUALifier

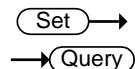

Description	Sets or returns the LIN data qualifier. Note: Only applicable when the search trigger condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..														
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:DATA:QUALifier {LESSthan THAN EQUAL UNEQual LESSEQual MOREEqual Qual?}														
Parameter/ Return parameter	<table border="0"> <tr> <td>LESSthan</td><td>Sets search to trigger when the data is less than the qualifier value.</td></tr> <tr> <td>THAN</td><td>Sets search to trigger when the data is greater than the qualifier value.</td></tr> <tr> <td>EQUAL</td><td>Sets search to trigger when the data is equal to the qualifier value.</td></tr> <tr> <td>UNEQual</td><td>Sets search to trigger when the data is not equal to the qualifier value.</td></tr> <tr> <td>LESSEQual</td><td>Sets search to trigger when the data is less than or equal to the qualifier value.</td></tr> <tr> <td>MOREEqual</td><td>Sets search to trigger when the data is more than or equal to the qualifier value.</td></tr> <tr> <td>LESSthan</td><td>Sets search to trigger when the data is less than the qualifier value.</td></tr> </table>	LESSthan	Sets search to trigger when the data is less than the qualifier value.	THAN	Sets search to trigger when the data is greater than the qualifier value.	EQUAL	Sets search to trigger when the data is equal to the qualifier value.	UNEQual	Sets search to trigger when the data is not equal to the qualifier value.	LESSEQual	Sets search to trigger when the data is less than or equal to the qualifier value.	MOREEqual	Sets search to trigger when the data is more than or equal to the qualifier value.	LESSthan	Sets search to trigger when the data is less than the qualifier value.
LESSthan	Sets search to trigger when the data is less than the qualifier value.														
THAN	Sets search to trigger when the data is greater than the qualifier value.														
EQUAL	Sets search to trigger when the data is equal to the qualifier value.														
UNEQual	Sets search to trigger when the data is not equal to the qualifier value.														
LESSEQual	Sets search to trigger when the data is less than or equal to the qualifier value.														
MOREEqual	Sets search to trigger when the data is more than or equal to the qualifier value.														
LESSthan	Sets search to trigger when the data is less than the qualifier value.														
Example	<pre>:SEARCH:TRIGger:BUS:B1:LIN:DATA:QUALifier? >EQUAL :SEARCH:TRIGger:BUS:B1:LIN:DATA:QUALifier THAN :SEARCH:TRIGger:BUS:B1:LIN:DATA:QUALifier? >THAN</pre>														

3-21-52. :SEARCH:TRIGger:BUS:B1:LIN:DATa:SIze

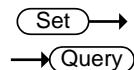


Description Sets or returns the length of the data string in bytes for the LIN search trigger.
Note: Only applicable when the condition is set to DATA or IDANDDATA.
Requirements:CAN LIN Bus Decoder App..

Syntax :SEARCH:TRIGger:BUS:B1:LIN:DATa:SIze {<NR1>|?}

Parameter/ Return parameter <NR1> 1~8 (bytes)


Example :SEARCH:TRIGger:BUS:B1:LIN:DATa:SIze?
>1
:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIze 2
:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIze?
>2

3-21-53. :SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue

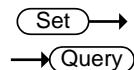

Description	Sets or returns the binary data string to be used for the LIN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements:CAN LIN Bus Decoder App..
Related Commands	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZE
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue {<string> ?}
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:LIN:DATa:SIZE 1 :SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue "01010X1X" :SEARCH:TRIGger:BUS:B1:LIN:DATa:VALue? >01010X1X

3-21-54. :SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE

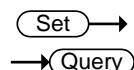

Description	Sets or returns the error type be used for the LIN search trigger. Requirements:CAN LIN Bus Decoder App..
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE {SYNC PARIty CHECKsum ?}
Parameter/ Return parameter	SYNC Sets the LIN error type to SYNC. PARIty Sets the LIN error type to parity. CHECKsum Sets the LIN error type to checksum.
Example	:SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE? >SYNC :SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE CHECKSUM :SEARCH:TRIGger:BUS:B1:LIN:ERRTYPE? >CHECKSUM

3-21-55. :SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue

Set →


→ Query

Description	Sets or returns the binary address string to be used for the LIN search trigger. Note: Only applicable when the condition is set to DATA or IDANDDATA. Requirements: CAN LIN Bus Decoder App..
Syntax	:SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue {<string>} ?{}
Parameter/ Return parameter	<string> The size of the string depends on the data size setting. The string must be enclosed in double quotes, "string". String contents: x = don't care 1 = binary 1 0 = binary 0
Example	:SEARCH:TRIGger:BUS:B1:LIN:CONDition ID :SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue "00X1X01X" :SEARCH:TRIGger:BUS:B1:LIN:IDentifier:VALue? >01100X1X01X

3-22. Digital Commands


3-22-1. :D<X>:DISPlay.....	160
3-22-2. :D<X>:POSition.....	160
3-22-3. :DISPlay:DIGital:HEight	160
3-22-4. :DIGItal:GROUP<X>:THREshold	161
3-22-5. :DIGItal:ANAlog:A<X>:DISPlay	161
3-22-6. :DIGItal:ANAlog:A<X>:RATio	162
3-22-7. :D<x>:MEMory	162
3-22-8. :D<x>:LMEMemory	163
3-22-9. :DIGItal:MEMory	164
3-22-10. :DIGItal:LMEMemory.....	164

3-22-1. :D<X>:DISPlay

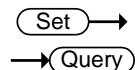


Description	Turns the selected digital channel on or off or queries its status.
Syntax	:D<X>:DISPlay { OFF ON ? }
Parameter/ Return parameter	<X> Digital channel number D(0 to 15). OFF Turns the selected digital channel off. ON Turns the selected digital channel on.
Example	:D0:DISPlay ON Turns D0 on.

3-22-2. :D<X>:POSIon

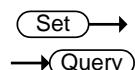


Description	Sets or returns the position of the selected digital channel.
Syntax	:D<X>:POSIon { <NRf> ? }
Parameter	<X> Digital channel number D(0 to 15). <NRf> Position
Return parameter	<NR3> Returns the position of the selected digital channel.
Example1	:D0:POSIon? -1.87 DIV
Example2	:D0:POSIon 0 Sets the position to 0 DIV.

3-22-3. :DISPLAY:DIGital:HElght

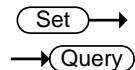


Description	Sets or queries the height of the digital channel waveforms.
Syntax	:DISPLAY:DIGital:HElght {SMAll MEDIUM LARge ?}
Parameter/ Return parameter	SMAll Sets the height to small mode. MEDIUM Sets the height to medium mode. LARge Sets the height to large mode. This mode is only available for ≤8 active channels.
Example	:DISPLAY:DIGital:HElght? LARGE

3-22-4. :DIGital:GROUP<X>:THREshold

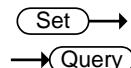


Description	Sets or returns the threshold level for the selected group for a logic analyzer function.	
Syntax	:DIGital:GROUP<X>:THREshold { ECL TTL PECL CMOS5 CMOS3 CMOS2 <NR3> ? }	
Parameter	<X>	Selects the digital group: 1: D0~D3 2: D4~D7 3: D8~D11 4: D12~D15
	ECL	ECL high level of -1.3V.
	TTL	TTL high level of 1.4V.
	PECL	PECL high level of 3.7V.
	CMOS5	5.0V CMOS (high level of 2.5V).
	CMOS3	3.3V CMOS (high level of 1.65V).
	CMOS2	2.5V CMOS (high level of 1.25V).
	<NR3>	Set to a user defined threshold level.
Return parameter	<NR3> Returns the threshold level.	
Example1	:DIGital:GROUP1:THREshold TTL Sets the threshold to TTL levels.	
Example2	:DIGital:GROUP1:THREshold? 1.400e+00	

3-22-5. :DIGital:ANAlog:A<X>:DISPlay

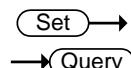

Description	Turns the selected analog waveform on/off or returns its status.	
Syntax	:DIGital:ANAlog:A<x>:DISPlay { OFF ON ? }	
Parameter	<X>	Analog waveform 1 or 2.
	OFF	Turns the selected analog waveform off.
	ON	Turns the selected analog waveform on.
Return parameter	Returns the status of the selected analog waveform (ON, OFF).	
Example	DIGital:ANAlog:A1:DISPlay on Turns on the A1 analog waveform.	

3-22-6. :DIGital:ANALog:A<X>:RATio

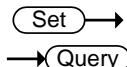

Description	Sets or returns the vertical scale of the selected analog waveform.				
Syntax	:DIGital:ANALog:A<X>:RATio {<NRf> ? }				
Parameter	<table> <tr> <td><X></td> <td>Analog waveform 1 or 2.</td> </tr> <tr> <td><NRf></td> <td>Ratio (0.1, 0.2, 0.3, 0.4.....1)</td> </tr> </table>	<X>	Analog waveform 1 or 2.	<NRf>	Ratio (0.1, 0.2, 0.3, 0.4.....1)
<X>	Analog waveform 1 or 2.				
<NRf>	Ratio (0.1, 0.2, 0.3, 0.4.....1)				
Return parameter	<NR2> Returns the scale of the selected analog waveform.				
Example1	<pre>:DIGital:ANALog:A1:RATio 0.1 Sets the analog waveform scale for A1 to 0.1.</pre>				

3-22-7. :D<x>:MEMory



Description	Returns the data in acquisition memory for the selected digital channel as a header + raw data.
Syntax	D<X>:MEMory?
Related commands	ACQuire:RECOndlength :HEADer
Parameter	<X> Digital channel D0 to D15
Return parameter	Returns the raw data + header information for the selected channel in the following format: Format,2.0A,Display,1,Memory Length,5000,IntpDistance,0,Trigger Address,2500,Threshold Used,1.400E+00,Source,D2,Vertical Units,V,Label2,;Firmware,V0.99.03,Horizontal Units,S,Horizontal Scale,5.000E-04,Horizontal Position,0.000E+00,Horizontal Mode,Main,SincET Mode,Real Time,Sampling Period,1.000E-06,Time,25- Sep-12 16:13:41,Waveform Data,#510000<Raw Data> <LF>

3-22-8. :D<x>:LMEMory

 Query

Description	Returns the data in acquisition memory for the selected digital channel as a header + raw data.
Note	The data from this command is equivalent to the data that is saved in the LM Detail format using the scope panel controls.
Syntax	D<X>:LMEMory?
Related commands	ACQuire:RECOrdlength :HEADer
Parameter	<X> Digital channel D0 to D15
Return parameter	Returns the raw data + header information for the selected channel in the following format: Format,2.0A,Display,1,Memory Length,1000000,IntpDistance,0,Trigger Address,-563219,Threshold Used,1.400E+00,Source,D2,Vertical Units,V,Label2,;Firmware,V0.99.03,Horizontal Units,S,Horizontal Scale,5.000E-04,Horizontal Position,0.000E+00,Horizontal Mode,Main,SincET Mode,Real Time,Sampling Period,5.000E-09,Time,25-Sep-12 16:34:36,Waveform Data,#72000000<Raw Data> <LF>

3-22-9. :DIGital:MEMory

→  Query

Description	Returns the data in acquisition memory for the digital channels as a header + raw data.
Syntax	:DIGital:MEMory?
Related commands	ACQuire:RECOndlength :HEADer
Return parameter	Returns the raw data + header information for the digital channels in the following format: Format,2.0A,Display,0000000000001100,Memory Length,5000,IntpDistance,0,Trigger Address,2500,Threshold12_15,1.400E+00,Threshold8_11,1.400E+00,Threshold4_7,1.400E+00,Threshold0_3,1.400E+00,Vertical Units,V,Label15,;Label14,;Label13,;Label12,;Label11,;Label10,;Label9,;Label8,;Label7,;Label6,;Label5,;Label4,;Label3,;Label2,;Label1,;Label0,;Firmware,V0.99.03,Horizontal Units,S,Horizontal Scale,5.000E-04,Horizontal Position,0.000E+00,Horizontal Mode,Main,SincET Mode,Real Time,Sampling Period,1.000E-06,Time,25-Sep-12 16:42:09,Waveform Data; #510000<Raw Data> <LF>

3-22-10. :DIGital:LMemory


→  Query

Description	Returns the data in acquisition memory for the digital channels as a header + raw data.
Note	The data from this command is equivalent to the data that is saved in the LM Detail format using the scope panel controls.
Syntax	:DIGital:LMemory?
Related commands	ACQuire:RECOndlength :HEADer
Return parameter	Returns the raw data + header information for the digital channels in the following format: Format,2.0A,Display,0000000000001100,Memory Length,1000000,IntpDistance,0,Trigger Address,-544765,Threshold12_15,1.400E+00,Threshold8_11,1.400E+00,Threshold4_7,1.400E+00,Threshold0_3,1.400E+00,Vertical Units,V,Label15,;Label14,;Label13,;Label12,;Label11,;Label10,;Label9,;Label8,;Label7,;Label6,;Label5,;Label4,;Label3,;Label2,;Label1,;Label0,;Firmware,V0.99.03,Horizontal Units,S,Horizontal Scale,5.000E-04,Horizontal Position,0.000E+00,Horizontal Mode,Main,SincET Mode,Real Time,Sampling Period,5.000E-09,Time,25-Sep-12 16:52:08,Waveform Data; #72000000<Raw Data> <LF>

3-23. Label Commands


3-23-1. :CHANnel<X>:LABEL	165
3-23-2. :CHANnel<X>:LABEL:DISPlay	166
3-23-3. :REF<X>:LABEL.....	166
3-23-4. :REF<X>:LABEL:DISPLAY	167
3-23-5. :BUS1:LABEL	167
3-23-6. :BUS1:LABEL:DISPLAY	168
3-23-7. :D<X>:LABEL	168
3-23-8. :D<X>:LABEL:DISPLAY	169
3-23-9. :DIGItal:ANAlog:A<X>:LABEL.....	169
3-23-10. :DIGItal:ANAlog:A<X>:LABEL:DISPLAY	170
3-23-11. :SET<X>:LABEL.....	170

3-23-1. :CHANnel<X>:LABEL

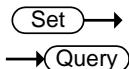


Description	Sets or returns the file label for the selected channel.	
Syntax	:CHANnel<X>:LABEL {<string> ?}	
Related commands	:CHANnel<X>:LABEL:DISPLAY	
Parameter	<X>	Channel 1, ,2, 3, 4
	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".
Return parameter	<string>	Returns the label for the selected channel. No return indicates that there has not been a file label assigned for the selected channel.
Example1	:CHANnel1:LABEL "CH1_lab" Sets the channel 1 label as "CH1_lab".	
Example2	:CHANnel1:LABEL? CH1_lab	

3-23-2. :CHANnel<X>:LABEL:DISPLAY

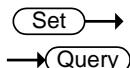


Description	Turns the label on/off for the selected channel or returns its status.
Syntax	:CHANnel<X>:LABEL:DISPLAY { OFF ON ? }
Related commands	:CHANnel<X>:LABEL
Parameter	<p><X> Channel 1, 2, 3, 4</p> <p>OFF Turns the file label off for the selected channel.</p> <p>ON Turns the file label on for the selected channel.</p>
Return parameter	Returns the status of the file label for the selected channel (ON, OFF).
Example	<pre>:CHANnel1:LABEL "CH1" :CHANnel1:LABEL:DISPLAY ON :CHANnel1:LABEL:DISPLAY? ON</pre> <p>Sets the channel 1 label to "CH1" and then turns the label display on. The query return shows that the label is on.</p>

3-23-3. :REF<X>:LABEL

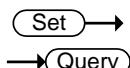


Description	Sets or returns the file label for the selected reference waveform.
Syntax	:REF<X>:LABEL {<string> ?}
Related commands	:REF<X>:LABEL:DISPLAY
Parameter	<p><X> REF 1, 2, 3, 4</p> <p><string> The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".</p>
Return parameter	<string> Returns the label for the selected reference waveform. No return indicates that there has not been a file label assigned for the selected reference waveform.
Example1	<pre>:REF1:LABEL "REF1_lab"</pre> <p>Sets the REF1 label as "REF1_lab".</p>
Example2	<pre>:REF1:LABEL? REF1_lab</pre>

3-23-4. :REF<X>:LABEL:DISPLAY

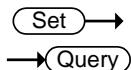


Description	Turns the label on/off for the selected reference waveform or returns its status.	
Syntax	:REF<X>:LABEL:DISPLAY { OFF ON ? }	
Related commands	:REF<X>:LABEL	
Parameter	<X> OFF ON	Reference waveform 1, 2, 3, 4 Turns the file label off for the selected reference waveform. Turns the file label on for the selected reference waveform.
Return parameter	Returns the status of the file label for the selected reference waveform (ON, OFF).	
Example	<pre>:REF1:LABEL "REF1" :REF1:LABEL:DISPLAY ON :REF1:LABEL:DISPLAY? ON</pre> <p>Sets the label for reference waveform 1 to "REF1" and then turns the label display on. The query return shows that the label is on.</p>	

3-23-5. :BUS1:LABEL

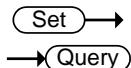


Description	Sets or returns the file label for the bus.	
Syntax	:BUS1:LABEL {<string> ?}	
Related commands	:BUS1:LABEL:DISPLAY	
Parameter	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".
Return parameter	<string>	Returns the label for the bus. No return indicates that there has not been a file label assigned for bus.
Example1	<pre>:BUS1:LABEL "Bus" Sets the bus label as "Bus".</pre>	
Example2	<pre>:BUS1:LABEL? Bus</pre>	

3-23-6. :BUS1:LABEL:DISPLAY

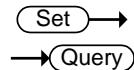


Description	Turns the label on/off for the bus or returns its status.	
Syntax	:BUS1:LABEL:DISPLAY { OFF ON ? }	
Related commands	:BUS1:LABEL	
Parameter	OFF	Turns the file label off for the bus.
	ON	Turns the file label on for the bus.
Return parameter	Returns the status of the file label for the bus (ON, OFF).	
Example	:BUS1:LABEL "Bus" :BUS1:LABEL:DISPLAY ON :BUS1:LABEL:DISPLAY? ON Sets the label for the bus to "Bus" and then turns the label display on. The query return shows that the label is on.	

3-23-7. :D<X>:LABEL

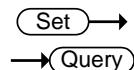


Description	Sets or returns the waveform label for the selected digital channel.	
Syntax	:D<X>:LABEL {<string> ?}	
Related commands	:D<X>:LABEL:DISPLAY	
Parameter	<X>	Digital Channel D(0 to 15)
	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".
Return parameter	<string>	Returns the label for the selected digital channel. No return indicates that there has not been a file label assigned for the selected digital channel.
Example1	:D0:LABEL "D0_lab" Sets the D0 label as "D0_lab".	
Example2	:D0:LABEL? D0_lab	

3-23-8. :D<X>:LABEL:DISPLAY

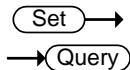


Description	Turns the label on/off for the selected digital channel or returns its status.	
Syntax	:D<X>:LABEL:DISPLAY { OFF ON ? }	
Related commands	:D<X>:LABEL	
Parameter	<X>	Digital channel D(0 to 15)
	OFF	Turns the file label off for the selected digital channel.
	ON	Turns the file label on for the selected digital channel.
Return parameter	Returns the status of the label for the selected digital channel (ON, OFF).	
Example	<pre>:D1:LABEL "D1" :D1:LABEL:DISPLAY ON :D1:LABEL:DISPLAY? ON</pre> <p>Sets the D1 label to "D1" and then turns the label display on. The query return shows that the label is on.</p>	

3-23-9. :DIGITAL:ANALOG:A<X>:LABEL

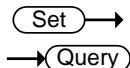


Description	Sets or returns the waveform label for the selected analog waveform (from Logic Analyzer function).	
Syntax	:DIGITAL:ANALOG:A<X>:LABEL {<string> ?}	
Related commands	:DIGITAL:ANALOG:A<X>:LABEL:DISPLAY	
Parameter	<X>	Analog waveform A(1 or 2)
	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".
Return parameter	<string>	Returns the label for the selected analog waveform. No return indicates that there has not been a file label assigned for the selected analog waveform.
Example1	<pre>:DIGITAL:ANALOG:A1:LABEL "A1_lab" Sets the label for analog waveform 1 as "A1_lab".</pre>	
Example2	<pre>:DIGITAL:ANALOG:A1:LABEL? A1_lab</pre>	

3-23-10. :DIGItal:ANALog:A<X>:LABel:DISPlay

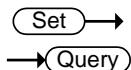

Description	Turns the label on/off for the selected analog waveform or returns its status.	
Syntax	:DIGItal:ANALog:A<X>:LABel:DISPlay { OFF ON ? }	
Related commands	:DIGItal:ANALog:A<X>:LABel	
Parameter	<X>	Analog waveform A(1 or 2)
	OFF	Turns the waveform label off for the selected analog waveform.
	ON	Turns the waveform label on for the selected analog waveform.
Return parameter	Returns the status of the waveform label for the selected analog waveform (ON, OFF).	
Example	:DIGItal:ANALog:A1:LABel "A1" :DIGItal:ANALog:A1:LABel:DISPlay ON :DIGItal:ANALog:A1:LABel:DISPlay? ON Sets the label for analog waveform 1 to "A1" and then turns the label display on. The query return shows that the label is on.	


3-23-11. :SET<X>:LABel

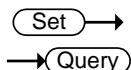

Description	Sets or returns the file label for the selected setup.	
Syntax	:SET<X>:LABel {<string> ?}	
Related commands	:SET<X>:LABel:DISPlay	
Parameter	<X>	Setup number 1 to 20
	<string>	The string must be no more than 8 characters and only contain alphanumeric characters in addition to period, dash and underscore characters. The string must be enclosed in double quotes, "string".
Return parameter	<string>	Returns the label for the selected setup. No return indicates that there has not been a file label assigned for the selected setup.
Example1	:SET1:LABel "SET1_lab" Sets the label for setup 1 as "SET1_lab".	
Example2	:SET1:LABel? SET1_lab	

3-24. Utility Commands

3-24-1. :BUZZER

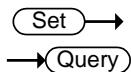


Description	Turns the buzzer on or off or queries its status.	
Syntax	:BUZZER { OFF ON ? }	
Parameter/ Return parameter	OFF	Turns the buzzer off.
	ON	Turns the buzzer on.
Example1	:BUZZER? OFF The buzzer is off.	

3-25. Segment Commands


3-25-2. :SEGMENTS:CURREnt	172
3-25-3. :SEGMENTS:TOTALnum	172
3-25-4. :SEGMENTS:TIME	172
3-25-5. :SEGMENTS:DISPALL	173
3-25-6. :SEGMENTS:MEASure:MODE	173
3-25-7. :SEGMENTS:MEASure:PLOT:SOURce	173
3-25-8. :SEGMENTS:MEASure:PLOT:DIVide	174
3-25-9. :SEGMENTS:MEASure:PLOT:SElect	174
3-25-10. :SEGMENTS:MEASure:PLOT:RESULTS	174
3-25-11. :SEGMENTS:MEASure:TABLE:SOURce	175
3-25-12. :SEGMENTS:MEASure:TABLE:SElect	175
3-25-13. :SEGMENTS:MEASure:TABLE:LIST	175
3-25-14. :SEGMENTS:MEASure:TABLE:SAVe	176
3-25-15. :SEGMENTS:SAVe	176
3-25-16. :SEGMENTS:SAVe:SOURce	176
3-25-17. :SEGMENTS:SAVe:SElect:STARt	176
3-25-18. :SEGMENTS:SAVe:SElect:END	177

3-25-1. :SEGMENTS:STATE

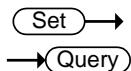


Description	Turns the segmented memory function on/off or queries its state.	
Syntax	:SEGMENTS:STATE { OFF ON ? }	
Related commands	:RUN ; :STOP	
Parameter/ Return parameter	OFF	Turns the segmented memory off.
	ON	Turns the segmented memory on.
Example1	:SEGMENTS:STATE ON Turns segmented memory on.	

3-25-2. :SEGMENTS:CURREnt

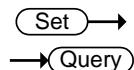

Description	Sets or queries the current segment.		
Syntax	:SEGMENTS:CURREnt {SETTOMIN SETTOMAX NR1 ?}		
Related commands	:SEGMENTS:STATE ; :SEGMENTS:TOTAlnum		
Parameter/ Return parameter	SETTOMIN	Current segment = min segment	X
	SETTOMA	Current segment = max segment	X
	<NR1>	1~2048	
Example1	:SEGMENTS:CURREnt 10	Sets the current segment to segment number 10.	

3-25-3. :SEGMENTS:TOTAlnum

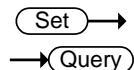


Description	Sets or queries the total number of segments for the segmented memory function.		
Syntax	:SEGMENTS:TOTAlnum {SETTOMIN SETTOMAX <NR1> ?}		
Related commands	:SEGMENTS:STATE ; :SEGMENTS:CURREnt		
Parameter/ Return parameter	SETTOMIN	Sets to the minimum number	X
	SETTOMA	Sets to the maximum number	X
	<NR1>	1~2048	
Example1	:SEGMENTS:TOTAlnum SETTOMAX	Sets the number of segments to max number (2048).	

3-25-4. :SEGMENTS:TIME




Description	Returns the time of the current segment in relation to the first segment.		
Syntax	:SEGMENTS:TIME?		
Related commands	:SEGMENTS:STATE ; :SEGMENTS:CURREnt		
Return parameter	The segment time as <NR3>.		
Example	:SEGMENTS:TIME? >8.040E-03 Returns the segment time.		

3-25-5. :SEGMENTS:DISPALL

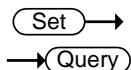


Description	Sets or queries whether all the segments are displayed on the screen.	
Syntax	:SEGMENTS:DISPALL {OFF ON ?}	
Related commands	:SEGMENTS:STATE ; :SEGMENTS:CURREnt	
Parameter/ Return parameter	OFF	Turns the display all function off.
	ON	Turns the display all function on.
Example1	:SEGMENTS:DISPALL ON	Turns the display all function on.

3-25-6. :SEGMENTS:MEASure:MODE

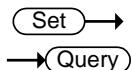


Description	Sets or queries the measurement mode.	
Syntax	:SEGMENTS:MEASure:MODE {OFF PLOT TABLE ?}	
Related commands	:MEASUREMENT:MEAS<x>	
Parameter/ Return parameter	OFF	Disables the automatic measurement function for the segments measurement.
	PLOT	Sets the measurement mode to Statistics.
	TABLE	Sets the measurement mode to a measurement list.
Example1	:SEGMENTS:MEASure:MODE?	
	>PLOT	Returns the measurement mode as Statistics.

3-25-7. :SEGMENTS:MEASure:PLOT:SOURce

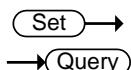


Description	Sets or queries the statistics source.	
Syntax	:SEGMENTS:MEASure:PLOT:SOURce {<NR1> ? }	
Related commands	:SEGMENTS:MEASure:MODE ; :SEGMENTS:MEASure:PLOT:DIVide ; :SEGMENTS:MEASure:PLOT:SElect ; :SEGMENTS:MEASure:PLOT:REsults	
Parameter/ Return parameter	<NR1>	1~8 (automatic measurement Item)
Example1	:SEGMENTS:MEASure:PLOT:SOURce 1	Sets the source as first automatic measurement.

3-25-8. :SEGMENTS:MEASure:PLOT:DIVide

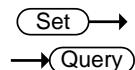

Description	Sets or queries the number of bins for the statistics function.
Syntax	:SEGMENTS:MEASure:PLOT:DIVide {<NR1> ? }
Related commands	:SEGMENTS:MEASure:PLOT:SOURce ; :SEGMENTS:MEASure:PLOT:SElect
Parameter/ Return parameter	<NR1> 1~20
Example1	:SEGMENTS:MEASure:PLOT:DIVide 5 Sets the number bins to 5 for the statistics function.

3-25-9. :SEGMENTS:MEASure:PLOT:SElect

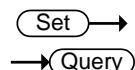


Description	Sets or queries which bin to view the statics of.
Syntax	:SEGMENTS:MEASure:PLOT:SElect {<NR1> ? }
Related commands	:SEGMENTS:MEASure:PLOT:SOURce ; :SEGMENTS:MEASure:PLOT:DIVide
Parameter	<NR1> 1~20 (cannot exceed the number of bins)
Return parameter	Return the bin number as <NR3>.
Example1	:SEGMENTS:MEASure:PLOT:SElect 5 Set to bin number 5.

3-25-10. :SEGMENTS:MEASure:PLOT:REStuls




Description	Returns the results of the currently selected bin for the statistics measurement.
Syntax	:SEGMENTS:MEASure:PLOT:REStuls?
Related commands	:SEGMENTS:MEASure:PLOT:SOURce ; :SEGMENTS:MEASure:PLOT:DIVide ; :SEGMENTS:MEASure:PLOT:SElect
Return parameter	Returns the statistics measurements as a string.
Example	:SEGMENTS:MEASure:PLOT:REStuls? > MAX:240mv,MIN:200mv,MEAN:206mv,Bin Statistics:15 of 20,Percent:0.00%,Count:0,Measured:345,Unmeasured:0,Bin Range:228~230mv

3-25-11. :SEGMENTS:MEASure:TABLE:SOURce

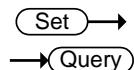

Description	Sets or queries the source of the measurement list.
Syntax	:SEGMENTS:MEASure:TABLE:SOURce {CH1 CH2 CH3 CH4 ? }
Related commands	:SEGMENTS:MEASure:MODE ; :SEGMENTS:MEASure:TABLE:SElect ; :SEGMENTS:MEASure:TABLE:LIST
Parameter/ Return parameter	CH1~CH4 Channel 1 to 4
Example1	:SEGMENTS:MEASure:TABLE:SOURce CH1 Sets the source to CH1.

3-25-12. :SEGMENTS:MEASure:TABLE:SElect

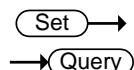

Description	Sets or queries a segment to view in the measurement table.
Syntax	:SEGMENTS:MEASure:TABLE:SElect {<NR1> ? }
Related commands	:SEGMENTS:TOTalnum
Parameter	<NR1> 1~2048
Return parameter	Returns the number of segments as <NR3>.
Example1	:SEGMENTS:MEASure:TABLE:SElect 10 Select segment number 10.

3-25-13. :SEGMENTS:MEASure:TABLE:LIST



Description	Returns the measurement results of each segment in the list.
Syntax	:SEGMENTS:MEASure:TABLE:LIST?
Return parameter	Returns the measurements results as a string for each segment.
Example	:SEGMENTS:MEASure:TABLE:LIST? >"TEXIO DCS-9700, serial number P930116, version V1.11",Segment Summary : CH1, Seg.,Pk-Pk (V),Pk-Pk (V),1,8.00m,8.00m.....etc

3-25-14. :SEGMENTS:MEASure:TABLE:SAVe

 Set →

Description	Saves the list of segment automatic measurement results.
-------------	--

Syntax	:SEGMENTS:MEASure:TABLE:SAVe
--------	------------------------------

3-25-15. :SEGMENTS:SAVe

 Set →

Description	Saves the segments.
-------------	---------------------

Syntax	:SEGMENTS:SAVe
--------	----------------

Related Commands	:SEGMENTS:SAVE:SOURce ; :SEGMENTS:SAVE:SElect: START ; :SEGMENTS:SAVE:SElect:END
------------------	---

Example	:SEGMENTS:SAVE:SOURce CH1 :SEGMENTS:SAVE:SElect:STARt 1 :SEGMENTS:SAVE:SElect:END 10 :SEGMENTS:SAVe
---------	--

3-25-16. :SEGMENTS:SAVe:SOURce

 Query →


Description	Sets or queries the source segment waveform to save.
-------------	--

Syntax	:SEGMENTS:SAVe:SOURce {CH1 CH2 CH3 CH4 ? }
--------	--

Parameter/ Return parameter	CH1~CH4 Channel 1 to 4.
--------------------------------	-------------------------

Example	:SEGMENTS:SAVe:SOURce CH1 >Sets the source to CH1.
---------	---

3-25-17. :SEGMENTS:SAVe:SElect:STARt

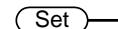 Set →

 Query →

Description	Sets or queries the starting segment to save from.
-------------	--


Syntax	:SEGMENTS:SAVe:SElect:STARt {SETTOMIN SETTOMAX <NR1> ? }
--------	---

Related commands	:SEGMENTS:TOTalnum
------------------	--------------------

Parameter/ Return parameter	SETTOMIN Sets the starting segment to min segment. SETTO Sets the starting segment to the max MAX segment. <NR1> Sets the segment to 1~2048.
--------------------------------	---

Example	:SEGMENTS:SAVe:SElect:STARt 2 Sets the starting segment to segment number 2.
---------	---

3-25-18. :SEGMENTS:SAVe:SElect:END

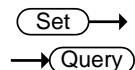


Description	Sets or queries the ending segment to save from.	
Syntax	:SEGMENTS:SAVe:SElect:END {SETTOMIN SETTOMAX <NR1> ? }	
Related commands	:SEGMENTS:TOTalnum	
Parameter/ Return parameter	<NR1>	SETTOMIN Sets the starting segment to min segment. SETTO Sets the starting segment to the max MAX segment. <NR1> Sets the segment to 1~2048.
Example	:SEGMENTS:SAVe:SElect:END 10	Sets the ending segment to segment number 10.

3-26. Function Generator Commands

Requires the DS2-FGN option.


3-26-1. :FUNCtion<x>:MODe	177
3-26-2. :FUNCtion<x>:FREQuency	178
3-26-3. :FUNCtion<x>:AMPlitude	178
3-26-4. :FUNCtion<x>:OFFSet	178
3-26-5. :FUNCtion<x>:DUTYcycle.....	179

3-26-1. :FUNCtion<x>:MODe

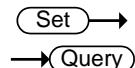


Description	Sets or queries the function generator mode.	
Syntax	:FUNCtion<x>:MODe {SINE SQUAre TRIAngle ?}	
Related commands	:FUNCtion<x>:FREQuency ; :FUNCtion<x>:AMPlitude :FUNCtion<x>:OFFSet ; :FUNCtion<x>:DUTYcycle	
Parameter/	<x>	Module 1 or 2.
Return parameter	SINE	Sets the function generator to Sine SQUAre Sets the function generator to Square TRIAngle Sets the function generator to Triangle
Example	:FUNCtion1:MODe SINE Sets the function generator mode to Sine for the function generator in module slot 1.	

3-26-2. :FUNCtion<x>:FREQuency

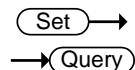


Description	Sets or queries the function generator frequency.	
Syntax	:FUNCtion<x>:FREQuency {<NRf>} {?}	
Related commands	:FUNCtion<x>:MODE	
Parameter	<x>	Module 1 or 2.
	<NRf>	The frequency of the function generator in Hz. (0.1 ~ 5000000)
Return parameter	Returns the frequency of the function generator function in <NR3> format.	
Example	:FUNCtion1:FREQuency 1000 Sets the function generator frequency to 1kHz for the function generator in module slot 1.	

3-26-3. :FUNCtion<x>:AMPLitude

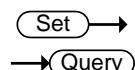

Description	Sets or queries the function generator amplitude.	
Syntax	:FUNCtion<x>:AMPLitude {<NRf>} {?}	
Related commands	:FUNCtion<x>:MODE	
Parameter / Return parameter	<x>	Module 1 or 2.
	<NRf>	The amplitude of the waveform in volts. Returns the amplitude of the function generator function in <NR3> format.
Note	When the amplitude is < 0.3V, the -20dB will be ON. the amplitude is $\geq 0.3V$, the -20dB will be OFF.	
Example	:FUNCtion1:AMPLitude 2.00 Sets the function generator amplitude to 2.00 Vpp.	

3-26-4. :FUNCtion<x>:OFFSet

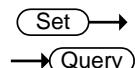

Description	Sets or queries the function generator DC offset.	
Syntax	:FUNCtion<x>:OFFSet {<NRf>} {?}	
Related commands	:FUNCtion<x>:MODE	
Parameter	<x>	Module 1 or 2.
	<NRf>	(-1 ~ +1) The offset of the waveform in volts.
Return parameter	Returns the offset of the function generator function in <NR3> format.	
Example	:FUNCtion1:OFFSet 1.00 Sets the function generator offset to 1.00 volts.	

3-26-5. :FUNCtion<x>:DUTYcycle

Set →
→ Query

Description	Sets or queries the duty cycle for the square mode waveform.				
Syntax	:FUNCtion<x>:DUTYcycle {<NRf>}?				
Related commands	:FUNCtion<x>:MODe				
Parameter	<table><tr><td><x></td><td>Module 1 or 2.</td></tr><tr><td><NRf></td><td>(5 ~ 95) The duty cycle as a percentage (5% ~ 95%)</td></tr></table>	<x>	Module 1 or 2.	<NRf>	(5 ~ 95) The duty cycle as a percentage (5% ~ 95%)
<x>	Module 1 or 2.				
<NRf>	(5 ~ 95) The duty cycle as a percentage (5% ~ 95%)				
Return parameter	Returns the offset of the function generator function in <NR3> format.				
Example	:FUNCtion1:DUTYcycle 10 Sets the function generator duty cycle to 10%.				

3-27. Go_NoGo Commands

The GoNoGo APP must first be launched (or use the command, “:GONogo:SCRipt”) before any of the Go_NoGo or Template commands can be used.


3-27-1. :GONogo:CLEar.....	179
3-27-2. :GONogo:EXECute	180
3-27-3. :GONogo:FUNCTION	180
3-27-4. :GONogo:NGCount	180
3-27-5. :GONogo:NGDefine	180
3-27-6. :GONogo:SOURCE	181
3-27-7. :GONogo:VIOLation	181
3-27-8. :GONogo:SCRipt	181
3-27-9. :TEMPplate:MODe	182
3-27-10. :TEMPplate:MAXimum	182
3-27-11. :TEMPplate:MINimum	182
3-27-12. :TEMPplate:POSITION:MAXimum	183
3-27-13. :TEMPplate:POSITION:MINimum	183
3-27-14. :TEMPplate:SAVE:MAXimum	183
3-27-15. :TEMPplate:SAVE:MINimum	183
3-27-16. :TEMPplate:TOLERance.....	183
3-27-17. :TEMPplate:SAVE:AUTO	184

3-27-1. :GONogo:CLEar

Set →

Description	Clears the Go/NoGo counter.
Syntax	:GONogo:CLEar

3-27-2. :GONogo:EXECute

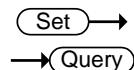

Description	Enables or disables the Go/NoGo function or queries its state.	
Syntax	:GONogo:EXECute {OFF ON ?}	
Parameter/ Return Parameter	OFF	Disabled
	ON	Enabled
Example	:GONogo:EXECute OFF Turns Go/NoGo off.	

3-27-3. :GONogo:FUNCTION




Description	Initializes the Go/NoGo APP. This must be run after the Go/NoGo APP has been started.
Syntax	:GONogo:FUNCTION

3-27-4. :GONogo:NGCount



Description	Returns the Go/NoGo counter.
Syntax	:GONogo:NGCount {?}
Return parameter	Returns a string in the following format “number of violations,total tests”
Example	:GONogo:NGCount? > 3,25 Indicates that 3 violations occurred over 25 tests.

3-27-5. :GONogo:NGDefine

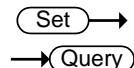

Description	Sets the Go/NoGo “When” conditions.	
Syntax	:GONogo:NGDefine {EXITs ENTers ?}	
Parameter/ Return Parameter	EXITs	Sets the NoGo condition to when the input signal exceeds the limit boundary.
	ENTers	Sets the NoGo condition to when the input signal stays within the limit boundary.
Example	:GONogo:NGDefine EXITs Sets the Go/NoGo condition to EXITs.	

3-27-6. :GONogo:SOURce

Set →
→ Query

Description	Sets the source for the Go/NoGo signal.
Syntax	:GONogo:SOURce {CH1 CH2 CH3 CH4 ?}
Parameter/ Return Parameter	CH1~CH4
Example	:GONogo:SOURce CH1 Sets the source to CH1.

3-27-7. :GONogo:VIOLation

Set →
→ Query


Description	Sets or returns actions for the Go/NoGo violations.
Syntax	:GONogo:VIOLation {STOP STOP_Beep CONTINUE CONTINUE_Beep ?}
Parameter/ Return Parameter	STOP STOP_Beep CONTINUE CONTINUE_Beep
	The waveform will be frozen. The waveform will be frozen and a beep will be output. Ignore the violation. Output a beep, but continue to monitor the signal.
Example	:GONogo:VIOLation STOP Sets violation action to STOP.

3-27-8. :GONogo:SCRipt

Set →


Description	Activates/Deactivates the Go/NoGo APP or queries its state.
Syntax	:GONogo:SCRipt {OFF ON ?}
Parameter/ Return Parameter	ON OFF
	Turns Go/NoGo APP on. Turns the Go/NoGo APP off.
Example	:GONogo:SCRipt? >ON The Go/NoGo script is on.

3-27-9. :TEMPlate:MODE

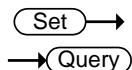


Description	Sets or returns the Go/NoGo template mode.
Syntax	:TEMPlate:MODE{MAXimum MINimum AUTO ?}
Parameter/	MAXimum Maximum template
Return Parameter	MINimum Minimum template
	AUTO Auto template
Example	:TEMPlate:MODE AUTO Sets the template mode to AUTO.

3-27-10. :TEMPlate:MAXimum

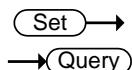


Description	Defines or queries which waveform memory (REF1 or W1~W20) is set to the maximum template.
Syntax	:TEMPlate:MAXimum{REF1 W1~W20 ?}
Parameter/	REF1 Reference one
Return Parameter	W1~W20 Waveform memory 1 to 20
Example	:TEMPlate:MAXimum REF1 Saves the maximum template to REF1.

3-27-11. :TEMPlate:MINimum

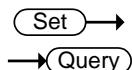


Description	Defines or queries which waveform memory (REF1 or W1~W20) is set to the minimum template.
Syntax	:TEMPlate:MINimum{REF2 W1~W20 ?}
Parameter/	REF2 Reference one
Return Parameter	W1~W20 Waveform memory 1 to 20
Example	:TEMPlate:MINimum REF2 Saves the minimum template to REF2.

3-27-12. :TEMPPlate:POSIon:MAXimum

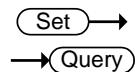

Description	Sets or queries the position of the maximum template.
Syntax	:TEMPPlate:POSIon:MAXimum{NR2 ?}
Parameter	<NR2> Desired template position (-12.0 ~ +12.0 divisions)
Return parameter	Returns the position in the following format: "<NR2>Div"
Example	:TEMPPlate:POSIon:MAXimum 3.00 Sets the maximum template position to 3.00 divisions.

3-27-13. :TEMPPlate:POSIon:MINimum

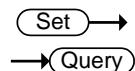

Description	Sets or queries the position of the minimum template.
Syntax	:TEMPPlate:POSIon:MAXimum{NR2 ?}
Parameter	<NR2> Desired template position (-12.0 ~ +12.0 divisions)
Return parameter	Returns the position in the following format: "<NR2>Div"
Example	:TEMPPlate:POSIon:MINimum 3.00 Sets the minimum template position to 3.00 divisions.

3-27-14. :TEMPPlate:SAVe:MAXimum




Description	Saves the maximum template.
Syntax	:TEMPPlate:SAVe:MAXimum

3-27-15. :TEMPPlate:SAVe:MINimum



Description	Saves the minimum template.
Syntax	:TEMPPlate:SAVe:MINimum

3-27-16. :TEMPPlate:TOLerance

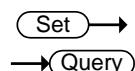

Description	Sets or queries the tolerance as a percentage.
Syntax	:TEMPPlate:TOLerance{NR2 ?}
Parameter/	<NR2> The auto tolerance range (0.4% ~ 40%)
Return Parameter	
Example	:TEMPPlate:TOLerance 10 Sets the tolerance to 10%.

3-27-17. :TEMPLe:SAVe:AUTo

 Set →

Description Saves the AUTO template (maximum and minimum templates).


Syntax :TEMPLe:SAVe:AUTo

3-28. DVM Commands

Requires the DVM app.

3-28-1. :DVM:STATE	184
3-28-2. :DVM:SOURce.....	184
3-28-3. :DVM:MODe	185

3-28-1. :DVM:STATE

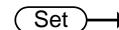 Set →

 → Query

Description Sets or queries the DVM state to on or off.

Syntax :DVM:STATE {OFF | ON | ? }

Related commands :DVM:SOURce ; :DVM:MODe

Parameter/ OFF Turns the DVM off.

Return parameter ON Turns the DVM on.

Example :DVM:STATE ON
 Turns the DVM state on.

3-28-2. :DVM:SOURce

 Set →

 → Query

Description Sets or queries the source of the DVM.

Syntax :DVM:SOURce {CH1|CH2|CH3|CH4|? }


Related commands :DVM:SOURce ; :DVM:MODe

Parameter/ CH1~CH4 Channel 1 to 4.

Return parameter

Example :DVM:SOURce CH1
 Sets the DVM source to channel 1.

3-28-3. :DVM:MODe

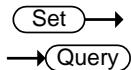


Description	Sets or queries the DVM mode.	
Syntax	:DVM:MODe {ACRMS DC DCRMS DUTY FREQuency ?}	
Related commands	:DVM:SOURce ; :DVM:STATE	
Parameter/	ACRMS	Sets the mode of the DVM to AC RMS
Return parameter	DC	Sets the mode of the DVM to DC
	DCRMS	Sets the mode of the DVM to DC RMS
	DUTY	Sets the mode of the DVM to AC Duty
	FREQuency	Sets the mode of the DVM to AC frequency
Example	:DVM:MODe DUTY	Sets the DVM mode to DUTY.

3-29. Data Logging Commands

Requires the Datalog app.


3-29-1. :DATALOG:STATE	185
3-29-2. : DATALOG:SOURce.....	186
3-29-3. : DATALOG:SAVE.....	186
3-29-4. : DATALOG:INTerval	186
3-29-5. : DATALOG:DURation	187

3-29-1. :DATALOG:STATE

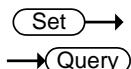


Description	Sets or queries the state of the data logging app.	
Syntax	:DATALOG:STATE{OFF ON ?}	
Related commands	:DATALOG:SOURce :DATALOG:SAVE :DATALOG:INTerval :DATALOG:DURation	
Parameter/	OFF	Turns the data logging off.
Return parameter	ON	Turns the data logging on.
Example	DATALOG:STATE ON	Turns the data logging app on.

3-29-2. : DATALOG:SOURce

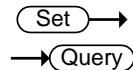


Description	Sets or queries the data logging source channel.	
Syntax	:DATALOG:SOURce {CH1~CH4 D0~D15 all ?}	
Related commands	:DATALOG:STATE :DATALOG:SAVe :DATALOG:INTerval :DATALOG:DURation	
Parameter/	CH1~CH4	Channel 1 to 4.
Return parameter	D0~D15	Digital channels D0 to D15
	all	All displayed channels.
Example	:DATALOG:SOURce CH1 Sets the source to CH1.	

3-29-3. : DATALOG:SAVe

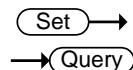


Description	Sets or queries the save format as image or waveform.	
Syntax	:DATALOG:SAVe {IMAGE WAVEform ?}	
Related commands	:DATALOG:STATE :DATALOG:SOURce :DATALOG:INTerval :DATALOG:DURation	
Parameter/	IMAGE	Save as images.
Return parameter	WAVEform	Save as waveforms.
Example	:DATALOG:SAVe WAVEform Sets the save format to waveform.	

3-29-4. : DATALOG:INTerval

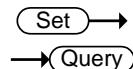

Description	Sets or queries the recording interval time in seconds.	
Syntax	:DATALOG:INTerval {<NR1> ?}	
Related commands	:DATALOG:STATE :DATALOG:SOURce :DATALOG:SAVe :DATALOG:DURation	
Parameter/	<NR1>	Sets returns the interval time in discrete seconds: 2, 3, 4, 5, 10, 20, 30, 60, 120, 300, 600, 1200
Return parameter		
Example	:DATALOG:INTerval 2 Sets the recording interval to 2 seconds.	

3-29-5. : DATALOG:DURation

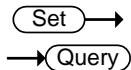

Description	Sets or queries the recording duration time in minutes.
Syntax	:DATALOG:DURation {<NR1>} ?{}
Related commands	:DATALOG:STATE :DATALOG:SOURce :DATALOG:SAVe :DATALOG:INTerval
Parameter/ Return parameter	<NR1> Sets returns the duration time in discrete minutes: 5, 10, 15, 20, 25, 30, 60, 90, 120, 150, 180, 210, 240, 270, 300, 330, 360, 390, 420, 450, 480, 510, 540, 570, 600, 1200, 1800, 2400, 3000, 3600, 4200, 4800, 5400, 6000
Example	:DATALOG:DURation 10 Sets the recording duration to 10 minutes.

4. APPENDIX

4-1. Error messages

The following error messages may be returned from the :SYSTEm:ERRor? query.

No.	Description	No.	Description
0	"No error."	-200	"Execution error"
-100	"Command error"	-201	"Invalid while in local"
-101	"Invalid character"	-202	"Settings lost due to rtl"
-102	"Syntax error"	-203	"Command protected"
-103	"Invalid separator"	-210	"Trigger error"
-104	"Data type error"	-211	"Trigger ignored"
-105	"GET not allowed"	-212	"Arm ignored"
-108	"Parameter not allowed"	-213	"Init ignored"
-109	"Missing parameter"	-214	"Trigger deadlock"
-110	"Command header error"	-215	"Arm deadlock"
-111	"Header separator error"	-220	"Parameter error"
-112	"Program mnemonic too long"	-221	"Settings conflict"
-113	"Undefined header"	-222	"Data out of range"
-114	"Header suffix out of range"	-223	"Too much data"
-115	"Unexpected number of parameters"	-224	"Illegal parameter value"
-120	"Numeric data error"	-225	"Out of memory"
-121	"Invalid character in number"	-226	"Lists not same length"
-123	"Exponent too large"	-230	"Data corrupt or stale"
-124	"Too many digits"	-231	"Data questionable"
-128	"Numeric data not allowed"	-232	"Invalid format"
-130	"Suffix error"	-233	"Invalid version"
-131	"Invalid suffix"	-240	"Hardware error"
-134	"Suffix too long"	-241	"Hardware missing"
-138	"Suffix not allowed"	-250	"Mass storage error"
-140	"Character data error"	-251	"Missing mass storage"
-141	"Invalid character data"	-252	"Missing media"
-144	"Character data too long"	-253	"Corrupt media"
-148	"Character data not allowed"	-254	"Media full"
-150	"String data error"	-255	"Directory full"
-151	"Invalid string data"	-256	"File name not found"
-158	"String data not allowed"	-257	"File name error"
-160	"Block data error"	-258	"Media protected"
-161	"Invalid block data"	-260	"Expression error"
-168	"Block data not allowed"	-261	"Math error in expression"
-170	"Expression error"	-270	"Macro error"
-171	"Invalid expression"	-271	"Macro syntax error"
-178	"Expression data not allowed"	-272	"Macro execution error"
-180	"Macro error"	-273	"Illegal macro label"
-181	"Invalid outside macro definition"	-274	"Macro parameter error"
-183	"Invalid inside macro definition"	-275	"Macro definition too long"
-184	"Macro parameter error"	-276	"Macro recursion error"

No.	Description
-277	"Macro redefinition not allowed"
-278	"Macro header not found"
-280	"Program error"
-281	"Cannot create program"
-282	"Illegal program name"
-283	"Illegal variable name"
-284	"Program currently running"
-285	"Program syntax error"
-286	"Program runtime error"
-290	"Memory use error"
-291	"Out of memory"
-292	"Referenced name does not exist"
-293	"Referenced name already exists"
-294	"Incompatible type"
-300	"Device-specific error"
-310	"System error"
-311	"Memory error"
-312	"PUD memory lost"
-313	"Calibration memory lost"
-314	"Save/recall memory lost"
-315	"Configuration memory lost"
-320	"Storage fault"
-321	"Out of memory"
-330	"Self-test failed"
-340	"Calibration failed"
-350	"Queue overflow"
-360	"Communication error"
-361	"Parity error in program message"
-362	"Framing error in program message"
-363	"Input buffer overrun"
-365	"Time out error"
-400	"Query error"
-410	"Query INTERRUPTED"
-420	"Query UNTERMINATED"
-430	"Query DEADLOCKED"
-440	"Query UNTERMINATED after indefinite response"



TEXIO TECHNOLOGY CORPORATION

7F Towa Fudosan Shin Yokohama Bldg., 2-18-13, Shin Yokohama, Kohoku-ku,
Yokohama, Kanagawa, 222-0033, Japan.

<http://www.texio.co.jp/>